## 1997 Toyota LandCruiser - Requested by: ampire.de





http://www.directechs.com

## Wiring Information

Item	Wire Color	Polarity	Wire Location
12 Volts	black - white/red	+	ignition harness
Ground	(chassis ground)		
Starter	black/white	+	ignition harness
Ignition	black/yellow	+	ignition harness
Second Ignition	black/green or black/red	+	ignition harness
Accessory	blue/red	+	ignition harness
Power Lock	blue/black	-	driver door harness in kick
Power Unlock	blue/yellow and blue/orange	both -	driver door harness in kick
Parking Lights	green	+	drivers kick
Parking Lights -	red/black	-	steering column
Headlight	red/green	-	steering column
Left Front Door Trigger	red/white	-	back of instrument cluster
Dome Light	red/blue or white	-	top of fuse box, harness from dome light
Trunk/Hatch Pin	tied with door		
Tachometer	black	ac	igniter near brake master cylinder or check connector on passenger firewall
Speed Sense	blue/white	ac	instrument cluster, 16 pin plug, pin 3 or ECM behind glove box, 22 pin plug, pin 8
Brake Wire	green/white	+	brake switch
Horn Trigger	green/blue	-	steering column
Wipers	blue/red	+	steering column
Left Front Window (Up/Down)	black - red	A	in drivers door
Right Front Window (Up/Down)	black/green - red/green	A	in drivers door or driver kick
Left Rear Window (Up/Down)	black/yellow - red/yellow	A	in drivers door or driver kick
Right Rear Window (Up/Down)	black/blue - red/blue	A	in drivers door or driver kick

## 1997 Toyota LandCruiser - Requested by: ampire.de





http://www.directechs.com

## What Fits

Item Size Depth Location				
	ltem	Size	Depth	Location