2012 Ford Transit - Requested by: ampire.de





Wiring Information

Item	Wire Color	Polarity	Wire Location
12 Volts	white/red	+	front of fuse box, brown- black 2 way signed C1
Starter	It. blue/white	+	ignition key switch, black 7 way, pos. 7
Ignition	green/red	+	front of fuse box, brown 32 way signed C2
Second Ignition	FUEL Brown Yellow	+	Black 7 way at ign Pin 1
Power Lock	blue/grey	-	front of fuse box, black 40 way signed C3, pos. 7
Power Unlock	blue & Violet Brown	-	front of fuse box, black 40 way signed C3, pos. 16 & 17
Turn Signal (Left)	yellow/violet	+	front of fuse box, grey 40 way signed C4, pos. 40
Turn Signal (Right)	grey/orange	+	front of fuse box, grey 40 way signed C4, pos. 30
Left Front Door Trigger	White/Blue	-	White plug centre of BCM (2nd row)
Trunk/Hatch Pin	Yellow/Grey	-	White plug centre of BCM (3rd row)
Trunk/Hatch Release	violet/brown	-	front of fuse box, black 40 way signed C3, pos. 17
Fuel Pump	brown/yellow	+	
Left Front Window (Up/Down)	black		
Right Front Window (Up/Down)	green/orange		

2012 Ford Transit - Requested by: ampire.de





http://www.directechs.com

What Fits

Item	Size	Depth	Location
------	------	-------	----------

2012 Ford Transit - Requested by: ampire.de





Additional Wiring Notes

Item	Note	
12 Volts	The fuse box is placed at the back of the passenger side glove box.	
Ignition	The fuse box is placed at the back of the passenger side glove box.	
Power Lock	The fuse box is placed at the back of the passenger side glove box.	
Power Unlock	The fuse box is placed at the back of the passenger side glove box.	
	Double unlock must be activated on alarm menu, And connect Violet brown & Blue via diodes for one press unlock for front and back,	
Right Front Window (Up/Down)	Visible at the back of the glove box right side.	
Trunk/Hatch Pin	Near the passenger side door core hitch.	
Trunk/Hatch Release	The fuse box is placed at the back of the passenger side glove box.	
Turn Signal (Left)	The fuse box is placed at the back of the passenger side glove box.	
Turn Signal (Right)	The fuse box is placed at the back of the passenger side glove box.	