



Wiring Information

| Item | Wire Color | Polarity | Wire Location |
|----------------------------|---|----------|---|
| 12 Volts | red/blue | + | ignition harness |
| Second 12 Volts | red/green | + | ignition harness |
| Ground | (chassis ground) | | |
| Starter | black/blue | + | ignition harness |
| Ignition | green | + | ignition harness |
| Second Ignition | violet | + | ignition harness |
| Power Lock | blue/red | - | General Module behind glove box, middle 54 pin plug, pin 22 |
| Power Unlock | white/black | double - | General Module behind glove box, middle 54 pin plug, pin 20 |
| Lock Motor | white (any one of 5) | 5 wire | General Module behind glove box, middle 54 pin plug |
| Driver Unlock Motor | blue | 5 wire | General Module behind glove box, middle 54 pin plug, pin 35 |
| Passenger Unlock Motor | (chassis ground) | | |
| Factory Alarm Arm | arms with lock | | |
| Factory Alarm Disarm | disarms with unlock | | |
| Parking Lights - | see Tech Doc 1055 | | |
| Hazards | brown/blue | - | hazard switch or Light Switch Module, 54 pin plug, pin 24 |
| Left Front Door Trigger | red/blue | + | General Module behind glove box, middle 54 pin plug, pin 18 |
| Dome Light | comes on with unlock | | |
| Trunk/Hatch Pin | white/brown | - | driver kick panel |
| Hood Pin | violet/green | - | General Module behind glove box, left 26 pin plug, pin 7 |
| Trunk/Hatch Release | gray/green | + | General Module behind glove box, middle 54 pin plug, pin 17 |
| Tachometer | black | ac | diagnostic plug in passenger rear of engine compartment |
| Speed Sense | yellow/green | ac | instrument cluster |
| Brake Wire | brown/gray or brown/white (functions with ignition on only) | + | brake pedal switch |





| Item | Wire Color | Polarity | Wire Location |
|-----------------------------|-------------------------|----------|---|
| Horn Trigger | violet/blue | + | horn relay above General module, green relay to right of orange relay |
| Left Front Window (Up/Down) | use power lock/unlock | | |
| Sun Roof (Open/Close) | use power lock/unlock | | |
| Radio 12V | red/green | + | radio |
| Radio Ground | brown | - | radio |
| Radio Ignition | violet/white | + | radio |
| Radio Illumination | gray/red | + | radio |
| Left Front Speaker (+/-) | blue/white - blue/brown | +,- | radio |
| Right Front Speaker (+/-) | blue/red - blue/brown | +,- | radio |
| Left Rear Speaker (+/-) | yellow - brown | +,- | radio |
| Right Rear Speaker (+/-) | blue - brown | +,- | radio |





What Fits

| Item | Size | Depth | Location |
|------|------|-------|----------|
|------|------|-------|----------|





Additional Wiring Notes

| Item | Note |
|------------------|---|
| Parking Lights - | Need to remove the light switch module from the dash and pop off the front cover. A ribbon cable which connects the switch to the module will be exposed. With the switch facing towards you, you need to interrupt the fourth wire from the left with a relay. When interrupted the parking lights will come on. |