

## 1991 Aston Martin Virage



### Wiring Information

Item	Wire Color	Polarity	Wire Location
<b>12 Volts</b>			
<b>Second 12 Volts</b>			
<b>Starter</b>	green/black (x2)		ignition harness
<b>Second Starter</b>			
<b>Ignition</b>	brown/yellow		ignition harness
<b>Second Ignition</b>			
<b>Third Ignition</b>			
<b>Accessory</b>	brn/yel (cold crank)		ignition harness
<b>Second Accessory</b>			
<b>Third Accessory</b>			
<b>Key Sense</b>			
<b>Data Bus</b>			
<b>Can Bus High</b>			
<b>Can Bus Low</b>			
<b>Can Bus Sw</b>			
<b>Power Lock</b>	blue/green	-	driver kick panel at relays
<b>Power Unlock</b>	blue/purple	-	driver kick panel at relays
<b>Lock Motor</b>			
<b>Unlock Motor</b>			
<b>Disarm Defeat</b>			
<b>Parking Lights (+)</b>	red		back of fuse box
<b>Parking Lights (-)</b>			
<b>Hazards</b>			
<b>Turn Signal (Left)</b>			
<b>Turn Signal (Right)</b>			

*Wiring Information (Continued)*

Item	Wire Color	Polarity	Wire Location
Headlight	blue/white	+	back of fuse box
AutoLights			
Reverse Light			
Left Front Door Trigger	brown/black	-	driver kick panel
Right Front Door Trigger			
Left Rear Door Trigger			
Right Rear Door Trigger			
Dome Supervision			
Trunk/Hatch Pin	white	-	at trunk pin switch
Rear Glass Pin			
Hood Pin	red		under pass. side fuse box
Trunk Hatch/Release	brown/yellow	+	switch in console
Trunk Release Motor			
Fuel Door Release			
Power Sliding Door (Left)			
Power Sliding Door (Right)			
Factory Alarm Arm			
Factory Alarm Disarm			
Disarm No Unlock			
Trunk Alarm Shunt			
Tachometer			
Wait to Start			
Neutral Safety			
Clutch Pedal			
Fuel Pump			
Rear Defroster			
Mirror Defroster			
Left Front Heated Seat			
Right Front Heated Seat			

Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
Speed Sense			
Brake Wire			
Parking Brake			
Horn Trigger			
Wipers			
Left Front Window (Up/Down)			
Right Front Window (Up/Down)			
Left Rear Window (Up/Down)			
Right Rear Window (Up/Down)			
Sun Roof (Open/Close)			
Sun Roof (Limit/Close)			
Memory Seat 1			
Memory Seat 2			
Memory Seat 3			
Radio 12V			
Radio Ground			
Radio Ignition			
Radio Illumination			
Factory Amp Turn-on			
Power Antenna			
Left Front Speaker (+/-)			
Right Front Speaker (+/-)			
Left Rear Speaker (+/-)			
Right Rear Speaker (+/-)			
Center Channel (+/-)			
Subwoofer (+/-)			
Aux. Audio Input Left (+/-)			
Aux. Audio Input Right (+/-)			
RSE Video (+/-)			
RSE Audio Left (+/-)			
RSE Audio Right (+/-)			
Satellite Radio 12 Volts			
Satellite Radio Ground			
Satellite Radio Ignition			
Satellite Radio Antenna			
Satellite Audio Left (+/-)			
Satellite Audio Right (+/-)			

*What Fits*


---

Item	Size	Depth	Location
<b>Headunit</b>			
<b>Left Front Speaker</b>			
<b>Left Front Tweeter</b>			
<b>Right Front Speaker</b>			
<b>Right Front Tweeter</b>			
<b>Left Rear Speaker</b>			
<b>Left Rear Tweeter</b>			
<b>Right Rear Speaker</b>			
<b>Right Rear Tweeter</b>			
<b>Center Channel</b>			
<b>Subwoofer</b>			
<b>Left Front Headrest</b>			
<b>Right Front Headrest</b>			
<b>Left Right Headrest</b>			
<b>Right Rear Headrest</b>			
<b>Satellite Radio Tuner</b>			

*Additional Wiring Notes*

---

Item	Note
<b>Headlight</b>	Fuse positions #5 and #6. Must diode isolate.
<b>Parking Lights (+)</b>	Fuse positions #1 and #2. Must diode isolate.