



There is no exterior photo for this vehicle.



Wiring Information

Item	Wire Color	Polarity	Wire Location
12 Volts			
Second 12 Volts			
Starter	red/black		ignition harness
Second Starter			
Ignition	black		ignition harness
Second Ignition			
Third Ignition			
Accessory	black/yellow		ignition harness
Second Accessory	thin red/blue		ignition harness
Third Accessory			
Key Sense			
Data Bus			
Can Bus High			
Can Bus Low			
Can Bus Sw			
Power Lock	brown/yellow	-	black plug at pump in boot
Power Unlock	brown/red	-	black plug at pump in boot
Lock Motor			
Unlock Motor			
Disarm Defeat			
Parking Lights (+)	blk/grn & blk/wht		at the steering column
Parking Lights (-)			
Hazards			
Turn Signal (Left)			
Turn Signal (Right)			

Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
Headlight	thick yellow	+	light switch
AutoLights			
Reverse Light			
Left Front Door Trigger	brn/vio or grn/blu	-	underdash light
Right Front Door Trigger			
Left Rear Door Trigger			
Right Rear Door Trigger			
Dome Supervision			
Trunk/Hatch Pin	brown/blue		boot light
Rear Glass Pin			
Hood Pin			
Trunk Hatch/Release			
Trunk Release Motor			
Fuel Door Release			
Power Sliding Door (Left)			
Power Sliding Door (Right)			
Factory Alarm Arm			
Factory Alarm Disarm	brown/green		driver kick panel
Disarm No Unlock			
Trunk Alarm Shunt			
Tachometer	grn/blu or yellow		ignition coil module
Wait to Start			
Neutral Safety			
Clutch Pedal			
Fuel Pump			
Rear Defroster			
Mirror Defroster			
Left Front Heated Seat			
Right Front Heated Seat			

Wiring Information (Continued)


Item	Wire Color	Polarity	Wire Location
Speed Sense			
Brake Wire	red/black		brake pedal switch
Parking Brake			·
Horn Trigger			
Wipers			
Left Front Window (Up/Down)	total close - open		
Right Front Window (Up/Down)	total close - open		
Left Rear Window (Up/Down)			
Right Rear Window (Up/Down)			
Sun Roof (Open/Close)			
Sun Roof (Limit/Close)			
Memory Seat 1			
Memory Seat 2			
Memory Seat 3			
Radio 12V			
Radio Ground			
Radio Ignition			
Radio Illumination			
Factory Amp Turn-on			
Power Antenna			
Left Front Speaker (+/-)			
Right Front Speaker (+/-)			
Left Rear Speaker (+/-)			
Right Rear Speaker (+/-)			
Center Channel (+/-)			
Subwoofer (+/-)			
Aux. Audio Input Left (+/-)			
Aux. Audio Input Right (+/-)			
RSE Video (+/-)			
RSE Audio Left (+/-)			
RSE Audio Right (+/-)			
Satellite Radio 12 Volts			
Satellite Radio Ground			
Satellite Radio Ignition			
Satellite Radio Antenna			
Satellite Audio Left (+/-)			
Satellite Audio Right (+/-)			

DirectWire Vehicle Information - 2/22/2011 2:08:28 AM

What Fits

Item	Size	Depth	Location
Headunit			
Left Front Speaker			
Left Front Tweeter			
Right Front Speaker			
Right Front Tweeter			
Left Rear Speaker			
Left Rear Tweeter			
Right Rear Speaker			
Right Rear Tweeter			
Center Channel			
Subwoofer			
Left Front Headrest			
Right Front Headrest			
Left Right Headrest			
Right Rear Headrest			
Satellite Radio Tuner			

Smart Starter Kill Relay

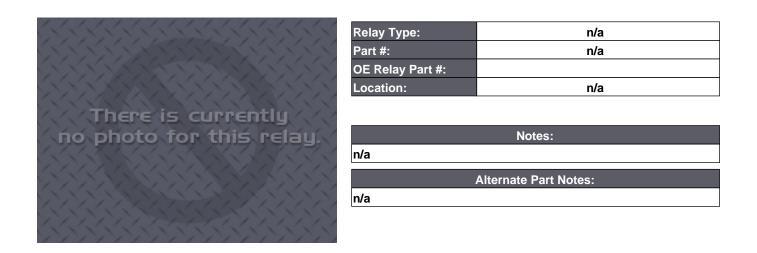

DirectWire Vehicle Information - 2/22/2011 2:08:28 AM

Additional Wiring Notes

Item	Note
Headlight	Cut the wire and relay isolate the positive trigger from the switch.
Trunk Hatch/Release	Memory seats - mem1/white/black - mem2/black. Found in loom to door.