

2007 Chevrolet Captiva

Wiring Information

Item	Wire Color	Polarity	Wire Location
12 Volts	Red/White	+	At BCM Black Connector Pin 1,2,3,4
Second 12 Volts			
Starter	White, See Diagram	Resistor	At BCM Green Connector Pin 2.
Second Starter			
Ignition	Pink	+	At BCM Green Connector Pin 14
Second Ignition			
Third Ignition			
Accessory	Brown	+	At BCM Green Connector Pin 21
Second Accessory			
Third Accessory			
Key Sense			
Data Bus			
Can Bus High			
Can Bus Low			
Can Bus Sw			
Power Lock	Pink/Black	-	At BCM Gray Connector Pin 12
Power Unlock	Orange/Black	-	At BCM Gray Connector Pin 11
Lock Motor			
Unlock Motor	Yellow	-	At BCM Gray Connector Pin 6
Disarm Defeat			
Parking Lights (+)			
Parking Lights (-)	Brown/White	-	At BCM White Connector Pin 8
Hazards			
Turn Signal (Left)			
Turn Signal (Right)			

Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
Headlight	Tan/White	-	At BCM Black Connector Pin 16
AutoLights	Dk.Green	-	At BCM White Connector Pin 17
Reverse Light	Lt.Green	+	At BCM Pink Connector Pin 2
Left Front Door Trigger	Gray/Black	-	At BCM Pink Connector Pin 10
Right Front Door Trigger	Tan/White	-	At BCM Pink Connector Pin 8
Left Rear Door Trigger	Tan/White	-	At BCM Pink Connector Pin 8
Right Rear Door Trigger	Tan/White	-	At BCM Pink Connector Pin 8
Dome Supervision			
Trunk/Hatch Pin	Pink/Black	-	At BCM Pink Connector Pin 12
Rear Glass Pin			
Hood Pin	Pink/Black	-	At BCM Black Connector Pin 17
Trunk Hatch/Release			
Trunk Release Motor			
Fuel Door Release			
Power Sliding Door (Left)			
Power Sliding Door (Right)			
Factory Alarm Arm	Accessory + Transponder		
Factory Alarm Disarm	Rearm Type 1		
Disarm No Unlock			
Trunk Alarm Shunt			
Tachometer	Brown/White	1 Cyl.	At PCM In Engine Compartment
Wait to Start			
Neutral Safety			
Clutch Pedal			
Fuel Pump			
Rear Defroster	White	8 Min.Neg.	Blue Connector At Back Of A/C Control Switch
Mirror Defroster			
Left Front Heated Seat			
Right Front Heated Seat			

Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
Speed Sense			
Brake Wire	White	+	At BCM Brown Connector Pin 6
Parking Brake	Orange/Black	-	At BCM Brown Connector Pin 17
Horn Trigger	Tan	-	At BCM Brown Connector Pin 18
Wipers			
Left Front Window (Up/Down)			
Right Front Window (Up/Down)			
Left Rear Window (Up/Down)			
Right Rear Window (Up/Down)			
Sun Roof (Open/Close)			
Sun Roof (Limit/Close)			
Memory Seat 1			
Memory Seat 2			
Memory Seat 3			
Radio 12V			
Radio Ground			
Radio Ignition			
Radio Illumination			
Factory Amp Turn-on			
Power Antenna			
Left Front Speaker (+/-)			
Right Front Speaker (+/-)			
Left Rear Speaker (+/-)			
Right Rear Speaker (+/-)			
Center Channel (+/-)			
Subwoofer (+/-)			
Aux. Audio Input Left (+/-)			
Aux. Audio Input Right (+/-)			
RSE Video (+/-)			
RSE Audio Left (+/-)			
RSE Audio Right (+/-)			
Satellite Radio 12 Volts			
Satellite Radio Ground			
Satellite Radio Ignition			
Satellite Radio Antenna			
Satellite Audio Left (+/-)			
Satellite Audio Right (+/-)			

What Fits

Item	Size	Depth	Location
Headunit			
Left Front Speaker			
Left Front Tweeter			
Right Front Speaker			
Right Front Tweeter			
Left Rear Speaker			
Left Rear Tweeter			
Right Rear Speaker			
Right Rear Tweeter			
Center Channel			
Subwoofer			
Left Front Headrest			
Right Front Headrest			
Left Right Headrest			
Right Rear Headrest			
Satellite Radio Tuner			

Additional Wiring Notes

Item	Note
12 Volts	The Body Control Module located in the center console under the radio.
Starter	There is no starter wire on this car, see diagram for installation.
Starter	The Body Control Module located in the center console under the radio.
Ignition	The Body Control Module located in the center console under the radio.
Accessory	The Body Control Module located in the center console under the radio.
Power Lock	The Body Control Module located in the center console under the radio.
Power Unlock	The Body Control Module located in the center console under the radio.
Driver Unlock Motor	If you do driver's door priority, use the Lt.Blue to unlock all other doors except driver's door in second unlock, at BCM Gray connector pin 9
Driver Unlock Motor	The Body Control Module located in the center console under the radio.
Parking Lights (-)	The Body Control Module located in the center console under the radio.
Left Front Door Trigger	The Body Control Module located in the center console under the radio.
Trunk/Hatch Pin	The Body Control Module located in the center console under the radio.
Hood Pin	The Body Control Module located in the center console under the radio.
Brake Wire	With ignition key On.
Brake Wire	The Body Control Module located in the center console under the radio.
Parking Brake	The Body Control Module located in the center console under the radio.
Horn Trigger	The Body Control Module located in the center console under the radio.
Right Front Door Trigger	The Body Control Module located in the center console under the radio.
Left Rear Door Trigger	The Body Control Module located in the center console under the radio.
Right Rear Door Trigger	The Body Control Module located in the center console under the radio.