

## 1995 Chevrolet Van



### Wiring Information

Item	Wire Color	Polarity	Wire Location
12 Volts	red	+	ignition harness
Second 12 Volts			
Starter	purple	+	ignition harness
Second Starter			
Ignition	pink	+	ignition harness
Second Ignition			
Third Ignition			
Accessory	orange	+	ignition harness
Second Accessory			
Third Accessory			
Key Sense			
Data Bus			
Can Bus High			
Can Bus Low			
Can Bus Sw			
Power Lock	lt. blue	+	door boot or behind cluster
Power Unlock	black	+	door boot or behind cluster
Lock Motor			
Unlock Motor			
Disarm Defeat			
Parking Lights (+)	brown		light switch
Parking Lights (-)			
Hazards			
Turn Signal (Left)			
Turn Signal (Right)			

*Wiring Information (Continued)*

Item	Wire Color	Polarity	Wire Location
Headlight	yellow	+	light switch
AutoLights			
Reverse Light			
Left Front Door Trigger	white	-	pinswitch or
Right Front Door Trigger			
Left Rear Door Trigger			
Right Rear Door Trigger			
Dome Supervision			
Trunk/Hatch Pin	tied in with doors		
Rear Glass Pin			
Hood Pin			
Trunk Hatch/Release			
Trunk Release Motor			
Fuel Door Release			
Power Sliding Door (Left)			
Power Sliding Door (Right)			
Factory Alarm Arm			
Factory Alarm Disarm			
Disarm No Unlock			
Trunk Alarm Shunt			
Tachometer	white	ac	coil on top of motor
Wait to Start			
Neutral Safety			
Clutch Pedal			
Fuel Pump			
Rear Defroster			
Mirror Defroster			
Left Front Heated Seat			
Right Front Heated Seat			

Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
Speed Sense			
Brake Wire	white	+	at brake switch
Parking Brake			
Horn Trigger	black	-	steering column
Wipers	purple	+	wiper switch
Left Front Window (Up/Down)	dk. blu - brown	A	in drivers door
Right Front Window (Up/Down)	blue - wht/tan	A	in drivers door
Left Rear Window (Up/Down)			
Right Rear Window (Up/Down)			
Sun Roof (Open/Close)			
Sun Roof (Limit/Close)			
Memory Seat 1			
Memory Seat 2			
Memory Seat 3			
Radio 12V			
Radio Ground			
Radio Ignition			
Radio Illumination			
Factory Amp Turn-on			
Power Antenna			
Left Front Speaker (+/-)			
Right Front Speaker (+/-)			
Left Rear Speaker (+/-)			
Right Rear Speaker (+/-)			
Center Channel (+/-)			
Subwoofer (+/-)			
Aux. Audio Input Left (+/-)			
Aux. Audio Input Right (+/-)			
RSE Video (+/-)			
RSE Audio Left (+/-)			
RSE Audio Right (+/-)			
Satellite Radio 12 Volts			
Satellite Radio Ground			
Satellite Radio Ignition			
Satellite Radio Antenna			
Satellite Audio Left (+/-)			
Satellite Audio Right (+/-)			

*What Fits*


---

Item	Size	Depth	Location
<b>Headunit</b>			
<b>Left Front Speaker</b>			
<b>Left Front Tweeter</b>			
<b>Right Front Speaker</b>			
<b>Right Front Tweeter</b>			
<b>Left Rear Speaker</b>			
<b>Left Rear Tweeter</b>			
<b>Right Rear Speaker</b>			
<b>Right Rear Tweeter</b>			
<b>Center Channel</b>			
<b>Subwoofer</b>			
<b>Left Front Headrest</b>			
<b>Right Front Headrest</b>			
<b>Left Right Headrest</b>			
<b>Right Rear Headrest</b>			
<b>Satellite Radio Tuner</b>			

*Additional Wiring Notes*

---

Item	Note
<b>12 Volts</b>	The ignition harness is on top of the steering column. It is easier to access by removing the instrument cluster and removing the two 15mm bolts that hold the steering column.
<b>Accessory</b>	The ignition harness is on top of the steering column. It is easier to access by removing the instrument cluster and removing the two 15mm bolts that hold the steering column.
<b>Left Front Door Trigger</b>	Also found behind instrument cluster.
<b>Ignition</b>	The ignition harness is on top of the steering column. It is easier to access by removing the instrument cluster and removing the two 15mm bolts that hold the steering column.
<b>Starter</b>	The ignition harness is on top of the steering column. It is easier to access by removing the instrument cluster and removing the two 15mm bolts that hold the steering column.