

## 2012 Ford Fiesta



## Wiring Information

Item	Wire Color	Polarity	Wire Location
<b>12 Volts</b>	red (15A)	+	ignition switch, black 7 pin plug, pin 4
<b>Second 12 Volts</b>	red or yellow/red (30A), brown/red (30A)	+	BCM, blue 16 pin plug (A), pins 1 and 8
<b>Starter</b>	blue/white (without Intelligent Access)	+	ignition switch, black 7 pin plug, pin 7
<b>Second Starter</b>	brn/pur (SS1), yel/org (SS2) (Intelligent Access)	-	start/stop switch or RFA Module, brown 23 pin plug, pins 22 and 23
<b>Ignition</b>	brown/yellow	+	ignition switch, black 7 pin plug, pin 1
<b>Second Ignition</b>	N/A		
<b>Third Ignition</b>	N/A		
<b>Accessory</b>	purple/green	+	ignition switch, black 7 pin plug, pin 6
<b>Second Accessory</b>	N/A		
<b>Third Accessory</b>	N/A		
<b>Key Sense</b>	blue/gray (without Intelligent Access)	-	ignition key switch or BCM, gray 24 pin plug (G), pin 9
<b>Data Bus</b>	yellow/orange (TX), purple/gray (RX)	data	PATS Transceiver, black 4 pin plug, pins 3 and 4
<b>Can Bus High</b>	gray/orange (MS CAN), white/blue (HS CAN)	data	data link connector, black 16 pin plug, pin 3 and 6
<b>Can Bus Low</b>	purple/orange (MS CAN), white (HS CAN)	data	data link connector, black 16 pin plug, pin 11 and 14
<b>Can Bus Sw</b>	N/A		
<b>Power Lock</b>	see factory alarm arm		
<b>Power Unlock</b>	see factory alarm disarm		
<b>Lock Motor</b>	gray/brown	5 wire	driver kick or BCM, gray 16 pin plug (C), pin 2
<b>Unlock Motor</b>	blue/green	5 wire	driver kick or BCM, gray 16 pin plug (C), pin 7
<b>Disarm Defeat</b>	brown/green	5 wire	driver kick or BCM, gray 16 pin plug (C), pin 3
<b>Parking Lights (+)</b>	grn/org (LF), brn/yel (RF); pu/gn (LR), wh/og (RR)	+	BCM, blu 24 pin plug (D), pins 24, 23; gry 24 pin plug (G), pins 13, 1
<b>Parking Lights (-)</b>	yellow/blue	-	headlight switch or BCM, green 24 pin plug (E), pin 9
<b>Hazards</b>	brown/yellow	-	hazard switch or BCM, white 24 pin plug (F), pin 4
<b>Turn Signal (Left)</b>	blue/green (F); gray/orange (R)	+	BCM, blue 16 pin plug (A), pin 5; gray 16 pin plug (C), pin 12
<b>Turn Signal (Right)</b>	yellow/purple (F); green/orange (R)	+	BCM, blue 16 pin plug (A), pin 6; gray 16 pin plug (C), pin 13

## Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
<b>Headlight</b>	blue/white	-	headlight switch or BCM, green 24 pin plug (E), pin 13
<b>AutoLights</b>	N/A		
<b>Reverse Light</b>	blue	+	driver kick or BCM, blue 24 pin plug (D), pin 2
<b>Left Front Door Trigger</b>	green/purple	- N.C.	driver kick or BCM, gray 24 pin plug (G), pin 10
<b>Right Front Door Trigger</b>	white	- N.C.	passenger kick or BCM, gray 24 pin plug (G), pin 22
<b>Left Rear Door Trigger</b>	green	- N.C.	driver kick or BCM, gray 24 pin plug (G), pin 4
<b>Right Rear Door Trigger</b>	yellow	- N.C.	passenger kick or BCM, gray 24 pin plug (G), pin 3
<b>Dome Supervision</b>	yellow/gray	-	driver A pillar or BCM, gray 16 pin plug (C), pin 5
<b>Trunk/Hatch Pin</b>	yellow/orange	- N.C.	driver kick or BCM, gray 24 pin plug (G), pin 7
<b>Rear Glass Pin</b>	N/A		
<b>Hood Pin</b>	blue/orange	- N.C.	hood switch or BCM, blue 24 pin plug (D), pin 12
<b>Trunk Hatch/Release</b>	green/white (rear handle switch)	-	driver kick or BCM, gray 24 pin plug (G), pin 20
<b>Trunk Release Motor</b>	blue/orange	5 wire	driver kick or BCM, gray 16 pin plug (C), pin 15
<b>Fuel Door Release</b>	N/A		
<b>Power Sliding Door (Left)</b>	N/A		
<b>Power Sliding Door (Right)</b>	N/A		
<b>Factory Alarm Arm</b>	yel/gry (key lock) and blu/brn(lock/unlock detect)	- and open	driver kick or BCM, gray 24 pin plug (G), pins 6 and 5
<b>Factory Alarm Disarm</b>	pur/brn (key unlock) and blu/brn(lck/unlck detect)	both -	driver kick or BCM, gray 24 pin plug (G), pins 19 and 5
<b>Disarm No Unlock</b>	Transponder and ignition		
<b>Trunk Alarm Shunt</b>	N/A		
<b>Tachometer</b>	yellow/blue, blue/orange, green/purple, or blue	ac	any fuel injector, gray 2 pin plug, pin 2
<b>Wait to Start</b>	N/A		
<b>Neutral Safety</b>	N/A		
<b>Clutch Pedal</b>	black/green (input), blue/orange (output)	- N.O.	clutch switch, 2 pin plug, pins 2 and 1
<b>Fuel Pump</b>	purple/green	+	driver kick, harness to rear
<b>Rear Defroster</b>	blue/gray	-	defroster switch or BCM, green 24 pin plug (E), pin 10
<b>Mirror Defroster</b>	same as rear defroster		
<b>Left Front Heated Seat</b>	brown	-	driver heated seat switch or BCM, gray 24 pin plug (G), pin 8
<b>Right Front Heated Seat</b>	gray/yellow	-	passenger heated seat switch or BCM, gray 24 pin plug (G), pin 21

## Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
Speed Sense	yellow/blue (M/T)	ac	Powertrain Control Module, top, black 32 pin plug, pin 4
Brake Wire	blue/gray	+	brake switch, gray 2 pin plug, pin 2 or driver kick, harness to rear
Parking Brake	white/purple	-	parking brake switch, black 1 pin plug, pin 1
Horn Trigger	brown	-	horn switch or BCM, green 24 pin plug (E), pin 21
Wipers	blue/green	-	wiper switch or BCM, white 24 pin plug (F), pin 3
Left Front Window (Up/Down)	blue/gray - yellow/purple	A	master window control switch, gray 8 pin plug, pins 3 and 5
Right Front Window (Up/Down)	brown/yellow - green/orange	A	driver kick, door harness
Left Rear Window (Up/Down)	blue/orange - yellow	A	driver kick, door harness
Right Rear Window (Up/Down)	gray/purple - brown/green	A	driver kick, door harness
Sun Roof (Open/Close)	pur/brn - yel/org (function with ignition on only)	+	sunroof switch, 6 pin plug, pins 4 and 5
Sun Roof (Limit/Close)	N/A		
Memory Seat 1	N/A		
Memory Seat 2	N/A		
Memory Seat 3	N/A		
Radio 12V	yellow/red	+	radio, gray 24 pin plug, pin 1
Radio Ground	black/blue	-	radio, gray 24 pin plug, pin 13
Radio Ignition	(MS CAN)		
Radio Illumination	blue/brown (dimmer)	+	Front Controls Interface Module, 8 pin plug, pin 3
Factory Amp Turn-on	N/A		
Power Antenna	blue	+	radio, gray 24 pin plug, pin 2
Left Front Speaker (+/-)	white - white/brown	+,-	radio, gray 24 pin plug, pins 22 and 10
Right Front Speaker (+/-)	white/purple - white/orange	+,-	radio, gray 24 pin plug, pins 23 and 11
Left Rear Speaker (+/-)	white/green - brown/yellow	+,-	radio, gray 24 pin plug, pins 21 and 9
Right Rear Speaker (+/-)	brown/white - brown/blue	+,-	radio, gray 24 pin plug, pins 24 and 12
Center Channel (+/-)	N/A		
Subwoofer (+/-)	N/A		
Aux. Audio Input Left (+/-)	blue - yellow/green (without SYNC)	+,-	radio, gray 24 pin plug, pins 17 and 6
Aux. Audio Input Right (+/-)	blue/green - yellow/green (without SYNC)	+,-	radio, gray 24 pin plug, pins 18 and 6
RSE Video (+/-)	N/A		
RSE Audio Left (+/-)	blue - gray/orange (SYNC audio)	+,-	radio, gray 26 pin plug, pins 12 and 25

Copyright © 2011 Directed Electronics. All Rights Reserved. DirectWire and its vehicle information are for the sole use of authorized Directed Electronics personnel and its participating dealers and distributors. The information contained on these pages may contain confidential and privileged information. Any unauthorized review, use, disclosure or distribution is prohibited.

DirectWire Vehicle Information - 9/26/2012 7:01:12 AM			
RSE Audio Right (+/-)	purple/green - brown/white (SYNC audio)	+,-	radio, gray 26 pin plug, pins 13 and 26
Satellite Radio 12 Volts	N/A		
Satellite Radio Ground	N/A		
Satellite Radio Ignition	N/A		
Satellite Radio Antenna	N/A		
Satellite Audio Left (+/-)	N/A		
Satellite Audio Right (+/-)	N/A		

*What Fits*

Item	Size	Depth	Location
<b>Headunit</b>	irregular		center of dash
<b>Left Front Speaker</b>	6.5	3.4	left front door
<b>Left Front Tweeter</b>	1	2	left front door
<b>Right Front Speaker</b>	6.5	3.4	right front door
<b>Right Front Tweeter</b>	1	2	right front door
<b>Left Rear Speaker</b>	6.5	3	left rear door
<b>Left Rear Tweeter</b>	N/A		
<b>Right Rear Speaker</b>	6.5	3	right rear door
<b>Right Rear Tweeter</b>	N/A		
<b>Center Channel</b>	N/A		
<b>Subwoofer</b>	N/A		
<b>Left Front Headrest</b>			
<b>Right Front Headrest</b>			
<b>Left Right Headrest</b>			
<b>Right Rear Headrest</b>			
<b>Satellite Radio Tuner</b>	(built into radio)		

*Additional Wiring Notes*

Item	Note
<b>Clutch Pedal</b>	May also need to interface with the second clutch switch. They are black/green (input), green/purple (output) (- N.O.) at the clutch cruise control deactivator switch, 4 pin plug, pins 3 and 2.
<b>Power Lock</b>	There is also a one wire door lock, which is brown/white (-) at the door lock switch or BCM, white 24 pin plug (F), pin 8. Negative pulses on this wire will alternate between lock and unlock. The BCM (Body Control Module) is behind the glove box.
<b>Driver Unlock Motor</b>	The BCM (Body Control Module) is behind the glove box.
<b>Lock Motor</b>	The BCM (Body Control Module) is behind the glove box.
<b>Passenger Unlock Motor</b>	The BCM (Body Control Module) is behind the glove box.
<b>Factory Alarm Arm</b>	The BCM (Body Control Module) is behind the glove box. After unlocking, you have to wait 1.5 - 2 seconds before the lock will work. See Tech Doc 1099 for wiring information.
<b>Factory Alarm Disarm</b>	The BCM (Body Control Module) is behind the glove box. If the doors do not unlock, increase the unlock duration time. See Tech Doc 1099 for wiring information.
<b>Hood Pin</b>	The BCM (Body Control Module) is behind the glove box.
<b>Reverse Light</b>	The BCM (Body Control Module) is behind the glove box.
<b>Trunk/Hatch Pin</b>	The BCM (Body Control Module) is behind the glove box.
<b>Dome Supervision</b>	The BCM (Body Control Module) is behind the glove box.
<b>Rear Defroster</b>	The BCM (Body Control Module) is behind the glove box.
<b>Left Front Heated Seat</b>	The BCM (Body Control Module) is behind the glove box.
<b>Right Front Heated Seat</b>	The BCM (Body Control Module) is behind the glove box.
<b>Horn Trigger</b>	The BCM (Body Control Module) is behind the glove box.
<b>Wipers</b>	The BCM (Body Control Module) is behind the glove box.
<b>Parking Lights (+)</b>	The BCM (Body Control Module) is behind the glove box. The marker lamps wire is white/purple (+) at the BCM, gray 16 pin plug (C), pin 14.
<b>Parking Lights (-)</b>	The BCM (Body Control Module) is behind the glove box. May need to interrupt the headlight switch ground when triggering this wire. It is black/gray at the headlight switch, gray 10 pin plug, pin 3. See Tech Doc 1096 for wiring information.
<b>Headlight</b>	The BCM (Body Control Module) is behind the glove box. May need to interrupt the headlight switch ground when triggering this wire. It is black/gray at the headlight switch, gray 10 pin plug, pin 3.
<b>Speed Sense</b>	The Powertrain Control Module is on the driver side of the engine. On A/T vehicles, it is yellow/orange at the Transmission Control Module on the transmission, bottom, black 58 pin plug, pin 9.
<b>Ignition</b>	On vehicles with Intelligent Access, it is orange/yellow (+) at the RFA Module, brown 23 pin plug, pin 18. The RFA (Remote Function Actuator) Module is under the passenger seat.
<b>Accessory</b>	On vehicles with Intelligent Access, it is orange (+) at the RFA Module, green 23 pin plug, pin 8. The RFA (Remote Function Actuator) Module is under the passenger seat.
<b>12 Volts</b>	On vehicles with Intelligent Access, it is red (20A) at the RFA Module, white 23 pin plug, pin 1. The RFA (Remote Function Actuator) Module is under the passenger seat.
<b>Second 12 Volts</b>	The BCM (Body Control Module) is behind the glove box.
<b>Second Starter</b>	The RFA (Remote Function Actuator) Module is under the passenger seat.
<b>Key Sense</b>	The BCM (Body Control Module) is behind the glove box.
<b>Data Bus</b>	The PATS (Passive Anti-Theft System) Transceiver is around the ignition key switch (without Intelligent Access), or in the steering column (Intelligent Access). The PATS ignition is blue/gray (without Intelligent Access), or gray/brown (Intelligent Access) in pin 1, and ground is black/gray in pin 2.
<b>Hazards</b>	The BCM (Body Control Module) is behind the glove box.
<b>Turn Signal (Left)</b>	The BCM (Body Control Module) is behind the glove box.