# 2003 Jaguar S-type





## Wiring Information

Item	Wire Color	Polarity	Wire Location	
12 Volts	brown/red (20A)	+	ignition harness	
Second 12 Volts				
Starter	white/black or white/green	+	ignition harness	
Second Starter	N/A			
Ignition	white/green	+	ignition harness	
Second Ignition	N/A			
Third Ignition	N/A			
Accessory	white	+	ignition harness	
Second Accessory	N/A			
Third Accessory				
Key Sense	white/blue (required)	+	ignition harness	
Data Bus				
Can Bus High				
Can Bus Low				
Can Bus Sw				
Power Lock	black/green	-	driver door module in door	
Power Unlock	black/white (double pulse)	-	driver door module in door	
Lock Motor	yellow/black	5wi	driver door module in door	
Unlock Motor	white/blue	5wi	driver door module in door	
Disarm Defeat	white/black	5wi	driver rear door harness	
Parking Lights (+)	use negative wire			
Parking Lights (-)	blue	-	headlight switch	
Hazards	blue/yellow	-	hazard switch	
Turn Signal (Left)	use hazards wire			
Turn Signal (Right)	use hazards wire			

#### DirectWire Vehicle Information - 9/16/2013 2:14:45 AM

## Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location	
Headlight	blue	-	headlight switch	
AutoLights				
Reverse Light	black/green	-	RECM, 17 pin plug, pin 9	
Left Front Door Trigger	see notes	-	see notes	
Right Front Door Trigger				
Left Rear Door Trigger				
Right Rear Door Trigger				
Dome Supervision	orange	-	GECM, 20 pin plug, pin 12	
Trunk/Hatch Pin	white/black	-	RECM, 22 pin plug, pin 14	
Rear Glass Pin				
Hood Pin	white	-	GECM, 12 pin plug, pin 3	
Trunk Hatch/Release	white/green	-	GECM, 26 pin plug, pin 4	
Trunk Release Motor				
Fuel Door Release				
Power Sliding Door (Left)	N/A			
Power Sliding Door (Right)				
Factory Alarm Arm	arms with lock			
Factory Alarm Disarm	disarms with unlock			
Disarm No Unlock				
Trunk Alarm Shunt				
Tachometer	NOT brown/red	ac	any fuel injector	
Wait to Start	N/A			
Neutral Safety				
Clutch Pedal				
Fuel Pump				
Rear Defroster				
Mirror Defroster				
Left Front Heated Seat				
Right Front Heated Seat				

## Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location	
Speed Sense	blue or yellow/red		ABS mod, pin 13 or sunroof module	
Brake Wire	green/orange	+	brake pedal switch	
Parking Brake	N/A			
Horn Trigger	brown/red	-	GECM, 12 pin plug, pin 8	
Wipers	red/green (L), red/black (H)	+	windshield wiper motor	
Left Front Window (Up/Down)	see notes			
Right Front Window (Up/Down)	see LF window up/dn notes			
Left Rear Window (Up/Down)	see LF window up/dn notes			
Right Rear Window (Up/Down)	see LF window up/dn notes			
Sun Roof (Open/Close)	see notes			
Sun Roof (Limit/Close)	N/A			
Memory Seat 1	yellow/red	-	driver door module in door	
Memory Seat 2	yellow/blue	-	driver door module in door	
Memory Seat 3	N/A			
Radio 12V	brown/green	+	radio harness	
Radio Ground	black	-	radio harness	
Radio Ignition	white/red	+	radio harness	
Radio Illumination	blue (dimmer)	+	radio harness	
Factory Amp Turn-on	N/A			
Power Antenna	N/A			
Left Front Speaker (+/-)	white/black - yellow/black	+,-	radio harness or amplifier	
Right Front Speaker (+/-)	white/red - yellow/red	+,-	radio harness or amplifier	
Left Rear Speaker (+/-)	white/blue - yellow	+,-	radio harness or amplifier	
Right Rear Speaker (+/-)	white - yellow	+,-	radio harness or amplifier	
Center Channel (+/-)				
Subwoofer (+/-)				
Aux. Audio Input Left (+/-)				
Aux. Audio Input Right (+/-)				
RSE Video (+/-)				
RSE Audio Left (+/-)				
RSE Audio Right (+/-)				
Satellite Radio 12 Volts				
Satellite Radio Ground				
Satellite Radio Ignition				
Satellite Radio Antenna				
Satellite Audio Left (+/-)				
Satellite Audio Right (+/-)				

#### What Fits

Item	Size	Depth	Location
Headunit			
Left Front Speaker			
Left Front Tweeter			
Right Front Speaker			
Right Front Tweeter			
Left Rear Speaker			
Left Rear Tweeter			
Right Rear Speaker			
Right Rear Tweeter			
Center Channel			
Subwoofer			
Left Front Headrest			
Right Front Headrest			
Left Right Headrest			
Right Rear Headrest			
Satellite Radio Tuner			

## Additional Wiring Notes

Item	Note
Power Lock	Meter the wires while turning the key in the driver door key cylinder.
Power Unlock	Meter the wires while turning the key in the driver door key cylinder.
Parking Lights (-)	Parking lights are negative trigger thru a 236 ohm resistor. MUST use a relay.
Headlight	Headlights are negative trigger thru a 506 ohm resistor. MUST use a relay.
Left Front Door Trigger	The front door trigger wires are at the GECM. The driver door is black/white, pin 8, in the 20 pin plug, and the passenger door is black/green, pin 15, in the 26 pin plug. The rear door trigger wires are at the RECM. The left rear is black/orange, pin 16, in the 26 pin plug, and the right rear is black/green, pin 17, in the 20 pin plug. Use all four wires and diode isolate each. The GECM (General Electronic Control Module) is in the driver kick panel. The RECM (Rear Electronic Control Module) is in the passenger side of the trunk.
Reverse Light	The RECM (Rear Electronic Control Module) is in the passenger side of the trunk.
Trunk/Hatch Pin	The RECM (Rear Electronic Control Module) is in the passenger side of the trunk.
Dome Supervision	The GECM (General Electronic Control Module) is in the driver kick panel.
Hood Pin	The GECM (General Electronic Control Module) is in the driver kick panel.
Trunk Hatch/Release	The GECM (General Electronic Control Module) is in the driver kick panel. The trunk release is also black/green (-) at the release switch on the dash. The fuel door release is black/white (+) at the release switch.
Horn Trigger	The GECM (General Electronic Control Module) is in the driver kick panel.
Left Front Window (Up/Down)	Interface of aftermarket window module is not possible because the motors are integrated with the control modules. However, an extended trigger on the door lock wire will roll the windows up and close the sunroof.
Sun Roof (Open/Close)	Interface of aftermarket window module is not possible because the motors are integrated with the control modules. However, an extended trigger on the door lock wire will roll the windows up and close the sunroof.
Left Front Speaker (+/-)	The amplifier is in the driver side of the trunk.
Speed Sense	The ABS module is in the front passenger side of the engine compartment.