

2007 Land Rover Range Rover



Remote Start, Security, Keyless Entry, Accessories

Item	Wire Color	Polarity	Wire Location
12 Volts	red	+	light module control unit, white 15 way, pos. 8
Second 12 Volts			
Starter	black/yellow	+	ignition key switch placed near the gear stick
Second Starter			
Ignition	green	+	fuse box, 10 way signed C-F, pos. 10
Second Ignition			
Third Ignition			
Accessory			
Second Accessory			
Third Accessory			
Keysense			
Data Bus			
Can Bus High			
Can Bus Low			
Can Bus Sw			
Power Lock	red/blue	-	window control push-button, white 12 way, pos. 4
Power Unlock	white/black	-	window control push-button, white 12 way, pos. 3
Lock Motor			
Driver Unlock Motor			
Passenger Unlock Motor			
Parking Lights (-)			
Parking Lights (+)			
Hazards			
Turn Signal (Left)	blue/green (F), blue/yellow (S), blue/green (R)	+	light module control unit
Turn Signal (Right)	blue/brown (F), blue/yellow (S), blue/brown (R)	+	light module control unit
Headlight			
AutoLights			
Reverse Light			
Left Front Door Trigger	red/blue	+	GM3 control unit, black 20 way, pos. 20
Right Front Door Trigger			
Left Rear Door Trigger			
Right Rear Door Trigger			

Remote Start, Security, Keyless Entry, Accessories (Continued)

Item	Wire Color	Polarity	Wire Location
Dome Supervision			
Trunk/Hatch Pin	grey/white	+	GM3 control unit, white 26 way, pos. 2
Rear Glass Pin			
Hood Pin	violet/green		GM3 control unit, black 26 way, pos. 2
Trunk/Hatch Release			
Trunk Release Motor			
Fuel Door Release			
Power Sliding Door (Left)			
Power Sliding Door (Right)			
Factory Alarm Arm			
Factory Alarm Disarm			
Disarm No Unlock			
Trunk Alarm Shunt			
Tachometer			
Wait to Start			
Neutral Safety			
Clutch Pedal			
Fuel Pump	black/violet		fuse box, black 26 way signed C-C, pos. 6
Rear Defroster			
Mirror Defroster			
Left Front Heated Seat			
Right Front Heated Seat			
Speed Sense			
Brake Wire			
Parking Brake			
Horn Trigger			
Wipers			
Left Front Window (Up/Down)			
Right Front Window (Up/Down)			
Left Rear Window (Up/Down)			
Right Rear Window (Up/Down)			
Sun Roof (Open/Close)			
Sun Roof (Limit/Close)			
Memory Seat 1			
Memory Seat 2			
Memory Seat 3			

<i>Audio</i>			
Item	Wire Color	Polarity	Wire Location
Radio 12V			
Radio Ground			
Radio Ignition			
Radio Illumination			
Factory Amp Turn-on			
Power Antenna			
Left Front Speaker (+/-)			
Right Front Speaker (+/-)			
Left Rear Speaker (+/-)			
Right Rear Speaker (+/-)			
Center Channel (+/-)			
Subwoofer (+/-)			
Aux. Audio Input Left (+/-)			
Aux. Audio Input Right (+/-)			
RSE Video (+/-)			
RSE Audio Left (+/-)			
RSE Audio Right (+/-)			
Satellite Radio 12 Volts			
Satellite Radio Ground			
Satellite Radio Ignition			
Satellite Radio Antenna			
Satellite Audio Left (+/-)			
Satellite Audio Right (+/-)			

<i>What Fits</i>			
Item	Size	Depth	Location
Headunit			
Left Front Speaker			
Left Front Tweeter			
Right Front Speaker			
Right Front Tweeter			
Left Rear Speaker			
Left Rear Tweeter			
Right Rear Speaker			
Right Rear Tweeter			
Center Channel			
Subwoofer			
Left Front Headrest			
Right Front Headrest			
Left Rear Headrest			
Right Rear Headrest			
Satellite Radio Tuner			

Wiring Notes: 12 Volts**Notes:**

The light module control unit is fixed at the back of the passenger side kickplate.

Wiring Notes: Ignition**Notes:**

The fuse box is placed at the back of the passenger side glove box.

Wiring Notes: Power Lock**Notes:**

The window control push-button is inside the driver side door.

Wiring Notes: Power Unlock**Notes:**

The window control push-button is inside the driver side door.

Wiring Notes: Turn Signal (Left)**Notes:**

The light module control unit is fixed at the back of the passenger side kickplate. The front left wire is in the white 15 way, pos. 11. The side left wire is in the white 15 way, pos. 4. The rear left wire is in the black 15 way, pos. 8.

Wiring Notes: Turn Signal (Right)**Notes:**

The light module control unit is fixed at the back of the passenger side kickplate. The front right wire is in the black 15 way, pos. 6. The side right wire is in the black 15 way, pos. 4. The rear right wire is in the white 15 way, pos. 12.

*Wiring Notes: Left Front Door Trigger***Notes:**

The GM3 control unit is fixed under the passenger side front seat.

*Wiring Notes: Trunk/Hatch Pin***Notes:**

The GM3 control unit is fixed under the passenger side front seat.

*Wiring Notes: Hood Pin***Notes:**

The GM3 control unit is fixed under the passenger side front seat.

*Wiring Notes: Fuel Pump***Notes:**

The fuse box is placed on the luggage compartment right side.



© 2011 Directed Electronics. All Rights Reserved.

DirectWire and its vehicle information are for the sole use of authorized Directed Electronics personnel and its participating dealers and distributors. The information contained on these pages may contain confidential and privileged information. Any unauthorized review, use, disclosure or distribution is prohibited.