

## 2009 Mercedes Benz C Class (W204)



## Wiring Information

| Item                       | Wire Color                           | Polarity   | Wire Location   |
|----------------------------|--------------------------------------|------------|---|
| <b>12 Volts</b>            | red (40A)                            | +          | trunk fuse box, 1 pin plug (2V), pin 1                  |
| <b>Second 12 Volts</b>     | N/A                                  |            |   |
| <b>Starter</b>             | purple/white (for starter kill only) | +          | underhood fuse box, 6 pin plug (3M), pin 4              |
| <b>Second Starter</b>      | N/A                                  |            |   |
| <b>Ignition</b>            | pink/red (for ignition sense only)   | +          | trunk fuse box, 7 pin plug (13A), pin 5                 |
| <b>Second Ignition</b>     | N/A                                  |            |   |
| <b>Third Ignition</b>      | N/A                                  |            |   |
| <b>Accessory</b>           | N/A                                  |            |   |
| <b>Second Accessory</b>    | N/A                                  |            |   |
| <b>Third Accessory</b>     | N/A                                  |            |   |
| <b>Key Sense</b>           | N/A                                  |            |   |
| <b>Data Bus</b>            | N/A                                  |            |   |
| <b>Can Bus High</b>        | brown/red                            | data       | driver kick or trunk fuse box, 50 pin plug (9I), pin 30 |
| <b>Can Bus Low</b>         | brown                                | data       | driver kick or trunk fuse box, 50 pin plug (9I), pin 31 |
| <b>Can Bus Sw</b>          | N/A                                  |            |   |
| <b>Power Lock</b>          | (ribbon harness)                     | -          | Left Front Door Module, plug (C5), pin 4                |
| <b>Power Unlock</b>        | same as power lock                   | - resistor |   |
| <b>Lock Motor</b>          | gray/black                           | 5 wire     | Left Front Door Module, plug (C7), pin 7                |
| <b>Unlock Motor</b>        | gray/blue                            | 5 wire     | Left Front Door Module, plug (C7), pin 6                |
| <b>Disarm Defeat</b>       | gray/blue                            | 5 wire     | Right Front Door Module, plug (C7), pin 6               |
| <b>Parking Lights (+)</b>  | gray (LF), gray/white (RF)           | +          | underhood fuse box, 18 pin plug (21M), pins 13 and 14   |
| <b>Parking Lights (-)</b>  | (LIN bus)                            |            |   |
| <b>Hazards</b>             | (LIN bus)                            |            |   |
| <b>Turn Signal (Left)</b>  | black/white (LF)                     | +          | underhood fuse box, 18 pin plug (20M), pin 18           |
| <b>Turn Signal (Right)</b> | black/green (RF)                     | +          | underhood fuse box, 18 pin plug (18M), pin 11           |

## Wiring Information (Continued)

| Item                              | Wire Color   | Polarity     | Wire Location   |
|-----------------------------------|--|--------------|---|
| <b>Headlight</b>                  | white/black (L); white (R) (high beams)            | +            | underhood fuse box, 10P plg 14M, pin 1; 10P plg 15M, pin 10 |
| <b>AutoLights</b>                 |  |              |   |
| <b>Reverse Light</b>              | gray/blue  | +            | trunk fuse box, 28 pin plug (5H), pin 22                    |
| <b>Left Front Door Trigger</b>    | brown/pink   | -            | Left Front Door Module, plug (C7), pin 9                    |
| <b>Right Front Door Trigger</b>   | brown/pink   | -            | Right Front Door Module, plug (C7), pin 9                   |
| <b>Left Rear Door Trigger</b>     | brown/pink   | -            | trunk fuse box, 50 pin plug (9I), pin 4                     |
| <b>Right Rear Door Trigger</b>    | brown/gray   | -            | trunk fuse box, 50 pin plug (9I), pin 3                     |
| <b>Dome Supervision</b>           | CAN bus (frnt dome lamp); blk/gry (rear dome lamp) | +            | overhead control panel, 8 pin plug (C), pin 5               |
| <b>Trunk/Hatch Pin</b>            | brown/yellow                                       | -            | trunk fuse box, 32 pin plug (6HD), pin 29                   |
| <b>Rear Glass Pin</b>             | N/A  |              |   |
| <b>Hood Pin</b>                   | brown/red  | -            | hood switch or trunk fuse box, 50 pin plug (9I), pin 5      |
| <b>Trunk Hatch/Release</b>        | green/white  | -            | trunk fuse box, 32 pin plug (6HD), pin 31                   |
| <b>Trunk Release Motor</b>        | black/white  | 5 wire       | trunk fuse box, 32 pin plug (6HD), pin 3                    |
| <b>Fuel Door Release</b>          | unlocks along with doors                           |              |   |
| <b>Power Sliding Door (Left)</b>  | N/A  |              |   |
| <b>Power Sliding Door (Right)</b> | N/A  |              |   |
| <b>Factory Alarm Arm</b>          | factory remote only                                |              |   |
| <b>Factory Alarm Disarm</b>       | factory remote only                                |              |   |
| <b>Disarm No Unlock</b>           |  |              |   |
| <b>Trunk Alarm Shunt</b>          | N/A  |              |   |
| <b>Tachometer</b>                 | white/stripes                                      | ac           | any fuel injector   |
| <b>Wait to Start</b>              | N/A  |              |   |
| <b>Neutral Safety</b>             | N/A  |              |   |
| <b>Clutch Pedal</b>               | brown (in), brown/black (out)                      | - N.O.       | clutch switch, 2 pin plug, pins 1 and 2                     |
| <b>Fuel Pump</b>                  | pink/red   | +            | trunk fuse box, 50 pin plug (9I), pin 18                    |
| <b>Rear Defroster</b>             | black  | +<br>latched | trunk fuse box, 1 pin plug (1H), pin 1                      |
| <b>Mirror Defroster</b>           | (CAN bus)  |              |   |
| <b>Left Front Heated Seat</b>     | black/gray   | 5 wire       | trunk fuse box, 8 pin plug (7I), pin 7                      |
| <b>Right Front Heated Seat</b>    | black/purple                                       | 5 wire       | trunk fuse box, 8 pin plug (7I), pin 8                      |

## Wiring Information (Continued)

| Item                                | Wire Color   | Polarity | Wire Location                                   |
|-------------------------------------|--|----------|---|
| <b>Speed Sense</b>                  |  |          |   |
| <b>Brake Wire</b>                   | black/red  | +        | trunk fuse box, 32 pin plug (6HD), pin 1        |
| <b>Parking Brake</b>                | brown/black  | -        | parking brake switch, 2 pin plug, pin 2         |
| <b>Horn Trigger</b>                 | black/white  | +        | underhood fuse box, 10 pin plug (15M), pin 9    |
| <b>Wipers</b>                       | (CAN bus)  |          |   |
| <b>Left Front Window (Up/Down)</b>  |  |          |   |
| <b>Right Front Window (Up/Down)</b> |  |          |   |
| <b>Left Rear Window (Up/Down)</b>   |  |          |   |
| <b>Right Rear Window (Up/Down)</b>  |  |          |   |
| <b>Sun Roof (Open/Close)</b>        |  |          |   |
| <b>Sun Roof (Limit/Close)</b>       |  |          |   |
| <b>Memory Seat 1</b>                | (LIN bus)  |          |   |
| <b>Memory Seat 2</b>                | (LIN bus)  |          |   |
| <b>Memory Seat 3</b>                | (LIN bus)  |          |   |
| <b>Radio 12V</b>                    | red  | +        | radio, 16 pin plug, pin 15                      |
| <b>Radio Ground</b>                 | brown  | -        | radio, 16 pin plug, pin 12                      |
| <b>Radio Ignition</b>               | (CAN bus)  |          |   |
| <b>Radio Illumination</b>           | (CAN bus)  |          |   |
| <b>Factory Amp Turn-on</b>          | blue/black (MOST wake up)                          |          | radio, 16 pin plug, pin 16                      |
| <b>Power Antenna</b>                | purple (mobile phone on/off)                       |          | radio, 16 pin plug, pin 13                      |
| <b>Left Front Speaker (+/-)</b>     | green - brown/green                                | +, -     | radio, 16 pin plug, pins 3 and 7                |
| <b>Right Front Speaker (+/-)</b>    | orange - brown/orange                              | +, -     | radio, 16 pin plug, pins 2 and 6                |
| <b>Left Rear Speaker (+/-)</b>      | pink - brown/pink                                  | +, -     | radio, 16 pin plug, pins 4 and 8                |
| <b>Right Rear Speaker (+/-)</b>     | white - brown/white                                | +, -     | radio, 16 pin plug, pins 1 and 5                |
| <b>Center Channel (+/-)</b>         | gray - brown/gray                                  | +, -     | amplifier, 32 pin plug, pins 23 and 28          |
| <b>Subwoofer (+/-)</b>              | green - brown/green (1); purple - brown/purple (2) | +, -     | amplifier, 32 pin plug, pins 4 and 16; 3 and 15 |
| <b>Aux. Audio Input Left (+/-)</b>  | black - brown                                      | +, -     | radio, 12 pin plug, pins 6 and 11               |
| <b>Aux. Audio Input Right (+/-)</b> | yellow - brown                                     | +, -     | radio, 12 pin plug, pins 12 and 11              |
| <b>RSE Video (+/-)</b>              |  |          |   |
| <b>RSE Audio Left (+/-)</b>         | black - brown                                      | +, -     | radio, 8 pin plug, pins 8 and 3                 |
| <b>RSE Audio Right (+/-)</b>        | yellow - brown                                     | +, -     | radio, 8 pin plug, pins 4 and 3                 |

Copyright © 2011 Directed Electronics. All Rights Reserved. DirectWire and its vehicle information are for the sole use of authorized Directed Electronics personnel and its participating dealers and distributors. The information contained on these pages may contain confidential and privileged information. Any unauthorized review, use, disclosure or distribution is prohibited.

| DirectWire Vehicle Information - 12/6/2011 7:18:43 AM |                           |   |   |
|---|---------------------------|---|---|
| Satellite Radio 12 Volts                              | red/purple                | + | Satellite Radio Control Unit, 4 pin plug, pin 2 |
| Satellite Radio Ground                                | brown                     | - | Satellite Radio Control Unit, 4 pin plug, pin 1 |
| Satellite Radio Ignition                              | blue/black (MOST wake up) |   | Satellite Radio Control Unit, 4 pin plug, pin 3 |
| Satellite Radio Antenna                               | (coaxial cable)           |   |   |
| Satellite Audio Left (+/-)                            | (MOST bus)                |   |   |
| Satellite Audio Right (+/-)                           | (MOST bus)                |   |   |

Copyright © 2011 Directed Electronics. All Rights Reserved. DirectWire and its vehicle information are for the sole use of authorized Directed Electronics personnel and its participating dealers and distributors. The information contained on these pages may contain confidential and privileged information. Any unauthorized review, use, disclosure or distribution is prohibited.

*What Fits*

| Item                         | Size      | Depth | Location                            |
|------------------------------|-----------|-------|-------------------------------------|
| <b>Headunit</b>              | irregular |       | center of dash                      |
| <b>Left Front Speaker</b>    |           |       | left front door                     |
| <b>Left Front Tweeter</b>    |           |       | left front door                     |
| <b>Right Front Speaker</b>   |           |       | right front door                    |
| <b>Right Front Tweeter</b>   |           |       | right front door                    |
| <b>Left Rear Speaker</b>     |           |       | left rear door                      |
| <b>Left Rear Tweeter</b>     |           |       | left rear deck (surround)           |
| <b>Right Rear Speaker</b>    |           |       | right rear door                     |
| <b>Right Rear Tweeter</b>    |           |       | right rear deck (surround)          |
| <b>Center Channel</b>        |           |       | top center of dash                  |
| <b>Subwoofer</b>             |           |       | top center of rear deck             |
| <b>Left Front Headrest</b>   |           |       |                                     |
| <b>Right Front Headrest</b>  |           |       |                                     |
| <b>Left Right Headrest</b>   |           |       |                                     |
| <b>Right Rear Headrest</b>   |           |       |                                     |
| <b>Satellite Radio Tuner</b> |           |       | center front of luggage compartment |

*Additional Wiring Notes*

| Item                             | Note  |
|----------------------------------|---|
| <b>Parking Lights (+)</b>        | The LR - RR wires are black/blue - black/brown at the trunk fuse box, 28 pin plug (5H), pins 1 and 2.   |
| <b>Turn Signal (Left)</b>        | The LR wire is black/white at the trunk fuse box, 28 pin plug (5H), pin 25.   |
| <b>Turn Signal (Right)</b>       | The RR wire is black/green at the trunk fuse box, 28 pin plug (5H), pin 15.   |
| <b>Satellite Radio 12 Volts</b>  | If equipped, the Satellite Radio Control Unit is in the center front of the luggage compartment.  |
| <b>Center Channel (+/-)</b>      | If equipped, the amplifier is in the left side of the luggage compartment.  |
| <b>Subwoofer (+/-)</b>           | If equipped, the amplifier is in the left side of the luggage compartment.  |
| <b>Left Front Speaker (+/-)</b>  | If equipped, the amplifier is in the left side of the luggage compartment. On vehicles with amplifier, the speaker wires are green - brown/green at the amplifier, 32 pin plug, pins 6 and 18.  |
| <b>Right Front Speaker (+/-)</b> | If equipped, the amplifier is in the left side of the luggage compartment. On vehicles with amplifier, the speaker wires are orange - brown/orange at the amplifier, 32 pin plug, pins 5 and 17.  |
| <b>Left Rear Speaker (+/-)</b>   | If equipped, the amplifier is in the left side of the luggage compartment. On vehicles with amplifier, the speaker wires are pink - brown/pink at the amplifier, 32 pin plug, pins 8 and 20. The surround speaker wires are blue - brown/blue at the amplifier, 32 pin plug, pins 10 and 22.      |
| <b>Right Rear Speaker (+/-)</b>  | If equipped, the amplifier is in the left side of the luggage compartment. On vehicles with amplifier, the speaker wires are white - brown/white at the amplifier, 32 pin plug, pins 7 and 19. The surround speaker wires are yellow - brown/yellow at the amplifier, 32 pin plug, pins 9 and 21. |
| <b>Trunk Hatch/Release</b>       | Meter this wire while opening the luggage compartment from the handle on the rear of the vehicle.   |