

## 2008 Nissan Altima

### Wiring Information

Item	Wire Color	Polarity	Wire Location
<b>12 Volts</b>	white/black (40A)	+	BCM, black 3 pin plug, pin 1
<b>Second 12 Volts</b>	white (100A)	+	fuse box under driver dash, rear, 1 pin plug
<b>Starter</b>	brown	-	push-button ignition switch, pin 4 or BCM, black 40 pin plug, pin 18
<b>Second Starter</b>	N/A		
<b>Ignition</b>	green (not for remote start)	+	BCM, green plug, pin 12
<b>Second Ignition</b>	N/A		
<b>Third Ignition</b>	N/A		
<b>Accessory</b>	purple/yellow (not for remote start)	+	BCM, green plug, pin 11
<b>Second Accessory</b>	N/A		
<b>Third Accessory</b>	N/A		
<b>Key Sense</b>	yellow	+	key slot, pin 11 or BCM, green plug, pin 10
<b>Data Bus</b>	yellow/green (door lock data bus)	data	driver kick or BCM, green plug, pin 21
<b>Can Bus High</b>	blue	data	data link connector, pin 6 or BCM, black 40 pin plug, pin 20
<b>Can Bus Low</b>	pink	data	data link connector, pin 14 or BCM, black 40 pin plug, pin 19
<b>Can Bus Sw</b>	N/A		
<b>Power Lock</b>	gray	-	driver kick or BCM, green plug, pin 17
<b>Power Unlock</b>	gray/red	-	driver kick or BCM, green plug, pin 20
<b>Lock Motor</b>	purple	5 wire	driver kick or BCM, white 16 pin plug, pin 5
<b>Unlock Motor</b>	green	5 wire	driver kick or BCM, white 16 pin plug, pin 6
<b>Disarm Defeat</b>	green/yellow	5 wire	passenger kick or BCM, white 16 pin plug, pin 2
<b>Parking Lights (+)</b>	blue/red or red/blue	+	driver kick or fuse box, rear, brown 12 pin plug, pin 4
<b>Parking Lights (-)</b>	N/A		
<b>Hazards</b>	green/orange	-	hazard switch, pin 2 or BCM, black 40 pin plug, pin 39
<b>Turn Signal (Left)</b>	green/yellow	+	driver kick or BCM, white 16 pin plug, pin 15
<b>Turn Signal (Right)</b>	green/black	+	driver kick or BCM, white 16 pin plug, pin 14

*Wiring Information (Continued)*

Item	Wire Color	Polarity	Wire Location
<b>Headlight</b>	blue (L), red/yellow (R)	+	headlights or IPDM E/R, white 8 pin plug, pins 2 (L) and 1 (R)
<b>AutoLights</b>			
<b>Reverse Light</b>	pink/black	+	driver kick, harness to rear
<b>Left Front Door Trigger</b>	lt. blue	-	driver kick or BCM, green plug, pin 39
<b>Right Front Door Trigger</b>	red/black	-	passenger kick or BCM, green plug, pin 13
<b>Left Rear Door Trigger</b>	red/black	-	driver kick or BCM, gray plug, pin 38
<b>Right Rear Door Trigger</b>	red/white	-	passenger kick or BCM, gray plug, pin 37
<b>Dome Supervision</b>	white to yellow	-	driver A pillar or BCM, white 16 pin plug, pin 16
<b>Trunk/Hatch Pin</b>	yellow/green	-	driver kick or BCM, gray plug, pin 19
<b>Rear Glass Pin</b>	N/A		
<b>Hood Pin</b>	N/A		
<b>Trunk Hatch/Release</b>	blue/red	-	release switch or BCM, gray plug, pin 36
<b>Trunk Release Motor</b>	purple	5 wire	driver kick or BCM, white 12 pin plug, pin 4
<b>Fuel Door Release</b>	N/A		
<b>Power Sliding Door (Left)</b>	N/A		
<b>Power Sliding Door (Right)</b>	N/A		
<b>Factory Alarm Arm</b>	blue/black	-	power window main switch, white 16 pin plug, pin 4
<b>Factory Alarm Disarm</b>	blue/red (double pulse)	-	power window main switch, white 16 pin plug, pin 6
<b>Disarm No Unlock</b>			
<b>Trunk Alarm Shunt</b>	N/A		
<b>Tachometer</b>	purple/white	ac	ECM, black 32 pin plug, pin 14
<b>Wait to Start</b>	N/A		
<b>Neutral Safety</b>	N/A		
<b>Clutch Pedal</b>	green/white (in) and red/black (out)	+ N.O.	clutch pedal switch
<b>Fuel Pump</b>	white or lt. blue	+	driver kick, harness to rear
<b>Rear Defroster</b>	green/red	- latched	BCM, green plug, pin 40
<b>Mirror Defroster</b>	same as rear defroster		
<b>Left Front Heated Seat</b>	gray	5 wire	driver heated seat switch, white 6 pin plug, pin 2
<b>Right Front Heated Seat</b>	gray/blue	5 wire	passenger heated seat switch, brown 6 pin plug, pin 2

## Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
<b>Speed Sense</b>	purple/white	8-Pulse	instrument cluster, white 40 pin plug, pin 31
<b>Brake Wire</b>	red/green to orange/blue	+	brake pedal switch or BCM, green plug, pin 7
<b>Parking Brake</b>	green/red	-	parking brake switch or instrument cluster, white 40 pin plug, pin 26
<b>Horn Trigger</b>	blue/white or blue/orange	-	horn switch, gray 8 pin plug, pin 8
<b>Wipers</b>	blue/red (L), blue/black (H)	+	wiper motor or IPDM E/R, white 36 pin plug, pins 2 (L) and 3 (H)
<b>Left Front Window (Up/Down)</b>	blue/red - blue/black	A	power window main switch, white 16 pin plug
<b>Right Front Window (Up/Down)</b>	red/black - red/white	A	driver kick, door harness
<b>Left Rear Window (Up/Down)</b>	green/black - green/orange	A	driver kick, door harness
<b>Right Rear Window (Up/Down)</b>	green/white - green/red	A	driver kick, door harness
<b>Sun Roof (Open/Close)</b>	motor part of module		
<b>Sun Roof (Limit/Close)</b>	N/A		
<b>Memory Seat 1</b>	N/A		
<b>Memory Seat 2</b>	N/A		
<b>Memory Seat 3</b>	N/A		
<b>Radio 12V</b>	yellow/red	+	radio, white 20 pin plug, pin 19
<b>Radio Ground</b>	(chassis)		
<b>Radio Ignition</b>	purple/yellow	+	radio, white 20 pin plug, pin 7
<b>Radio Illumination</b>	red/blue (parking lights), red/yellow (dimmer)	+,-	radio, white 20 pin plug, pins 9 and 8
<b>Factory Amp Turn-on</b>	black/pink	+	radio, white 20 pin plug, pin 1
<b>Power Antenna</b>	black	+	radio, gray 3 pin plug, pin 1
<b>Left Front Speaker (+/-)</b>	white - black	+,-	radio, white 20 pin plug, pins 2 and 3
<b>Right Front Speaker (+/-)</b>	green/white - brown	+,-	radio, white 20 pin plug, pins 11 and 12
<b>Left Rear Speaker (+/-)</b>	orange/black - white/red	+,-	radio, white 20 pin plug, pins 4 and 5
<b>Right Rear Speaker (+/-)</b>	blue - black/white	+,-	radio, white 20 pin plug, pins 13 and 14
<b>Center Channel (+/-)</b>	black/pink - orange/black	+,-	amplifier, brown 23 pin plug, pins 15 and 16
<b>Subwoofer (+/-)</b>	white/blk - green/blk (L), brown/wht - brown (R)	+,-	amplifier, brown 14 pin plug, pins 13, 8 (L), 5, 6 (R)
<b>Aux. Audio Input Left (+/-)</b>			
<b>Aux. Audio Input Right (+/-)</b>			
<b>RSE Video (+/-)</b>			
<b>RSE Audio Left (+/-)</b>			
<b>RSE Audio Right (+/-)</b>			
<b>Satellite Radio 12 Volts</b>	yellow/red	+	Satellite Radio Tuner, white 16 pin plug, pin 12
<b>Satellite Radio Ground</b>	(chassis)		
<b>Satellite Radio Ignition</b>	gray/white	+	Satellite Radio Tuner, white 16 pin plug, pin 16
<b>Satellite Radio Antenna</b>	(coaxial cable)		
<b>Satellite Audio Left (+/-)</b>	yellow/blue - white/blue	+,-	Satellite Radio Tuner, white 16 pin plg, pins 2, 1

Copyright © 2007 Directed Electronics. All Rights Reserved. DirectWire and its vehicle information are for the sole use of authorized Directed Electronics personnel and its participating dealers and distributors. The information contained on these pages may contain confidential and privileged information. Any unauthorized review, use, disclosure or distribution is prohibited.



*What Fits*

Item	Size	Depth	Location
Headunit	irregular		center of dash
Left Front Speaker	6.5		left front door
Left Front Tweeter			left front dash
Right Front Speaker	6.5		right front door
Right Front Tweeter			right front dash
Left Rear Speaker	6 x 9		left rear deck or left rear door
Left Rear Tweeter			left rear deck
Right Rear Speaker	6 x 9		right rear deck or right rear door
Right Rear Tweeter			right rear deck
Center Channel			top center of dash
Subwoofer	6 x 9		rear deck
Left Front Headrest			
Right Front Headrest			
Left Right Headrest			
Right Rear Headrest			
Satellite Radio Tuner			under rear deck (sedan), driver side trunk (coupe)

*Smart Starter Kill Relay*

Relay Type:	n/a
Part #:	n/a
OE Relay Part #:	
Location:	n/a

<b>Notes:</b>
n/a

<b>Alternate Part Notes:</b>
n/a



*Additional Wiring Notes*

Item	Note
<b>Can Bus Low</b>	The data link connector is under the driver dash. The BCM (Body Control Module) is behind the instrument cluster.
<b>Dome Supervision</b>	The BCM (Body Control Module) is behind the instrument cluster. The step lamps wire is red/white (-) at the BCM, white 16 pin plug, pin 4.
<b>Rear Defroster</b>	The BCM (Body Control Module) is behind the instrument cluster. Also found at the fuse box, white 10 pin plug, pin 4.
<b>Wipers</b>	The IPDM E/R (Intelligent Power Distribution Module Engine Room) is in the engine compartment, on the driver fender.
<b>Right Front Window (Up/Down)</b>	On vehicles with left and right front anti-pinch power window system, you have to go into the passenger door and use blue/red - blue/black at the right front power window switch, white 16 pin plug.
<b>Satellite Radio 12 Volts</b>	If equipped, the Satellite Radio Tuner is under the rear deck on the sedans and in the driver side of the trunk on the coupes.
<b>Speed Sense</b>	May only be present on vehicles with BOSE or Bluetooth. Also found at the BOSE radio, white 20 pin plug, pin 18 (without Bluetooth) or the Bluetooth Control Unit, white 32 pin plug, pin 28 (with Bluetooth). The Bluetooth Control Unit is under the rear deck on the sedans and in the driver side of the trunk on the coupes.
<b>12 Volts</b>	The BCM (Body Control Module) is behind the instrument cluster.
<b>Key Sense</b>	The BCM (Body Control Module) is behind the instrument cluster.
<b>Starter</b>	The BCM (Body Control Module) is behind the instrument cluster. If XK07 interface module is not available, see Tech Doc 1301 for the Push Button Start interface information.
<b>Left Front Door Trigger</b>	The BCM (Body Control Module) is behind the instrument cluster.
<b>Right Front Door Trigger</b>	The BCM (Body Control Module) is behind the instrument cluster.
<b>Left Rear Door Trigger</b>	The BCM (Body Control Module) is behind the instrument cluster.
<b>Right Rear Door Trigger</b>	The BCM (Body Control Module) is behind the instrument cluster.
<b>Brake Wire</b>	The BCM (Body Control Module) is behind the instrument cluster. Also found orange (+) in the driver kick, harness to rear or at the fuse box, rear, brown 12 pin plug, pin 5.
<b>Can Bus High</b>	The data link connector is under the driver dash. The BCM (Body Control Module) is behind the instrument cluster. The security light wire is blue/orange (-) at the BCM, green plug, pin 30.
<b>Accessory</b>	The BCM (Body Control Module) is behind the instrument cluster.
<b>Ignition</b>	The BCM (Body Control Module) is behind the instrument cluster.
<b>Headlight</b>	The IPDM E/R (Intelligent Power Distribution Module Engine Room) is in the engine compartment, on the driver fender.
<b>Hazards</b>	The BCM (Body Control Module) is behind the instrument cluster.
<b>Turn Signal (Left)</b>	The BCM (Body Control Module) is behind the instrument cluster.
<b>Turn Signal (Right)</b>	The BCM (Body Control Module) is behind the instrument cluster.
<b>Left Front Window (Up/Down)</b>	On vehicles with left and right front anti-pinch power window system, can also use the factory alarm arm/disarm wires to roll the front windows up/down.
<b>Left Front Speaker (+/-)</b>	If equipped, the amplifier is under the rear deck on the sedans and in the passenger side of the trunk on the coupes. On vehicles with amplifier, the speaker wires are white - black at the amplifier, brown 23 pin plug, pins 4 and 5. The tweeter wires are lt. green - black/yellow at the amplifier, brown 14 pin plug, pins 1 and 2.
<b>Right Front Speaker (+/-)</b>	If equipped, the amplifier is under the rear deck on the sedans and in the passenger side of the trunk on the coupes. On vehicles with amplifier, the speaker wires are green/white - brown at the amplifier, brown 23 pin plug, pins 17 and 18. The tweeter wires are blue/orange - gray/blue at the amplifier, brown 14 pin plug, pins 4 and 3.
<b>Left Rear Speaker (+/-)</b>	If equipped, the amplifier is under the rear deck on the sedans and in the passenger side of the trunk on the coupes. On vehicles with amplifier, the speaker or tweeter wires are red/green - brown/black at the amplifier, brown 23 pin plug, pins 14 and 1.