# 2005 Audi A4

#### Wiring Information

lte	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	Delevite	Wine Landon	
Item	Wire Color	Polarity	Wire Location	
12 Volts	Red	+	Ignition Harness	
Second 12 Volts		+		
Starter	Red/Black	+	Ignition Harness	
Second Starter	Blue	+	Ignition Harness	
Ignition	Black	+	Ignition Harness	
Second Ignition				
Third Ignition				
Accessory	Yellow/Black	+	Ignition Harness	
Second Accessory				
Third Accessory				
Key Sense	Red	+	Ignition Harness	
Data Bus				
Can Bus High				
Can Bus Low				
Can Bus Sw				
Power Lock	Blue/White	-	At Door Module in Drivers Door	
Power Unlock	Purple/Lt. Green	-	At Door Module in Drivers Door	
Lock Motor				
Unlock Motor				
Disarm Defeat				
Parking Lights (+)	Gray	+	At Light Switch	
Parking Lights (-)				
Hazards				
Turn Signal (Left)				
Turn Signal (Right)				

#### DirectWire Vehicle Information - 3/12/2010 7:49:48 AM

# Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location		
Headlight	Wife Color	Polarity	Wife Location		
AutoLights					
Reverse Light	Brown/Yellow		Back of Brown Connector Drivers Kick		
Left Front Door Trigger	Brown/ Yellow	-	Panel		
Right Front Door Trigger	Brown/White	-	Back of Brown Connector Drivers Kick Panel		
Left Rear Door Trigger	Brown/White	-	Back of Brown Connector Drivers Kick Panel		
Right Rear Door Trigger	Brown/White	-	Back of Brown Connector Drivers Kick Panel		
Dome Supervision					
Trunk/Hatch Pin	Brown/Blue	-	Behind Right Hand side of Cluster		
Rear Glass Pin					
Hood Pin	Brown/Purple	-	At Left Hand Side Blue Instrument Cluster Plug		
Trunk Hatch/Release	Red	-	Gray Connector in Driver Door		
Trunk Release Motor	Red	-	Gray Connector in Driver Door		
Fuel Door Release					
Power Sliding Door (Left)					
Power Sliding Door (Right)					
Factory Alarm Arm	With Unlock	-	In Drivers Door		
Factory Alarm Disarm	With Lock	-	In Drivers Door		
Disarm No Unlock					
Trunk Alarm Shunt					
Tachometer	Lt.Green/Blue	1 Cyl	At One Of the Coil		
Wait to Start					
Neutral Safety					
Clutch Pedal	Gray/White	+	At Clutch Switch		
Fuel Pump					
Rear Defroster					
Mirror Defroster					
Left Front Heated Seat					
Right Front Heated Seat					

## Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
Speed Sense			
Brake Wire	Red/Black	+	Green Connector Drivers Kick Panel
Parking Brake	Brown/White	-	Green Connector Drivers Kick Panel
Horn Trigger	Black/White	+	Drivers Kick Panel (Red Connector)
Wipers			
Left Front Window (Up/Down)			
Right Front Window (Up/Down)			
Left Rear Window (Up/Down)			
Right Rear Window (Up/Down)			
Sun Roof (Open/Close)			
Sun Roof (Limit/Close)			
Memory Seat 1			
Memory Seat 2			
Memory Seat 3			
Radio 12V			
Radio Ground			
Radio Ignition			
Radio Illumination			
Factory Amp Turn-on			
Power Antenna			
Left Front Speaker (+/-)			
Right Front Speaker (+/-)			
Left Rear Speaker (+/-)			
Right Rear Speaker (+/-)			
Center Channel (+/-)			
Subwoofer (+/-)			
Aux. Audio Input Left (+/-)			
Aux. Audio Input Right (+/-)			
RSE Video (+/-)			
RSE Audio Left (+/-)			
RSE Audio Right (+/-)			
Satellite Radio 12 Volts			
Satellite Radio Ground			
Satellite Radio Ignition			
Satellite Radio Antenna			
Satellite Audio Left (+/-)			
Satellite Audio Right (+/-)			

#### What Fits

Item	Size	Depth	Location
Headunit			
Left Front Speaker			
Left Front Tweeter			
Right Front Speaker			
Right Front Tweeter			
Left Rear Speaker			
Left Rear Tweeter			
Right Rear Speaker			
Right Rear Tweeter			
Center Channel			
Subwoofer			
Left Front Headrest			
Right Front Headrest			
Left Right Headrest			
Right Rear Headrest			
Satellite Radio Tuner			

#### Smart Starter Kill Relay

Relay Type:	n/a
Part #:	n/a
OE Relay Part #:	
Location:	n/a

	Notes:	
n/a		
	Alternate Part Notes:	
n/a		



#### DirectWire Vehicle Information - 3/12/2010 7:49:48 AM

## Additional Wiring Notes

Item	Note
Power Lock	In some models with Telematic option (GPS), the wires can be found in the driver kick panel.
Power Unlock	In some models with Telematic option (GPS), the wires can be found in the driver kick panel.
Hood Pin	Can also be found at the Gray connector in Drivers kick panel
Clutch Pedal	You need to send a negative Start Pulse.