

## 2000 Audi A4



There is no exterior photo for this vehicle.



## Wiring Information

Item	Wire Color	Polarity	Wire Location
<b>12 Volts</b>		+	battery terminal
<b>Second 12 Volts</b>			
<b>Starter</b>	black/red	+	ignition switch
<b>Second Starter</b>			
<b>Ignition</b>	black	+	rear of fuse box corresponding to fuse 31
<b>Second Ignition</b>			
<b>Third Ignition</b>			
<b>Accessory</b>			
<b>Second Accessory</b>			
<b>Third Accessory</b>			
<b>Key Sense</b>			
<b>Data Bus</b>			
<b>Can Bus High</b>			
<b>Can Bus Low</b>			
<b>Can Bus Sw</b>			
<b>Power Lock</b>	blue/white	-	window winder motor, black (small) 12 way, pos. 6
<b>Power Unlock</b>	violet/green	-	window winder motor, black (small) 12 way, pos. 7
<b>Lock Motor</b>			
<b>Unlock Motor</b>			
<b>Disarm Defeat</b>			
<b>Parking Lights (+)</b>			
<b>Parking Lights (-)</b>			
<b>Hazards</b>			
<b>Turn Signal (Left)</b>	black/green (F), black/green (S), green/black (R)	+	ctrl unit fitted on left side of steering column
<b>Turn Signal (Right)</b>	green/blue (F), black/blue (S), black/blue (R)	+	ctrl unit fitted on left side of steering column

*Wiring Information (Continued)*

Item	Wire Color	Polarity	Wire Location
<b>Headlight</b>			
<b>AutoLights</b>			
<b>Reverse Light</b>			
<b>Left Front Door Trigger</b>	brown/white		control unit, black (the bigger one) 12 way, pos. 2
<b>Right Front Door Trigger</b>			
<b>Left Rear Door Trigger</b>			
<b>Right Rear Door Trigger</b>			
<b>Dome Supervision</b>			
<b>Trunk/Hatch Pin</b>	white/yellow (basic), 2 x grey/green (high range)		control unit
<b>Rear Glass Pin</b>			
<b>Hood Pin</b>	brown or brown/violet		control unit, red 20 way, pos. 20
<b>Trunk Hatch/Release</b>			
<b>Trunk Release Motor</b>			
<b>Fuel Door Release</b>			
<b>Power Sliding Door (Left)</b>			
<b>Power Sliding Door (Right)</b>			
<b>Factory Alarm Arm</b>			
<b>Factory Alarm Disarm</b>			
<b>Disarm No Unlock</b>			
<b>Trunk Alarm Shunt</b>			
<b>Tachometer</b>			
<b>Wait to Start</b>			
<b>Neutral Safety</b>			
<b>Clutch Pedal</b>			
<b>Fuel Pump</b>	green/yellow (gasoline), brown/grey (diesel)		see notes
<b>Rear Defroster</b>			
<b>Mirror Defroster</b>			
<b>Left Front Heated Seat</b>			
<b>Right Front Heated Seat</b>			

*Wiring Information (Continued)*

Item	Wire Color	Polarity	Wire Location
Speed Sense			
Brake Wire			
Parking Brake			
Horn Trigger			
Wipers			
Left Front Window (Up/Down)			
Right Front Window (Up/Down)			
Left Rear Window (Up/Down)			
Right Rear Window (Up/Down)			
Sun Roof (Open/Close)			
Sun Roof (Limit/Close)			
Memory Seat 1			
Memory Seat 2			
Memory Seat 3			
Radio 12V			
Radio Ground			
Radio Ignition			
Radio Illumination			
Factory Amp Turn-on			
Power Antenna			
Left Front Speaker (+/-)			
Right Front Speaker (+/-)			
Left Rear Speaker (+/-)			
Right Rear Speaker (+/-)			
Center Channel (+/-)			
Subwoofer (+/-)			
Aux. Audio Input Left (+/-)			
Aux. Audio Input Right (+/-)			
RSE Video (+/-)			
RSE Audio Left (+/-)			
RSE Audio Right (+/-)			
Satellite Radio 12 Volts			
Satellite Radio Ground			
Satellite Radio Ignition			
Satellite Radio Antenna			
Satellite Audio Left (+/-)			
Satellite Audio Right (+/-)			

*What Fits*

Item	Size	Depth	Location
Headunit			
Left Front Speaker			
Left Front Tweeter			
Right Front Speaker			
Right Front Tweeter			
Left Rear Speaker			
Left Rear Tweeter			
Right Rear Speaker			
Right Rear Tweeter			
Center Channel			
Subwoofer			
Left Front Headrest			
Right Front Headrest			
Left Right Headrest			
Right Rear Headrest			
Satellite Radio Tuner			

*Smart Starter Kill Relay*



Relay Type:	n/a
Part #:	n/a
OE Relay Part #:	
Location:	n/a

<b>Notes:</b>
n/a

<b>Alternate Part Notes:</b>
n/a



*Additional Wiring Notes*

Item	Note
<b>Turn Signal (Left)</b>	The front left wire is in the black 23 way, pos. 4. The side left wire is in the grey 32 way, pos. 21. The rear left wire is in the black 23 way, pos. 7.
<b>Turn Signal (Right)</b>	The front right wire is in the black 23 way, pos. 6. The side right wire is in the grey 32 way, pos. 22. The rear right wire is in the black 23 way, pos. 9.
<b>Fuel Pump</b>	On gasoline vehicles, the wire is in the rear of the fuse box corresponding to fuse 34. On diesel vehicles, the wire is at a relay marked 219, located in the watertight container of the engine compartment, from the driver side.
<b>Power Lock</b>	The window winder motor is located inside the driver side door.
<b>Power Unlock</b>	The window winder motor is located inside the driver side door.
<b>Left Front Door Trigger</b>	The control unit is located under the floor moquette, in front of the driver side seat.
<b>Hood Pin</b>	The control unit is located under the floor moquette, in front of the driver side seat.
<b>Trunk/Hatch Pin</b>	The control unit is located under the floor moquette, in front of the driver side seat. On the basic version, the wire is in the brown 16 way, pos. 11. On the high range version, the wire is in the black (the bigger one) 12 way, pos. 1.