

2008 Audi A6



Wiring Information

| Item | Wire Color | Polarity | Wire Location |
|----------------------------|---|------------|--|
| 12 Volts | red (110A) | + | driver dash 9 position relay panel |
| Second 12 Volts | N/A | | |
| Starter | black/red (for starter kill only) | + | driver dash 9 position relay panel |
| Second Starter | N/A | | |
| Ignition | black (for ignition sense only) | + | driver dash 9 position relay panel |
| Second Ignition | N/A | | |
| Third Ignition | N/A | | |
| Accessory | black/yellow (for accessory sense only) | + | driver dash 9 position relay panel |
| Second Accessory | N/A | | |
| Third Accessory | N/A | | |
| Key Sense | N/A | | |
| Data Bus | N/A | | |
| Can Bus High | orange/green | data | driver kick, door harness |
| Can Bus Low | orange/brown | data | driver kick, door harness |
| Can Bus Sw | N/A | | |
| Power Lock | purple/red | - resistor | Driver Door Control Module, 32 pin plug, pin 28 |
| Power Unlock | same as power lock | - resistor | |
| Lock Motor | brown/green | 5 wire | Driver Door Control Module, 20 pin plug, pin 11 |
| Unlock Motor | green | 5 wire | Driver Door Control Module, 20 pin plug, pin 13 |
| Disarm Defeat | green | 5 wire | Front Passenger Door Control Module, 20 pin plug, pin 13 |
| Parking Lights (+) | gray/black (LF), black/red (RF) | + | VESCM, 32 pin plug, pins 4 and 15 |
| Parking Lights (-) | | | |
| Hazards | red/yellow | - | hazard switch or VESCM, 32 pin plug, pin 22 |
| Turn Signal (Left) | black/blue (LF) | + | VESCM, 32 pin plug, pin 3 |
| Turn Signal (Right) | green/yellow (RF) | + | VESCM, 32 pin plug, pin 14 |

Wiring Information (Continued)

| Item | Wire Color | Polarity | Wire Location |
|-----------------------------------|--------------------------------------|------------|---|
| Headlight | black/green (L), yellow/white (R) | + | VESCM, 10 pin plug, pins 10 and 4 |
| AutoLights | | | |
| Reverse Light | blue/red | + | Comfort System Control Module, 15 pin plug, pin 6 |
| Left Front Door Trigger | gray/yellow | - | Driver Door Control Module, 20 pin plug, pin 5 |
| Right Front Door Trigger | gray/yellow | - | Front Pass Door Control Module, 20 pin plug, pin 5 |
| Left Rear Door Trigger | gray/yellow | - | Left Rear Door Control Module, 20 pin plug, pin 5 |
| Right Rear Door Trigger | gray/yellow | - | Right Rear Door Control Module, 20 pin plug, pin 5 |
| Dome Supervision | brown/blue | - | Comfort System Control Module, 15 pin plug, pin 14 |
| Trunk/Hatch Pin | white/yellow or purple | - | Comfort System Control Module, 32 pin plug, pin 22 or 7 |
| Rear Glass Pin | N/A | | |
| Hood Pin | brown/purple | - | VESCM, 32 pin plug, pin 21 |
| Trunk Hatch/Release | red/green | - | Driver Door Control Module, 32 pin plug, pin 23 |
| Trunk Release Motor | green/gray | 5 wire | Comfort System Control Module, 10 pin plug, pin 1 |
| Fuel Door Release | gray/brown | - | Driver Door Control Module, 32 pin plug, pin 22 |
| Power Sliding Door (Left) | N/A | | |
| Power Sliding Door (Right) | N/A | | |
| Factory Alarm Arm | blue/white | - resistor | Driver Door Control Module, 20 pin plug, pin 1 |
| Factory Alarm Disarm | same as factory alarm arm | - resistor | |
| Disarm No Unlock | | | |
| Trunk Alarm Shunt | black/brown | - | Comfort System Control Module, 32 pin plug, pin 24 |
| Tachometer | black/stripe or brown/stripe | ac | any fuel injector |
| Wait to Start | N/A | | |
| Neutral Safety | N/A | | |
| Clutch Pedal | N/A | | |
| Fuel Pump | red/yellow | + | driver kick, harness to rear |
| Rear Defroster | red/brown | + latched | Comfort System Control Module, 32 pin plug, pin 6 |
| Mirror Defroster | black/red | + | Driver and Passenger Door Control Module, 16 pin plug, pin 15 |
| Left Front Heated Seat | black/blue | 5 wire | Climatronic Control Module, 3 pin plug, pin 1 |
| Right Front Heated Seat | black/yellow | 5 wire | Climatronic Control Module, 3 pin plug, pin 3 |

Wiring Information (Continued)

| Item | Wire Color | Polarity | Wire Location |
|-------------------------------------|--|------------|--|
| Speed Sense | (wheel speed sensor) | | |
| Brake Wire | red/black | + | brake switch, 4 pin plug, pin 4 |
| Parking Brake | | | |
| Horn Trigger | black/white | + | VESCM, 32 pin plug, pin 17 |
| Wipers | (data bus) | | |
| Left Front Window (Up/Down) | use factory alarm arm/disarm | | |
| Right Front Window (Up/Down) | see left front window | | |
| Left Rear Window (Up/Down) | see left front window | | |
| Right Rear Window (Up/Down) | see left front window | | |
| Sun Roof (Open/Close) | use factory alarm arm/disarm | | |
| Sun Roof (Limit/Close) | N/A | | |
| Memory Seat 1 | gray | - resistor | Driver Door Control Module, 32 pin plug, pin 19 |
| Memory Seat 2 | same as memory seat 1 | - resistor | |
| Memory Seat 3 | N/A | | |
| Radio 12V | red/blue | + | radio, 8 pin plug, pin 2 |
| Radio Ground | brown | - | radio, 8 pin plug, pin 1 |
| Radio Ignition | (data bus) | | |
| Radio Illumination | (data bus) | | |
| Factory Amp Turn-on | (data bus) | | |
| Power Antenna | | | |
| Left Front Speaker (+/-) | wht/yel - brn/yel (lo); blk/yel - brn/red (mid/hi) | +,- | amplifier, 32 pin plug, pins 3 and 15; 6 and 18 |
| Right Front Speaker (+/-) | wht/blk - brn/blk (lo); blu/yel - brn/grn (mid/hi) | +,- | amplifier, 32 pin plug, pins 4 and 16; 7 and 19 |
| Left Rear Speaker (+/-) | red/purple - brown/purple | +,- | amplifier, 32 pin plug, pins 8 and 20 |
| Right Rear Speaker (+/-) | white/green - blue/green | +,- | amplifier, 32 pin plug, pins 9 and 21 |
| Center Channel (+/-) | blue - brown/blue (BOSE) | +,- | amplifier, 32 pin plug, pins 13 and 14, or 28 and 23 |
| Subwoofer (+/-) | red/green - brown/green | +,- | amplifier, 32 pin plug, pins 12 and 11, or 14 and 13 |
| Aux. Audio Input Left (+/-) | (MOST bus) | | |
| Aux. Audio Input Right (+/-) | (MOST bus) | | |
| RSE Video (+/-) | N/A | | |
| RSE Audio Left (+/-) | N/A | | |
| RSE Audio Right (+/-) | N/A | | |

Copyright © 2011 Directed Electronics. All Rights Reserved. DirectWire and its vehicle information are for the sole use of authorized Directed Electronics personnel and its participating dealers and distributors. The information contained on these pages may contain confidential and privileged information. Any unauthorized review, use, disclosure or distribution is prohibited.

| DirectWire Vehicle Information - 2/20/2012 1:42:41 AM | | | |
|---|-----------------|---|------------------------------------|
| Satellite Radio 12 Volts | red/yellow | + | Satellite Radio, 8 pin plug, pin 2 |
| Satellite Radio Ground | brown | - | Satellite Radio, 8 pin plug, pin 1 |
| Satellite Radio Ignition | (data bus) | | |
| Satellite Radio Antenna | (coaxial cable) | | |
| Satellite Audio Left (+/-) | (MOST bus) | | |
| Satellite Audio Right (+/-) | (MOST bus) | | |

Copyright © 2011 Directed Electronics. All Rights Reserved. DirectWire and its vehicle information are for the sole use of authorized Directed Electronics personnel and its participating dealers and distributors. The information contained on these pages may contain confidential and privileged information. Any unauthorized review, use, disclosure or distribution is prohibited.

What Fits

| Item | Size | Depth | Location |
|------------------------------|-----------|-------|---------------------------------|
| Headunit | irregular | | center of dash |
| Left Front Speaker | 6.5 | | left front door |
| Left Front Tweeter | | | left front door |
| Right Front Speaker | 6.5 | | right front door |
| Right Front Tweeter | | | right front door |
| Left Rear Speaker | 6.5 | | left rear door |
| Left Rear Tweeter | | | left rear door |
| Right Rear Speaker | 6.5 | | right rear door |
| Right Rear Tweeter | | | right rear door |
| Center Channel | | | top center of dash |
| Subwoofer | | | top center of rear deck (sedan) |
| Left Front Headrest | | | |
| Right Front Headrest | | | |
| Left Right Headrest | | | |
| Right Rear Headrest | | | |
| Satellite Radio Tuner | | | |

Additional Wiring Notes

| Item | Note |
|----------------------------------|---|
| Trunk Release Motor | The Comfort System Control Module is in the right side of the luggage compartment. |
| Trunk Alarm Shunt | The Comfort System Control Module is in the right side of the luggage compartment. |
| Hood Pin | The VESCM (Vehicle Electrical System Control Module) is under the driver dash, on the relay and fuse panel. |
| Trunk/Hatch Pin | The Comfort System Control Module is in the right side of the luggage compartment. |
| Reverse Light | The Comfort System Control Module is in the right side of the luggage compartment. |
| Hazards | The VESCM (Vehicle Electrical System Control Module) is under the driver dash, on the relay and fuse panel. |
| Parking Lights (+) | The VESCM (Vehicle Electrical System Control Module) is under the driver dash, on the relay and fuse panel. The left rear - right rear wires are gray/black - gray/red (sedan), or green/black - gray (wagon) (+) at the Comfort System Control Module, 15 pin plug, pins 1 and 7. The Comfort System Control Module is in the right side of the luggage compartment. |
| Turn Signal (Left) | The VESCM (Vehicle Electrical System Control Module) is under the driver dash, on the relay and fuse panel. The left rear wire is green/gray (+) at the Comfort System Control Module, 32 pin plug, pin 3 (sedan), or red/white (+) in the 15 pin plug, pin 3 (wagon). The Comfort System Control Module is in the right side of the luggage compartment. |
| Turn Signal (Right) | The VESCM (Vehicle Electrical System Control Module) is under the driver dash, on the relay and fuse panel. The right rear wire is blue (+) at the Comfort System Control Module, 32 pin plug, pin 4 (sedan), or black/white (+) in the 15 pin plug, pin 5 (wagon). The Comfort System Control Module is in the right side of the luggage compartment. |
| Headlight | The VESCM (Vehicle Electrical System Control Module) is under the driver dash, on the relay and fuse panel. |
| Horn Trigger | The VESCM (Vehicle Electrical System Control Module) is under the driver dash, on the relay and fuse panel. |
| Subwoofer (+/-) | The amplifier is in the left side of the luggage compartment. |
| Dome Supervision | The Comfort System Control Module is in the right side of the luggage compartment. |
| Rear Defroster | The Comfort System Control Module is in the right side of the luggage compartment. |
| Left Front Speaker (+/-) | The amplifier is in the left side of the luggage compartment. On vehicles with BOSE systems, the low wires are in pins 5 and 17, and the mid/high wires are in pins 8 and 7, or 27 and 32. |
| Right Front Speaker (+/-) | The amplifier is in the left side of the luggage compartment. On vehicles with BOSE systems, the low wires are in pins 16 and 15, and the mid/high wires are in pins 4 and 3, or 24 and 29. |
| Left Rear Speaker (+/-) | The amplifier is in the left side of the luggage compartment. On vehicles with BOSE systems, the speaker wires are in pins 22 and 21, or 25 and 30. |
| Right Rear Speaker (+/-) | The amplifier is in the left side of the luggage compartment. On vehicles with BOSE systems, the speaker wires are in pins 20 and 19, or 26 and 31. |
| Center Channel (+/-) | The amplifier is in the left side of the luggage compartment. |
| Starter | USE INTERFACE MODULE FOR REMOTE START! |