

2000 Porsche 911 Carrera 996



Wiring Information

Item	Wire Color	Polarity	Wire Location
12 Volts	red/white	+	ignition harness
Second 12 Volts			
Starter	yellow	+	ignition harness
Second Starter			
Ignition	black	+	ignition harness
Second Ignition	orange	+	ignition harness
Third Ignition			
Accessory	black/yellow	+	ignition harness
Second Accessory			
Third Accessory			
Key Sense			
Data Bus			
Can Bus High			
Can Bus Low			
Can Bus Sw			
Power Lock	brown/white	-	alarm/door lock module
Power Unlock	brown/red	-	alarm/door lock module
Lock Motor	green/red		alarm/door lock module
Unlock Motor	blue/yellow		alarm/door lock module
Disarm Defeat			
Parking Lights (+)	gray/black (L), gray/red (R)	+	headlight switch
Parking Lights (-)			
Hazards			
Turn Signal (Left)	black/white	+	alarm/door lock module, black 12 pin plug, pin 6
Turn Signal (Right)	black/green	+	alarm/door lock module, black 12 pin plug, pin 12

Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
Headlight	white/black	+	headlight switch
AutoLights			
Reverse Light			
Left Front Door Trigger	brown/green/white	-	alarm/door lock module
Right Front Door Trigger	brown/green	-	alarm/door lock module
Left Rear Door Trigger	N/A		
Right Rear Door Trigger	N/A		
Dome Supervision	comes on with unlock		
Trunk/Hatch Pin	yellow/brown (front)	-	alarm/door lock module
Rear Glass Pin			
Hood Pin	brown/red/blk (rear)	-	alarm/door lock module
Trunk Hatch/Release			
Trunk Release Motor			
Fuel Door Release			
Power Sliding Door (Left)			
Power Sliding Door (Right)			
Factory Alarm Arm	arms with lock		
Factory Alarm Disarm	disarms with unlock		
Disarm No Unlock			
Trunk Alarm Shunt			
Tachometer	purple/green	ac	diag conn under driver dash
Wait to Start			
Neutral Safety			
Clutch Pedal			
Fuel Pump			
Rear Defroster			
Mirror Defroster			
Left Front Heated Seat			
Right Front Heated Seat			

Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
Speed Sense	gray/pink	ac	alarm/door lock module or radio
Brake Wire	blk/yel or blk/org	+	brake pedal switch
Parking Brake			
Horn Trigger	brown/white	-	steering column
Wipers	blk/wht (L), grn (H)	+	steering column
Left Front Window (Up/Down)			
Right Front Window (Up/Down)			
Left Rear Window (Up/Down)			
Right Rear Window (Up/Down)			
Sun Roof (Open/Close)			
Sun Roof (Limit/Close)			
Memory Seat 1			
Memory Seat 2			
Memory Seat 3			
Radio 12V	red/black	+	radio
Radio Ground	brown	-	radio
Radio Ignition	orange	+	radio
Radio Illumination	gray/blue (dimmer)	+	radio
Factory Amp Turn-on	black/red	+	radio
Power Antenna	white	+	radio
Left Front Speaker (+/-)	yellow - yellow/brown	+,-	radio or amplifier in front luggage compartment
Right Front Speaker (+/-)	red - red/brown	+,-	radio or amplifier in front luggage compartment
Left Rear Speaker (+/-)	white - brown/white	+,-	radio or amplifier in front luggage compartment
Right Rear Speaker (+/-)	blue - brown/blue	+,-	radio or amplifier in front luggage compartment
Center Channel (+/-)			
Subwoofer (+/-)			
Aux. Audio Input Left (+/-)			
Aux. Audio Input Right (+/-)			
RSE Video (+/-)			
RSE Audio Left (+/-)			
RSE Audio Right (+/-)			
Satellite Radio 12 Volts			
Satellite Radio Ground			
Satellite Radio Ignition			
Satellite Radio Antenna			
Satellite Audio Left (+/-)			
Satellite Audio Right (+/-)			

What Fits

Item	Size	Depth	Location
Headunit	DIN	8	center of dash
Left Front Speaker	4		left front dash
Left Front Tweeter			
Right Front Speaker	4		right front dash
Right Front Tweeter			
Left Rear Speaker	4		left rear side panel
Left Rear Tweeter			
Right Rear Speaker	4		right rear side panel
Right Rear Tweeter			
Center Channel			
Subwoofer			
Left Front Headrest			
Right Front Headrest			
Left Right Headrest			
Right Rear Headrest			
Satellite Radio Tuner			

Additional Wiring Notes

Item	Note
Left Front Speaker (+/-)	On models with amplifier, the door speaker wires are green - brown/green.
Right Front Speaker (+/-)	On models with amplifier, the door speaker wires are purple - brown/purple.
Left Front Door Trigger	The alarm/door lock module is under the driver seat.
Driver Unlock Motor	The alarm/door lock module is under the driver seat.
Hood Pin	The alarm/door lock module is under the driver seat.
Left Front Window (Up/Down)	Comfort open is yel/blue or yel/blue/red at the alarm/door lock module. Comfort close is yel/gray or yel/gray/blue.
Lock Motor	The alarm/door lock module is under the driver seat.
Power Lock	The alarm/door lock module is under the driver seat.
Power Unlock	The alarm/door lock module is under the driver seat.
Sun Roof (Open/Close)	Comfort open is yel/blue or yel/blue/red at the alarm/door lock module. Comfort close is yel/gray or yel/gray/blue.
Trunk/Hatch Pin	The alarm/door lock module is under the driver seat.
Speed Sense	The alarm/door lock module is under the driver seat.
Left Front Window (Up/Down)	Comfort open is yel/blue or yel/blue/red at the alarm/door lock module. Comfort close is yel/gray or yel/gray/blue.
Turn Signal (Left)	The alarm/door lock module is under the driver seat.
Turn Signal (Right)	The alarm/door lock module is under the driver seat.
Right Front Door Trigger	The alarm/door lock module is under the driver seat.