

1995 BMW 5 Series



There is no exterior photo for this vehicle.



Wiring Information

Item	Wire Color	Polarity	Wire Location
12 Volts			
Second 12 Volts			
Starter	black/yellow		ignition harness
Second Starter			
Ignition	green		ignition harness
Second Ignition			
Third Ignition			
Accessory	violet		ignition harness
Second Accessory			
Third Accessory			
Key Sense			
Data Bus			
Can Bus High			
Can Bus Low			
Can Bus Sw			
Power Lock	pin 7 blu/brn/yel	+	under pass side of rear seat
Power Unlock	pin 16 blu/red/yel	+	under pass side of rear seat
Lock Motor			
Unlock Motor			
Disarm Defeat			
Parking Lights (+)	blu/grn & blu/brn		yellow plug in driver kick
Parking Lights (-)			
Hazards			
Turn Signal (Left)			
Turn Signal (Right)			

Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
Headlight			
AutoLights			
Reverse Light			
Left Front Door Trigger	yellow/blue	-	under rear seat
Right Front Door Trigger			
Left Rear Door Trigger			
Right Rear Door Trigger			
Dome Supervision			
Trunk/Hatch Pin	wht/red or brn/wht		at the bootlight
Rear Glass Pin			
Hood Pin	purple/green/yellow		30 pin conn under column
Trunk Hatch/Release	brown/white	+	at the switch
Trunk Release Motor			
Fuel Door Release			
Power Sliding Door (Left)			
Power Sliding Door (Right)			
Factory Alarm Arm			
Factory Alarm Disarm			
Disarm No Unlock			
Trunk Alarm Shunt			
Tachometer	black		diagnostic plug under bonnet
Wait to Start			
Neutral Safety			
Clutch Pedal			
Fuel Pump			
Rear Defroster			
Mirror Defroster			
Left Front Heated Seat			
Right Front Heated Seat			

Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
Speed Sense			
Brake Wire	black/green		brake pedal switch
Parking Brake			
Horn Trigger	blue/black		steering column
Wipers			
Left Front Window (Up/Down)	white/black		
Right Front Window (Up/Down)	black/brown		
Left Rear Window (Up/Down)			
Right Rear Window (Up/Down)			
Sun Roof (Open/Close)			
Sun Roof (Limit/Close)			
Memory Seat 1			
Memory Seat 2			
Memory Seat 3			
Radio 12V			
Radio Ground			
Radio Ignition			
Radio Illumination			
Factory Amp Turn-on			
Power Antenna			
Left Front Speaker (+/-)			
Right Front Speaker (+/-)			
Left Rear Speaker (+/-)			
Right Rear Speaker (+/-)			
Center Channel (+/-)			
Subwoofer (+/-)			
Aux. Audio Input Left (+/-)			
Aux. Audio Input Right (+/-)			
RSE Video (+/-)			
RSE Audio Left (+/-)			
RSE Audio Right (+/-)			
Satellite Radio 12 Volts			
Satellite Radio Ground			
Satellite Radio Ignition			
Satellite Radio Antenna			
Satellite Audio Left (+/-)			
Satellite Audio Right (+/-)			

What Fits

Item	Size	Depth	Location
Headunit			
Left Front Speaker			
Left Front Tweeter			
Right Front Speaker			
Right Front Tweeter			
Left Rear Speaker			
Left Rear Tweeter			
Right Rear Speaker			
Right Rear Tweeter			
Center Channel			
Subwoofer			
Left Front Headrest			
Right Front Headrest			
Left Right Headrest			
Right Rear Headrest			
Satellite Radio Tuner			

Smart Starter Kill Relay



Relay Type:	n/a
Part #:	n/a
OE Relay Part #:	
Location:	n/a

Notes:
n/a

Alternate Part Notes:
n/a