2009 BMW 7 Series (F01/F02/F03/F04)





Wiring Information

ltem	Wire Color	Polarity	Wire Location
12 Volts	red (40A)	+	Car Access System, 41 pin plug, pin 21
Second 12 Volts	N/A	т	
Starter	black (for starter kill only)	+ low curr	Car Access System, 41 pin plug, pin 22
Second Starter	N/A	1 IOW Cull	
Ignition	green (for ignition sense only)	+ low curr	Car Access System, 41 pin plug, pin 1
Second Ignition	N/A		
Third Ignition	N/A		
Accessory	N/A		
Second Accessory	N/A		
Third Accessory	N/A		
Key Sense	N/A		
Data Bus	N/A		
Can Bus High	yellow/red	data	Car Access System, 41 pin plug, pin 35
Can Bus Low	yellow/brown	data	Car Access System, 41 pin plug, pin 26
Can Bus Sw	N/A		
Power Lock	yellow/red	-	Car Access System, 26 pin plug (2B), pin 3
Power Unlock	same as power lock		
Lock Motor	purple or black	5 wire	Electronics Junction Box, rear, 47 pin plug, pin 36 or 14
Unlock Motor	orange	5 wire	Electronics Junction Box, rear, 47 pin plug, pin 18
Disarm Defeat	yellow/white	5 wire	Electronics Junction Box, rear, 47 pin plug, pin 19
Parking Lights (+)	black/brown (LF); black/blue (RF)	+	Footwell Module, 51 pin plg (3B), pin 50; 51 pin plg (2B), pin 8
Parking Lights (-)	(LIN bus)		
Hazards	brown/blue	-	Footwell Module, 26 pin plug, pin 18
Turn Signal (Left)	white/purple (F), blue/green (R)	+	Footwell Module, 51 pin plug (3B), pins 6 and 45
Turn Signal (Right)	white/black (F), blue/brown (R)	+	Footwell Module, 51 pin plug (2B), pins 4 and 12

Wiring Information (Continued)

ltem	Wire Color	Polority	Wire Location
		Polarity	
Headlight	yellow/green (L); yellow/blue (R)	+	Footwell Module, 51 pin plg (2B), pin 6; 51 pin plg (3B), pin 38
AutoLights			
Reverse Light	yellow/brown	+	Footwell Module, 51 pin plug (3B), pin 47
Left Front Door Trigger	purple/blue	-	Footwell Module, 51 pin plug (3B), pin 24
Right Front Door Trigger	orange	-	Footwell Module, 51 pin plug (3B), pin 13
Left Rear Door Trigger	gray/yellow	-	Footwell Module, 51 pin plug (3B), pin 26
Right Rear Door Trigger	green/yellow	-	Footwell Module, 51 pin plug (3B), pin 15
Dome Supervision	red/blue	+	Footwell Module, 51 pin plug (2B), pin 35
Trunk/Hatch Pin	gray/brown	- N.C.	Electronics Junction Box, 54 pin plug, pin 11
Rear Glass Pin	N/A		
Hood Pin	purple/green	-	Car Access System, 41 pin plug, pin 38
Trunk Hatch/Release	green/black	-	Car Access System, 41 pin plug, pin 39
Trunk Release Motor	gray/green	5 wire	Electronics Junction Box, rear, 47 pin plug, pin 12
Fuel Door Release	unlocks along with driver door		
Power Sliding Door (Left)	N/A		
Power Sliding Door (Right)	N/A		
Factory Alarm Arm	white/yellow	-	Footwell Module, 51 pin plug (3B), pin 42
Factory Alarm Disarm	white/blue (double pulse)	-	Footwell Module, 51 pin plug (3B), pin 46
Disarm No Unlock	Transponder and push-button start		
Trunk Alarm Shunt	N/A		
Tachometer	black	ac	data link connector, 16 pin plug, pin 9
Wait to Start	N/A		
Neutral Safety	N/A		
Clutch Pedal	N/A		
Fuel Pump	red/green	+	Fuel Pump Control, 16 pin plug, pin 1
Rear Defroster	blue/yellow	+ latched	Electronics Junction Box, rear, 47 pin plug, pin 4
Mirror Defroster	(LIN bus)		
Left Front Heated Seat	(CAN bus)		
Right Front Heated Seat	(CAN bus)		

Wiring Information (Continued)

Item	Wire Color	Pol	arit Wire Location
nem	Wile Color	y y	
Speed Sense	yellow/purple	ac	Car Access System, 41 pin plug, pin 31
Brake Wire	brown/gray (functions with ignition on only)	+	Car Access System, 41 pin plug, pin 32
Parking Brake	(electric parking brake)		
Horn Trigger	red/brown	+	dash fuse box, plug (8B), pin 6
Wipers	(LIN bus)		
Left Front Window (Up/Down)	use factory alarm arm/disarm		
Right Front Window (Up/Down)	see left front window		
Left Rear Window (Up/Down)	see left front window		
Right Rear Window (Up/Down)	see left front window		
Sun Roof (Open/Close)	use factory alarm arm/disarm		
Sun Roof (Limit/Close)	N/A		
Memory Seat 1	(LIN bus)		
Memory Seat 2	(LIN bus)		
Memory Seat 3	(LIN bus)		
Radio 12V	red/white	+	radio, 16 pin plug, pin 15
Radio Ground	brown	-	radio, 16 pin plug, pin 12
Radio Ignition	(CAN bus)		
Radio Illumination	(CAN bus)		
Factory Amp Turn-on	same as power antenna (HIFI), MOST bus (Top HIFI)		
Power Antenna	black/white	+	radio, 16 pin plug, pin 13
Left Front Speaker (+/-)	yellow/red - yellow/brown (preamp on HIFI)	+,-	radio, 16 pin plug, pins 3 and 7
Right Front Speaker (+/-)	purple/red - purple/brown (preamp on HIFI)	+,-	radio, 16 pin plug, pins 2 and 6
Left Rear Speaker (+/-)	brown/red - brown/blue (preamp on HIFI)	+,-	radio, 16 pin plug, pins 4 and 8
Right Rear Speaker (+/-)	green/red - green/brown (preamp on HIFI)	+,-	radio, 16 pin plug, pins 1 and 5
Center Channel (+/-)	black/white - black/purple	+,-	amplifier, 40 pin plug, pins 39 and 40 (HIFI)
Subwoofer (+/-)	black/red - black/brn (L); blue/red - blue/brn (R)	+,-	amplifier, 40 pin plug, pins 4 and 3; 23 and 22 (HIFI)
Aux. Audio Input Left (+/-)	red - (shield)	+,-	radio, 10 pin plug, pins 2 and 8
Aux. Audio Input Right (+/-)	white - (shield)	+,-	radio, 10 pin plug, pins 7 and 8
RSE Video (+/-)	blue - white	+,-	radio, 12 pin plug, pins 5 and 8
RSE Audio Left (+/-)	(MOST bus)		
RSE Audio Right (+/-)	(MOST bus)		
Satellite Radio 12 Volts	red/purple	+	Satellite Tuner, 3 pin plug, pin 1
OTT 1 1 0 0011			

Satente Radio ehicle Ground	Information - 7/3/2012 2:06:01 AM	-	Satellite Tuner, 3 pin plug, pin 3
Satellite Radio Ignition	(MOST bus)		
Satellite Radio Antenna	(coaxial cable)		
Satellite Audio Left (+/-)	(MOST bus)		
Satellite Audio Right (+/-)	(MOST bus)		

Copyright © 2011 Directed Electronics. All Rights Reserved. DirectWire and its vehicle information are for the sole use of authorized Directed Electronics personnel and it's participating dealers and distributors. The information contained on these pages may contain confidential and privileged information. Any unauthorized review, use, disclosure or distribution is prohibited.

What Fits

Item	Size	Depth	Location
Headunit	irregular		center of dash
Left Front Speaker			left front door
Left Front Tweeter			left front door
Right Front Speaker			right front door
Right Front Tweeter			right front door
Left Rear Speaker			left rear deck; left rear door
Left Rear Tweeter			left rear deck; left rear door
Right Rear Speaker			right rear deck; right rear door
Right Rear Tweeter			right rear deck; right rear door
Center Channel			top center of dash
Subwoofer			under left and right front seats
Left Front Headrest			
Right Front Headrest			
Left Right Headrest			
Right Rear Headrest			
Satellite Radio Tuner			left side of luggage compartment

Additional Wiring Notes

Turn Signal (Left)TheTurn Signal (Right)TheHeadlightTheDome SupervisionTheTrunk Release MotorTheTrunk Release MotorTheSatellite Radio 12 VoltsTheCenter Channel (+/-)TheSubwoofer (+/-)TheSubwoofer (+/-)TheLeft Front Speaker (+/-)TheLeft Rear Speaker (+/-)TheLeft Rear Speaker (+/-)TheHIFTheRight Rear Speaker (+/-)TheTrunk/Hatch PinTheMathematical Speaker (+/-)TheParking Lights (+)TheParking Lights (+)TheForFor	 a Satellite Tuner is in the left side of the luggage compartment. a amplifier is in the left side of the luggage compartment. On Top HIFI systems, they are in the pin plug, pins 5 and 15. a amplifier is in the left side of the luggage compartment. On Top HIFI systems, they are in the pin plug, pins 8 and 18; 6 and 16. a amplifier is in the left side of the luggage compartment. The speaker wires are black/red - ck/brown at the amplifier, 40 pin plug, pins 33 and 34 (HIFI), or 20 pin plug, pins 19 and 9 (Top I). a amplifier is in the left side of the luggage compartment. The speaker wires are blue/red - ck/brown at the amplifier, 40 pin plug, pins 11 and 12 (HIFI), or 20 pin plug, pins 17 and 7 (Top
Turn Signal (Left)TheTurn Signal (Right)TheHeadlightTheDome SupervisionTheTrunk Release MotorTheTrunk Release MotorTheSatellite Radio 12 VoltsTheCenter Channel (+/-)TheSubwoofer (+/-)TheSubwoofer (+/-)TheLeft Front Speaker (+/-)TheLeft Rear Speaker (+/-)TheLeft Rear Speaker (+/-)TheRight Rear Speaker (+/-)TheRight Rear Speaker (+/-)TheHIFandTrunk/Hatch PinTheBoxTheParking Lights (+)TheParking Lights (+)TheForFor	 a Footwell Module is in the driver kick. b Footwell Module is in the driver kick. c Electronics Junction Box is behind the glove box, attached to the right side of the dash fuse c Satellite Tuner is in the left side of the luggage compartment. c amplifier is in the left side of the luggage compartment. On Top HIFI systems, they are in the pin plug, pins 5 and 15. c amplifier is in the left side of the luggage compartment. On Top HIFI systems, they are in the pin plug, pins 8 and 18; 6 and 16. c amplifier is in the left side of the luggage compartment. The speaker wires are black/red - ck/brown at the amplifier, 40 pin plug, pins 33 and 34 (HIFI), or 20 pin plug, pins 19 and 9 (Top 1). c amplifier is in the left side of the luggage compartment. The speaker wires are blue/red - a/brown at the amplifier, 40 pin plug, pins 31 and 32 (HIFI), or 20 pin plug, pins 17 and 7 (Top 1). c amplifier is in the left side of the luggage compartment. The deck speaker wires are white/red nite/brown at the amplifier, 40 pin plug, pins 31 and 32 (HIFI), or 20 pin plug, pins 14 and 4 pit/PI). The door speaker wires are yellow/red - yellow/brown at the amplifier, 20 pin plug, pins 31 and 32 (HIFI). c amplifier is in the left side of the luggage compartment. The deck speaker wires are gray/red - yellow/brown at the amplifier, 40 pin plug, pins 31 and 32 (HIFI), or 20 pin plug, pins 14 and 4 pit/PI).
Turn Signal (Right)The HeadlightHeadlightThe Dome SupervisionThe DowTrunk Release MotorThe boxSatellite Radio 12 VoltsThe DowCenter Channel (+/-)The 20 pSubwoofer (+/-)The 20 pLeft Front Speaker (+/-)The blue HIFRight Front Speaker (+/-)The plueLeft Rear Speaker (+/-)The blue HIFLeft Rear Speaker (+/-)The blue HIFRight Rear Speaker (+/-)The gray HIFTrunk/Hatch PinThe boxReverse LightThe FoorHazardsThe Foor	 a Footwell Module is in the driver kick. b Footwell Module is in the driver kick. c Footwell Module is in the driver kick. c Footwell Module is in the driver kick. a Electronics Junction Box is behind the glove box, attached to the right side of the dash fuse c Satellite Tuner is in the left side of the luggage compartment. c amplifier is in the left side of the luggage compartment. On Top HIFI systems, they are in the pin plug, pins 5 and 15. c amplifier is in the left side of the luggage compartment. On Top HIFI systems, they are in the pin plug, pins 8 and 18; 6 and 16. c amplifier is in the left side of the luggage compartment. The speaker wires are black/red - ck/brown at the amplifier, 40 pin plug, pins 33 and 34 (HIFI), or 20 pin plug, pins 19 and 9 (Top 1). c amplifier is in the left side of the luggage compartment. The speaker wires are blue/red - ek/brown at the amplifier, 40 pin plug, pins 31 and 32 (HIFI), or 20 pin plug, pins 17 and 7 (Top 1). c amplifier is in the left side of the luggage compartment. The deck speaker wires are white/red nite/brown at the amplifier, 40 pin plug, pins 31 and 32 (HIFI), or 20 pin plug, pins 14 and 4 pit/PI). The door speaker wires are yellow/red - yellow/brown at the amplifier, 20 pin plug, pins 11 and 12 (HIFI), or 20 pin plug, pins 14 and 4 pit/PI). c amplifier is in the left side of the luggage compartment. The deck speaker wires are white/red nite/brown at the amplifier, 40 pin plug, pins 31 and 32 (HIFI), or 20 pin plug, pins 14 and 4 pit/PI). c amplifier is in the left side of the luggage compartment. The deck speaker wires are gray/red - y/brown at the amplifier, 40 pin plug, pins 13 and 21 (HIFI), or 20 pin plug, pins 13 and 3 (Top Y)
HeadlightTheDome SupervisionTheTrunk Release MotorTheTrunk Release MotorTheSatellite Radio 12 VoltsTheCenter Channel (+/-)TheSubwoofer (+/-)TheLeft Front Speaker (+/-)TheRight Front Speaker (+/-)TheLeft Rear Speaker (+/-)TheImage: Right Rear Speaker (+/-)TheRight Rear Speaker (+/-)TheRight Rear Speaker (+/-)TheMarcel Reverse LightTheHazardsTheDoxTheReverse LightTheParking Lights (+)TheForTheContent of the parking Lights (+)TheContent of the parking Lights (+)The	 a Footwell Module is in the driver kick. b Footwell Module is in the driver kick. c Electronics Junction Box is behind the glove box, attached to the right side of the dash fuse c Satellite Tuner is in the left side of the luggage compartment. c amplifier is in the left side of the luggage compartment. On Top HIFI systems, they are in the pin plug, pins 5 and 15. c amplifier is in the left side of the luggage compartment. On Top HIFI systems, they are in the pin plug, pins 8 and 18; 6 and 16. c amplifier is in the left side of the luggage compartment. The speaker wires are black/red - ck/brown at the amplifier, 40 pin plug, pins 33 and 34 (HIFI), or 20 pin plug, pins 19 and 9 (Top 1). c amplifier is in the left side of the luggage compartment. The speaker wires are blue/red - e/brown at the amplifier, 40 pin plug, pins 11 and 12 (HIFI), or 20 pin plug, pins 17 and 7 (Top 1). c amplifier is in the left side of the luggage compartment. The deck speaker wires are white/red nite/brown at the amplifier, 40 pin plug, pins 31 and 32 (HIFI), or 20 pin plug, pins 14 and 4 p HIFI). The door speaker wires are yellow/red - yellow/brown at the amplifier, 20 pin plug, pins 31 and 32 (HIFI), or 20 pin plug, pins 14 and 4 p HIFI).
Dome SupervisionTheTrunk Release MotorTheTrunk Release MotorTheSatellite Radio 12 VoltsTheCenter Channel (+/-)TheSubwoofer (+/-)TheSubwoofer (+/-)TheLeft Front Speaker (+/-)TheRight Front Speaker (+/-)TheLeft Rear Speaker (+/-)TheSubwoofer Speaker (+/-)TheLeft Rear Speaker (+/-)TheMight Rear Speaker (+/-)TheRight Rear Speaker (+/-)TheMight Rear Speaker (+/-)TheMight Rear Speaker (+/-)TheBarting Lights (+)TheDotTheData Reverse LightTheHazardsTheData Reverse LightTheData Reverse LightThe <th> a Footwell Module is in the driver kick. b Electronics Junction Box is behind the glove box, attached to the right side of the dash fuse c Satellite Tuner is in the left side of the luggage compartment. c amplifier is in the left side of the luggage compartment. On Top HIFI systems, they are in the pin plug, pins 5 and 15. c amplifier is in the left side of the luggage compartment. On Top HIFI systems, they are in the pin plug, pins 8 and 18; 6 and 16. c amplifier is in the left side of the luggage compartment. The speaker wires are black/red - ck/brown at the amplifier, 40 pin plug, pins 33 and 34 (HIFI), or 20 pin plug, pins 19 and 9 (Top 1). c amplifier is in the left side of the luggage compartment. The speaker wires are blue/red - e/brown at the amplifier, 40 pin plug, pins 11 and 12 (HIFI), or 20 pin plug, pins 17 and 7 (Top 1). c amplifier is in the left side of the luggage compartment. The deck speaker wires are white/red - inte/brown at the amplifier, 40 pin plug, pins 31 and 32 (HIFI), or 20 pin plug, pins 14 and 4 p HIFI). The door speaker wires are yellow/red - yellow/brown at the amplifier, 20 pin plug, pins 11 (Top HIFI). c amplifier is in the left side of the luggage compartment. The deck speaker wires are white/red nite/brown at the amplifier, 40 pin plug, pins 31 and 32 (HIFI), or 20 pin plug, pins 14 and 4 p HIFI). The door speaker wires are yellow/red - yellow/brown at the amplifier, 20 pin plug, pins 11 (Top HIFI). </th>	 a Footwell Module is in the driver kick. b Electronics Junction Box is behind the glove box, attached to the right side of the dash fuse c Satellite Tuner is in the left side of the luggage compartment. c amplifier is in the left side of the luggage compartment. On Top HIFI systems, they are in the pin plug, pins 5 and 15. c amplifier is in the left side of the luggage compartment. On Top HIFI systems, they are in the pin plug, pins 8 and 18; 6 and 16. c amplifier is in the left side of the luggage compartment. The speaker wires are black/red - ck/brown at the amplifier, 40 pin plug, pins 33 and 34 (HIFI), or 20 pin plug, pins 19 and 9 (Top 1). c amplifier is in the left side of the luggage compartment. The speaker wires are blue/red - e/brown at the amplifier, 40 pin plug, pins 11 and 12 (HIFI), or 20 pin plug, pins 17 and 7 (Top 1). c amplifier is in the left side of the luggage compartment. The deck speaker wires are white/red - inte/brown at the amplifier, 40 pin plug, pins 31 and 32 (HIFI), or 20 pin plug, pins 14 and 4 p HIFI). The door speaker wires are yellow/red - yellow/brown at the amplifier, 20 pin plug, pins 11 (Top HIFI). c amplifier is in the left side of the luggage compartment. The deck speaker wires are white/red nite/brown at the amplifier, 40 pin plug, pins 31 and 32 (HIFI), or 20 pin plug, pins 14 and 4 p HIFI). The door speaker wires are yellow/red - yellow/brown at the amplifier, 20 pin plug, pins 11 (Top HIFI).
Trunk Release MotorThe boxSatellite Radio 12 VoltsThe Center Channel (+/-)The 20 pSubwoofer (+/-)The 20 pSubwoofer (+/-)The 20 pLeft Front Speaker (+/-)The blac HIFRight Front Speaker (+/-)The blue HIFLeft Rear Speaker (+/-)The blue gray HIFRight Rear Speaker (+/-)The blue HIFTrunk/Hatch PinThe box Reverse LightThe boxThe poxParking Lights (+)The Foor	 Electronics Junction Box is behind the glove box, attached to the right side of the dash fuse a Satellite Tuner is in the left side of the luggage compartment. a amplifier is in the left side of the luggage compartment. On Top HIFI systems, they are in the pin plug, pins 5 and 15. a amplifier is in the left side of the luggage compartment. On Top HIFI systems, they are in the pin plug, pins 8 and 18; 6 and 16. a amplifier is in the left side of the luggage compartment. The speaker wires are black/red - ck/brown at the amplifier, 40 pin plug, pins 33 and 34 (HIFI), or 20 pin plug, pins 19 and 9 (Top 1). a amplifier is in the left side of the luggage compartment. The speaker wires are blue/red - e/brown at the amplifier, 40 pin plug, pins 11 and 12 (HIFI), or 20 pin plug, pins 17 and 7 (Top 1). a amplifier is in the left side of the luggage compartment. The deck speaker wires are white/red nite/brown at the amplifier, 40 pin plug, pins 31 and 32 (HIFI), or 20 pin plug, pins 14 and 4 p HIFI). The door speaker wires are yellow/red - yellow/brown at the amplifier, 20 pin plug, pins 11 (Top HIFI). a amplifier is in the left side of the luggage compartment. The deck speaker wires are gray/red - yellow/brown at the amplifier, 40 pin plug, pins 31 and 32 (HIFI), or 20 pin plug, pins 14 and 4 p HIFI). The door speaker wires are yellow/red - yellow/brown at the amplifier, 20 pin plug, pins 14 and 4 p HIFI).
Satellite Radio 12 VoltsboxCenter Channel (+/-)The 20 pSubwoofer (+/-)The 20 pLeft Front Speaker (+/-)The blue HIFRight Front Speaker (+/-)The blue HIFLeft Rear Speaker (+/-)The blue HIFRight Rear Speaker (+/-)The gray HIFRight Rear Speaker (+/-)The blue HIFRight Rear Speaker (+/-)The blue HIFRight Rear Speaker (+/-)The gray HIFAnd Trunk/Hatch PinThe box The boxParking Lights (+)The For	 a Satellite Tuner is in the left side of the luggage compartment. b amplifier is in the left side of the luggage compartment. On Top HIFI systems, they are in the pin plug, pins 5 and 15. c amplifier is in the left side of the luggage compartment. On Top HIFI systems, they are in the pin plug, pins 8 and 18; 6 and 16. c amplifier is in the left side of the luggage compartment. The speaker wires are black/red - ck/brown at the amplifier, 40 pin plug, pins 33 and 34 (HIFI), or 20 pin plug, pins 19 and 9 (Top I). c amplifier is in the left side of the luggage compartment. The speaker wires are blue/red - ck/brown at the amplifier, 40 pin plug, pins 11 and 12 (HIFI), or 20 pin plug, pins 17 and 7 (Top I). c amplifier is in the left side of the luggage compartment. The deck speaker wires are white/red nite/brown at the amplifier, 40 pin plug, pins 31 and 32 (HIFI), or 20 pin plug, pins 14 and 4 p HIFI). The door speaker wires are yellow/red - yellow/brown at the amplifier, 20 pin plug, pins 11 (Top HIFI). c amplifier is in the left side of the luggage compartment. The deck speaker wires are gray/red - yellow/brown at the amplifier, 40 pin plug, pins 31 and 32 (HIFI), or 20 pin plug, pins 14 and 4 p HIFI). The door speaker wires are yellow/red - yellow/brown at the amplifier, 20 pin plug, pins 14 and 4 p HIFI).
Center Channel (+/-)The 20 pSubwoofer (+/-)The 20 pLeft Front Speaker (+/-)The blac HIFRight Front Speaker (+/-)The blue HIFLeft Rear Speaker (+/-)The blue HIFLeft Rear Speaker (+/-)The blue HIFRight Rear Speaker (+/-)The blue HIFRight Rear Speaker (+/-)The blue HIFRight Rear Speaker (+/-)The blue HIFRight Rear Speaker (+/-)The gray HIF andTrunk/Hatch PinThe box HIFParking Lights (+)The For	 amplifier is in the left side of the luggage compartment. On Top HIFI systems, they are in the pin plug, pins 5 and 15. amplifier is in the left side of the luggage compartment. On Top HIFI systems, they are in the pin plug, pins 8 and 18; 6 and 16. amplifier is in the left side of the luggage compartment. The speaker wires are black/red - ck/brown at the amplifier, 40 pin plug, pins 33 and 34 (HIFI), or 20 pin plug, pins 19 and 9 (Top 1). amplifier is in the left side of the luggage compartment. The speaker wires are blue/red - ck/brown at the amplifier, 40 pin plug, pins 11 and 12 (HIFI), or 20 pin plug, pins 17 and 7 (Top 1). amplifier is in the left side of the luggage compartment. The deck speaker wires are white/red nite/brown at the amplifier, 40 pin plug, pins 31 and 32 (HIFI), or 20 pin plug, pins 14 and 4 p HIFI). The door speaker wires are yellow/red - yellow/brown at the amplifier, 20 pin plug, pins 14 and 4 p HIFI). amplifier is in the left side of the luggage compartment. The deck speaker wires are gray/red - yellow/brown at the amplifier, 20 pin plug, pins 13 and 32 (HIFI), or 20 pin plug, pins 14 and 4 p HIFI).
20 pSubwoofer (+/-)The 20 pLeft Front Speaker (+/-)The blac HIFRight Front Speaker (+/-)The blue HIFLeft Rear Speaker (+/-)The blue HIFRight Rear Speaker (+/-)The gray HIFRight Rear Speaker (+/-)The blue gray HIFTrunk/Hatch PinThe boxReverse LightThe boxParking Lights (+)The point	 pin plug, pins 5 and 15. a amplifier is in the left side of the luggage compartment. On Top HIFI systems, they are in the pin plug, pins 8 and 18; 6 and 16. a amplifier is in the left side of the luggage compartment. The speaker wires are black/red - ck/brown at the amplifier, 40 pin plug, pins 33 and 34 (HIFI), or 20 pin plug, pins 19 and 9 (Top 1). a amplifier is in the left side of the luggage compartment. The speaker wires are blue/red - e/brown at the amplifier, 40 pin plug, pins 11 and 12 (HIFI), or 20 pin plug, pins 17 and 7 (Top 1). a amplifier is in the left side of the luggage compartment. The deck speaker wires are white/red nite/brown at the amplifier, 40 pin plug, pins 31 and 32 (HIFI), or 20 pin plug, pins 14 and 4 p HIFI). The door speaker wires are yellow/red - yellow/brown at the amplifier, 20 pin plug, pins nd 11 (Top HIFI). a amplifier is in the left side of the luggage compartment. The deck speaker wires are gray/red - yellow/brown at the amplifier, 40 pin plug, pins 31 and 32 (HIFI), or 20 pin plug, pins 14 and 4 p HIFI).
20 pLeft Front Speaker (+/-)The blacRight Front Speaker (+/-)The blueLeft Rear Speaker (+/-)The wh (Top 1 arRight Rear Speaker (+/-)The grayRight Rear Speaker (+/-)The grayTrunk/Hatch PinThe boxReverse LightThe boxHazardsThe For	pin plug, pins 8 and 18; 6 and 16. a amplifier is in the left side of the luggage compartment. The speaker wires are black/red - ck/brown at the amplifier, 40 pin plug, pins 33 and 34 (HIFI), or 20 pin plug, pins 19 and 9 (Top 1). a amplifier is in the left side of the luggage compartment. The speaker wires are blue/red - e/brown at the amplifier, 40 pin plug, pins 11 and 12 (HIFI), or 20 pin plug, pins 17 and 7 (Top 1). a amplifier is in the left side of the luggage compartment. The deck speaker wires are white/red hite/brown at the amplifier, 40 pin plug, pins 31 and 32 (HIFI), or 20 pin plug, pins 14 and 4 p HIFI). The door speaker wires are yellow/red - yellow/brown at the amplifier, 20 pin plug, pins nd 11 (Top HIFI). a amplifier is in the left side of the luggage compartment. The deck speaker wires are gray/red - y/brown at the amplifier, 40 pin plug, pins 13 and 21 (HIFI), or 20 pin plug, pins 13 and 3 (Top
Right Front Speaker (+/-) blac Right Front Speaker (+/-) The Left Rear Speaker (+/-) The Right Rear Speaker (+/-) The Back The Parking Lights (+) The	ck/brown at the amplifier, 40 pin plug, pins 33 and 34 (HIFI), or 20 pin plug, pins 19 and 9 (Top a mplifier is in the left side of the luggage compartment. The speaker wires are blue/red - e/brown at the amplifier, 40 pin plug, pins 11 and 12 (HIFI), or 20 pin plug, pins 17 and 7 (Top 1). a amplifier is in the left side of the luggage compartment. The deck speaker wires are white/red hite/brown at the amplifier, 40 pin plug, pins 31 and 32 (HIFI), or 20 pin plug, pins 14 and 4 p HIFI). The door speaker wires are yellow/red - yellow/brown at the amplifier, 20 pin plug, pins nd 11 (Top HIFI). a amplifier is in the left side of the luggage compartment. The deck speaker wires are gray/red - y/brown at the amplifier, 40 pin plug, pins 13 and 21 (HIFI), or 20 pin plug, pins 13 and 3 (Top
Left Rear Speaker (+/-) HIF Left Rear Speaker (+/-) The Right Rear Speaker (+/-) The Brand Trunk/Hatch Pin Trunk/Hatch Pin The Box The Parking Lights (+) The	e/brown at the amplifier, 40 pin plug, pins 11 and 12 (HIFI), or 20 pin plug, pins 17 and 7 (Top i). e amplifier is in the left side of the luggage compartment. The deck speaker wires are white/red hite/brown at the amplifier, 40 pin plug, pins 31 and 32 (HIFI), or 20 pin plug, pins 14 and 4 p HIFI). The door speaker wires are yellow/red - yellow/brown at the amplifier, 20 pin plug, pins nd 11 (Top HIFI). e amplifier is in the left side of the luggage compartment. The deck speaker wires are gray/red - y/brown at the amplifier, 40 pin plug, pins 13 and 21 (HIFI), or 20 pin plug, pins 13 and 3 (Top
- wh (Top 1 ar Right Rear Speaker (+/-) HIF and Trunk/Hatch Pin Reverse Light Hazards The Parking Lights (+) Foo	hite/brown at the amplifier, 40 pin plug, pins 31 and 32 (HIFI), or 20 pin plug, pins 14 and 4 p HIFI). The door speaker wires are yellow/red - yellow/brown at the amplifier, 20 pin plug, pins nd 11 (Top HIFI). a amplifier is in the left side of the luggage compartment. The deck speaker wires are gray/red - y/brown at the amplifier, 40 pin plug, pins 13 and 21 (HIFI), or 20 pin plug, pins 13 and 3 (Top
gray HIF and Trunk/Hatch Pin The box Reverse Light The Hazards The Parking Lights (+) The	y/brown at the amplifier, 40 pin plug, pins 13 and 21 (HIFI), or 20 pin plug, pins 13 and 3 (Top
box Reverse Light The Hazards The Parking Lights (+) The Foo	I 2 (Top HIFI).
Hazards The Parking Lights (+) The Foo	e Electronics Junction Box is behind the glove box, attached to the right side of the dash fuse
Parking Lights (+) The Foo	e Footwell Module is in the driver kick.
Foo	e Footwell Module is in the driver kick.
	Prootwell Module is in the driver kick. The LR - RR wires are gray/purple - gray/yellow at the ptwell Module, 51 pin plug (2B), pins 16 and 18.
Rear Defroster The box	Electronics Junction Box is behind the glove box, attached to the right side of the dash fuse
Fuel Pump The	e Fuel Pump Control is in the right rear luggage compartment floor.
Starter The	e Car Access System is to the right of the steering column.
Ignition The	e Car Access System is to the right of the steering column.
Can Bus High The	e Car Access System is to the right of the steering column.
Can Bus Low The	e Car Access System is to the right of the steering column.
Speed Sense The	e Car Access System is to the right of the steering column.
Hood Pin The	e Car Access System is to the right of the steering column.
Brake Wire The	e Car Access System is to the right of the steering column.
	Car Access System is to the right of the steering column.
Left Front Door Trigger The	Pootwell Module is in the driver kick.
	Pootwell Module is in the driver kick.
Right Rear Door Trigger The	Prootwell Module is in the driver kick.