

## 2005 Skoda Octavia



## Wiring Information

Item	Wire Color	Polarity	Wire Location
12 Volts	red	+	black unit, beige 11 pin plug signed D
Second 12 Volts			
Starter	red/black	+	black unit, black 12 pin plug signed G, pin 1
Second Starter			
Ignition	black	+	black unit, black 12 pin plug signed G, pin 12
Second Ignition			
Third Ignition			
Accessory			
Second Accessory			
Third Accessory			
Key Sense			
Data Bus			
Can Bus High	orange/green	data	BLACK 12 WAY UNDER DRIVERS DASH
Can Bus Low	orange/brown	data	BLACK 12 WAY UNDER DRIVERS DASH
Can Bus Sw			
Power Lock	white/green	-	window winder motor, black 20 pin plug, pin 13
Power Unlock	same as power lock		
Lock Motor			
Unlock Motor			
Disarm Defeat			
Parking Lights (+)			
Parking Lights (-)			
Hazards			
Turn Signal (Left)	black/white (F), black/white (R)	+	black unit fixed under the driver side dash
Turn Signal (Right)	black/green (F), black/green (R)	+	black unit fixed under the driver side dash

*Wiring Information (Continued)*

Item	Wire Color	Polarity	Wire Location
<b>Headlight</b>			
<b>AutoLights</b>			
<b>Reverse Light</b>			
<b>Left Front Door Trigger</b>	lt. blue/grey		black unit, black 12 pin plug signed B, pin 11
<b>Right Front Door Trigger</b>			
<b>Left Rear Door Trigger</b>			
<b>Right Rear Door Trigger</b>			
<b>Dome Supervision</b>			
<b>Trunk/Hatch Pin</b>	brown/black		back of the driver side kickplate
<b>Rear Glass Pin</b>			
<b>Hood Pin</b>	brown/red		black unit, black 8 pin plug signed F, pin 5
<b>Trunk Hatch/Release</b>			
<b>Trunk Release Motor</b>			
<b>Fuel Door Release</b>			
<b>Power Sliding Door (Left)</b>			
<b>Power Sliding Door (Right)</b>			
<b>Factory Alarm Arm</b>			
<b>Factory Alarm Disarm</b>			
<b>Disarm No Unlock</b>			
<b>Trunk Alarm Shunt</b>			
<b>Tachometer</b>			
<b>Wait to Start</b>			
<b>Neutral Safety</b>			
<b>Clutch Pedal</b>			
<b>Fuel Pump</b>	black/blue		fuse box, correspond. with 10A fuse nr. 29 or 10
<b>Rear Defroster</b>			
<b>Mirror Defroster</b>			
<b>Left Front Heated Seat</b>			
<b>Right Front Heated Seat</b>			

*Wiring Information (Continued)*

Item	Wire Color	Polarity	Wire Location
Speed Sense			
Brake Wire			
Parking Brake			
Horn Trigger			
Wipers			
Left Front Window (Up/Down)			
Right Front Window (Up/Down)			
Left Rear Window (Up/Down)			
Right Rear Window (Up/Down)			
Sun Roof (Open/Close)			
Sun Roof (Limit/Close)			
Memory Seat 1			
Memory Seat 2			
Memory Seat 3			
Radio 12V			
Radio Ground			
Radio Ignition			
Radio Illumination			
Factory Amp Turn-on			
Power Antenna			
Left Front Speaker (+/-)			
Right Front Speaker (+/-)			
Left Rear Speaker (+/-)			
Right Rear Speaker (+/-)			
Center Channel (+/-)			
Subwoofer (+/-)			
Aux. Audio Input Left (+/-)			
Aux. Audio Input Right (+/-)			
RSE Video (+/-)			
RSE Audio Left (+/-)			
RSE Audio Right (+/-)			
Satellite Radio 12 Volts			
Satellite Radio Ground			
Satellite Radio Ignition			
Satellite Radio Antenna			
Satellite Audio Left (+/-)			
Satellite Audio Right (+/-)			

*What Fits*


---

Item	Size	Depth	Location
<b>Headunit</b>			
<b>Left Front Speaker</b>			
<b>Left Front Tweeter</b>			
<b>Right Front Speaker</b>			
<b>Right Front Tweeter</b>			
<b>Left Rear Speaker</b>			
<b>Left Rear Tweeter</b>			
<b>Right Rear Speaker</b>			
<b>Right Rear Tweeter</b>			
<b>Center Channel</b>			
<b>Subwoofer</b>			
<b>Left Front Headrest</b>			
<b>Right Front Headrest</b>			
<b>Left Right Headrest</b>			
<b>Right Rear Headrest</b>			
<b>Satellite Radio Tuner</b>			

*Additional Wiring Notes*


---

Item	Note
<b>12 Volts</b>	The black unit is fixed under the driver side dash.
<b>Turn Signal (Left)</b>	The front wire is in the beige 11 pin plug signed D, pin 11. The rear wire is in the beige 12 pin plug signed C, pin 11.
<b>Turn Signal (Right)</b>	The front wire is in the black 11 pin plug signed A, pin 6. The rear wire is in the black 12 pin plug signed B, pin 10.
<b>Ignition</b>	The black unit is fixed under the driver side dash.
<b>Starter</b>	The black unit is fixed under the driver side dash.
<b>Power Lock</b>	The window winder motor is inside the driver side door.
<b>Left Front Door Trigger</b>	The black unit is fixed under the driver side dash.
<b>Hood Pin</b>	The black unit is fixed under the driver side dash.
<b>Trunk/Hatch Pin</b>	In the wiring harness that supplies the rear services.
<b>Fuel Pump</b>	The fuse box is on the side of the driver side dash.