

2006 Skoda Roomster



Wiring Information

Item	Wire Color	Polarity	Wire Location
12 Volts	red/black	+	control unit, beige connector signed XP5, pos. 5
Second 12 Volts			
Starter	red/black	+	ignition key switch wiring harness
Second Starter			
Ignition	black	+	control unit, beige 16 way connector signed XS4, pos. 12
Second Ignition			
Third Ignition			
Accessory			
Second Accessory			
Third Accessory			
Key Sense			
Data Bus			
Can Bus High	orange/green	data	BLACK 18 WAY UNDER DRIVERS DASH
Can Bus Low	orange/brown	data	BLACK 18 WAY UNDER DRIVERS DASH
Can Bus Sw			
Power Lock	lt. blue/yellow		window winder motor, black-violet 8 way connector, pos. 5
Power Unlock			
Lock Motor			
Unlock Motor			
Disarm Defeat			
Parking Lights (+)			
Parking Lights (-)			
Hazards			
Turn Signal (Left)	black/white	+	control unit, black 16 way connector signed XS6, pos. 16
Turn Signal (Right)	black/green	+	control unit, black 16 way connector signed XS6, pos. 14

Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
Headlight			
AutoLights			
Reverse Light			
Left Front Door Trigger	brown/yellow		control unit, black 5 way connector signed XP4, pos. 1
Right Front Door Trigger			
Left Rear Door Trigger			
Right Rear Door Trigger			
Dome Supervision			
Trunk/Hatch Pin	brown/green		control unit, red 6 way connector signed XS5, pos. 4
Rear Glass Pin			
Hood Pin			
Trunk Hatch/Release			
Trunk Release Motor			
Fuel Door Release			
Power Sliding Door (Left)			
Power Sliding Door (Right)			
Factory Alarm Arm			
Factory Alarm Disarm			
Disarm No Unlock			
Trunk Alarm Shunt			
Tachometer			
Wait to Start			
Neutral Safety			
Clutch Pedal			
Fuel Pump	black		fuel pump relay signed 167, pos. 86
Rear Defroster			
Mirror Defroster			
Left Front Heated Seat			
Right Front Heated Seat			

Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
Speed Sense			
Brake Wire			
Parking Brake			
Horn Trigger			
Wipers			
Left Front Window (Up/Down)	lt. blue/yellow		window winder motor, black-violet 8 way connector, pos. 5
Right Front Window (Up/Down)			
Left Rear Window (Up/Down)			
Right Rear Window (Up/Down)			
Sun Roof (Open/Close)			
Sun Roof (Limit/Close)			
Memory Seat 1			
Memory Seat 2			
Memory Seat 3			
Radio 12V			
Radio Ground			
Radio Ignition			
Radio Illumination			
Factory Amp Turn-on			
Power Antenna			
Left Front Speaker (+/-)			
Right Front Speaker (+/-)			
Left Rear Speaker (+/-)			
Right Rear Speaker (+/-)			
Center Channel (+/-)			
Subwoofer (+/-)			
Aux. Audio Input Left (+/-)			
Aux. Audio Input Right (+/-)			
RSE Video (+/-)			
RSE Audio Left (+/-)			
RSE Audio Right (+/-)			
Satellite Radio 12 Volts			
Satellite Radio Ground			
Satellite Radio Ignition			
Satellite Radio Antenna			
Satellite Audio Left (+/-)			
Satellite Audio Right (+/-)			

What Fits

Item	Size	Depth	Location
Headunit			
Left Front Speaker			
Left Front Tweeter			
Right Front Speaker			
Right Front Tweeter			
Left Rear Speaker			
Left Rear Tweeter			
Right Rear Speaker			
Right Rear Tweeter			
Center Channel			
Subwoofer			
Left Front Headrest			
Right Front Headrest			
Left Right Headrest			
Right Rear Headrest			
Satellite Radio Tuner			

Additional Wiring Notes

Item	Note
12 Volts	The control unit is fixed under the driver side dash.
Turn Signal (Left)	The control unit is fixed under the driver side dash.
Turn Signal (Right)	The control unit is fixed under the driver side dash.
Ignition	The control unit is fixed under the driver side dash.
Fuel Pump	The fuel pump relay is fixed on the stirrup placed on the left side of the steering column.
Left Front Window (Up/Down)	The window winder motor is inside the driver side door. For window closure it is necessary to select 25 second closure time.
Left Front Door Trigger	The control unit is fixed under the driver side dash.
Trunk/Hatch Pin	The control unit is fixed under the driver side dash.
Power Lock	The window winder motor is inside the driver side door.