

## 2006 Citroen C4

### Wiring Information

Item	Wire Color	Polarity	Wire Location
12 Volts	Grey	+	2 way connector 'AP' @ BSI
Second 12 Volts			
Starter	Yellow or White/green		Black 3 way at Barrel
Second Starter			
Ignition	Pink		16 way labelled 'PP' @BSI
Second Ignition	Blue/Yellow		Black 3 way at barrel
Third Ignition			
Accessory			
Second Accessory			
Third Accessory			
Key Sense			
Data Bus			
Can Bus High			
Can Bus Low			
Can Bus Sw			
Power Lock	White/Red		At BSI
Power Unlock	Brown/Yellow		At BSI
Lock Motor			
Unlock Motor			
Disarm Defeat			
Parking Lights (+)			
Parking Lights (-)			
Hazards			
Turn Signal (Left)	Beige and White Green		Engine fuse box and BSI
Turn Signal (Right)	Green and White Green		Engine fuse box and BSI

*Wiring Information (Continued)*

Item	Wire Color	Polarity	Wire Location
<b>Headlight</b>			
<b>AutoLights</b>			
<b>Reverse Light</b>			
<b>Left Front Door Trigger</b>	Brown/Yellow		At BSI
<b>Right Front Door Trigger</b>	Red/Grey		At BSI
<b>Left Rear Door Trigger</b>	White/Red		At BSI
<b>Right Rear Door Trigger</b>	Light blue/Pink		At BSI
<b>Dome Supervision</b>			
<b>Trunk/Hatch Pin</b>	Red/Grey		At BSI
<b>Rear Glass Pin</b>			
<b>Hood Pin</b>			
<b>Trunk Hatch/Release</b>			
<b>Trunk Release Motor</b>			
<b>Fuel Door Release</b>			
<b>Power Sliding Door (Left)</b>			
<b>Power Sliding Door (Right)</b>			
<b>Factory Alarm Arm</b>			
<b>Factory Alarm Disarm</b>			
<b>Disarm No Unlock</b>			
<b>Trunk Alarm Shunt</b>			
<b>Tachometer</b>			
<b>Wait to Start</b>			
<b>Neutral Safety</b>			
<b>Clutch Pedal</b>			
<b>Fuel Pump</b>			
<b>Rear Defroster</b>			
<b>Mirror Defroster</b>			
<b>Left Front Heated Seat</b>			
<b>Right Front Heated Seat</b>			

Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
Speed Sense			
Brake Wire			
Parking Brake			
Horn Trigger			
Wipers			
Left Front Window (Up/Down)			
Right Front Window (Up/Down)			
Left Rear Window (Up/Down)			
Right Rear Window (Up/Down)			
Sun Roof (Open/Close)			
Sun Roof (Limit/Close)			
Memory Seat 1			
Memory Seat 2			
Memory Seat 3			
Radio 12V			
Radio Ground			
Radio Ignition			
Radio Illumination			
Factory Amp Turn-on			
Power Antenna			
Left Front Speaker (+/-)			
Right Front Speaker (+/-)			
Left Rear Speaker (+/-)			
Right Rear Speaker (+/-)			
Center Channel (+/-)			
Subwoofer (+/-)			
Aux. Audio Input Left (+/-)			
Aux. Audio Input Right (+/-)			
RSE Video (+/-)			
RSE Audio Left (+/-)			
RSE Audio Right (+/-)			
Satellite Radio 12 Volts			
Satellite Radio Ground			
Satellite Radio Ignition			
Satellite Radio Antenna			
Satellite Audio Left (+/-)			
Satellite Audio Right (+/-)			

*What Fits*

Item	Size	Depth	Location
Headunit			
Left Front Speaker			
Left Front Tweeter			
Right Front Speaker			
Right Front Tweeter			
Left Rear Speaker			
Left Rear Tweeter			
Right Rear Speaker			
Right Rear Tweeter			
Center Channel			
Subwoofer			
Left Front Headrest			
Right Front Headrest			
Left Right Headrest			
Right Rear Headrest			
Satellite Radio Tuner			

*Smart Starter Kill Relay*

Relay Type:	n/a
Part #:	n/a
OE Relay Part #:	
Location:	n/a

<b>Notes:</b>
n/a

<b>Alternate Part Notes:</b>
n/a



*Additional Wiring Notes*


---

Item	Note
<b>12 Volts</b>	BSI under dash Drivers side
<b>Ignition</b>	Green Red 16 Way connector 'PP' at BSI unit pin 2
<b>Turn Signal (Left)</b>	Beige for front left and Green for Front Right are located at Engine compartment Fuse box. Black 28 way connector pins 6 & 8 White/Green x 2 are located in Black/red 16 way connector at BSI pins 13 & 14
<b>Turn Signal (Right)</b>	Beige for front left and Green for Front Right are located at Engine compartment Fuse box. Black 28 way connector pins 6 & 8 White/Green x 2 are located in Black/red 16 way connector at BSI pins 13 & 14
<b>Left Front Door Trigger</b>	All Door pins and boot found in White 40 way connector at BSI pins 27, 5 34, 33 and 13
<b>Right Front Door Trigger</b>	All Door pins and boot found in White 40 way connector at BSI pins 27, 5 34, 33 and 13
<b>Left Rear Door Trigger</b>	All Door pins and boot found in White 40 way connector at BSI pins 27, 5 34, 33 and 13
<b>Right Rear Door Trigger</b>	All Door pins and boot found in White 40 way connector at BSI pins 27, 5 34, 33 and 13
<b>Trunk/Hatch Pin</b>	All Door pins and boot found in White 40 way connector at BSI pins 27, 5 34, 33 and 13
<b>Power Lock</b>	White 40 way connector at BSI labelled EH1 pins 4 and 27 for lock and unlock
<b>Power Unlock</b>	White 40 way connector at BSI labelled EH1 pins 4 and 27 for lock and unlock