2005 Ferrari F430





Wiring Information

Item	Wire Color	Polarity	Wire Location
12 Volts	11.10 00.10.	. Glarity	THIS ESSAUSI
Second 12 Volts			
Starter			see note
Second Starter			
Ignition			see note
Second Ignition			
Third Ignition			
Accessory			
Second Accessory			
Third Accessory			
Key Sense			
Data Bus			
Can Bus High			
Can Bus Low			
Can Bus Sw			
Power Lock	brown/green	-	see note
Power Unlock	violet/white	-	see note
Lock Motor			
Unlock Motor			
Disarm Defeat			
Parking Lights (+)			
Parking Lights (-)			
Hazards			
Turn Signal (Left)	blue	+	see note
Turn Signal (Right)	blue/black	+	see note

DirectWire Vehicle Information - 1/11/2011 1:00:35 AM

Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
Headlight			
AutoLights			
Reverse Light			
Left Front Door Trigger	white/black	-	see note
Right Front Door Trigger			
Left Rear Door Trigger			
Right Rear Door Trigger			
Dome Supervision			
Trunk/Hatch Pin	yellow	-	harness near lock
Rear Glass Pin			
Hood Pin			
Trunk Hatch/Release			
Trunk Release Motor			
Fuel Door Release			
Power Sliding Door (Left)			
Power Sliding Door (Right)			
Factory Alarm Arm			
Factory Alarm Disarm			
Disarm No Unlock			
Trunk Alarm Shunt			
Tachometer			
Wait to Start			
Neutral Safety			
Clutch Pedal			
Fuel Pump			
Rear Defroster			
Mirror Defroster			
Left Front Heated Seat			
Right Front Heated Seat			

DirectWire Vehicle Information - 1/11/2011 1:00:35 AM


Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
Speed Sense	WITE COIOI	Folarity	Wife Location
Brake Wire			
Parking Brake			
	nink		ana nota
Horn Trigger Wipers	pink	-	see note
Left Front Window (Up/Down)			
Right Front Window (Up/Down)			
Left Rear Window (Up/Down)			
Right Rear Window (Up/Down)			
Sun Roof (Open/Close)			
Sun Roof (Limit/Close)			
Memory Seat 1			
Memory Seat 2			
Memory Seat 3			
Radio 12V			
Radio Ground			
Radio Ignition			
Radio Illumination			
Factory Amp Turn-on			
Power Antenna			
Left Front Speaker (+/-)			
Right Front Speaker (+/-)			
Left Rear Speaker (+/-)			
Right Rear Speaker (+/-)			
Center Channel (+/-)			
Subwoofer (+/-)			
Aux. Audio Input Left (+/-)			
Aux. Audio Input Right (+/-)			
RSE Video (+/-)			
RSE Audio Left (+/-)			
RSE Audio Right (+/-)			
Satellite Radio 12 Volts			
Satellite Radio Ground			
Satellite Radio Ignition			
Satellite Radio Antenna			
Satellite Audio Left (+/-)			
Satellite Audio Right (+/-)			
	•		

What Fits

Item	Size	Depth	Location
Headunit			
Left Front Speaker			
Left Front Tweeter			
Right Front Speaker			
Right Front Tweeter			
Left Rear Speaker			
Left Rear Tweeter			
Right Rear Speaker			
Right Rear Tweeter			
Center Channel			
Subwoofer			
Left Front Headrest			
Right Front Headrest			
Left Right Headrest			
Right Rear Headrest			
Satellite Radio Tuner			

Smart Starter Kill Relay

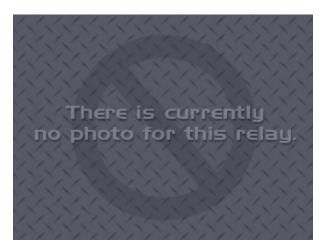

Relay Type:	n/a
Part #:	n/a
OE Relay Part #:	
Location:	n/a

	Notes:	
n/a	·	
	Alternate Part Notes:	
n/a		



DirectWire Vehicle Information - 1/11/2011 1:00:35 AM

Additional Wiring Notes

Item	Note
Power Lock	this can be found in the 10 way white connector behind the brake pedal.
Power Unlock	this can be found in the 10 way white connector behind the brake pedal.
Turn Signal (Right)	this can be found in the main control unit in the upper part on the right hand side of the passenger side main wiring loom
Left Front Door Trigger	found in the white 10 way connector behind the brake pedal.
Horn Trigger	connect to the relay in the lower part of the fuse box
Starter	Fuel pump cut is drivers side to the left of the pedals and it is a black wire
Ignition	we currently only have IGN sense wire for this car this can be found in a white 10 way connector behind the brake pedal its a green wire and in pin 10
Turn Signal (Left)	this can be found in the main control unit in the upper part on the right hand side of the passenger side main wiring loom