# 2006 Nissan Murano





## Wiring Information

| Item                | Wire Color                                      | Polarity | Wire Location   |
|---------------------|---|----------|---|
| 12 Volts            | green (40A)                                     | +        | ignition switch, white 6 pin plug, pin 1                              |
| Second 12 Volts     | N/A   |          | 3   |
| Starter             | black/red                                       | +        | ignition switch, white 6 pin plug, pin 5                              |
| Second Starter      | black/yellow                                    | +        | ignition switch, white 6 pin plug, pin 6                              |
| Ignition            | black/red                                       | +        | ignition switch, white 6 pin plug, pin 3                              |
| Second Ignition     | N/A   |          |   |
| Third Ignition      | N/A   |          |   |
| Accessory           | red   | +        | ignition switch, white 6 pin plug, pin 4                              |
| Second Accessory    | white/blue                                      | +        | ignition switch, white 6 pin plug, pin 2                              |
| Third Accessory     | N/A   |          |   |
| Key Sense           | red/blue to black/red<br>(required)             | +        | ignition key switch or BCM, white 40 pin plug, pin 37                 |
| Data Bus            | brown/white (power window switch communication) | data     | BCM, white 40 pin plug, pin 22  |
| Can Bus High        | blue  | data     | data link conn, wht 16 pin plg, pin 6 or BCM, wht 40 pin plg, pin 39  |
| Can Bus Low         | yellow  | data     | data link conn, wht 16 pin plg, pin 14 or BCM, wht 40 pin plg, pin 40 |
| Can Bus Sw          | N/A   |          |   |
| Power Lock          | use factory alarm arm or insert pin             | -        | BCM, white 40 pin plug, pin 8   |
| Power Unlock        | use factory alarm disarm or insert pin          | -        | BCM, white 40 pin plug, pin 7   |
| Lock Motor          | purple  | 5 wire   | BCM, black 15 pin plug, pin 10  |
| Unlock Motor        | green/white                                     | 5 wire   | BCM, black 15 pin plug, pin 4   |
| Disarm Defeat       | green/yellow                                    | 5 wire   | BCM, black 15 pin plug, pin 11  |
| Parking Lights (+)  | red/blue  | +        | above driver kick, gray 16 pin plug, pin 14                           |
| Parking Lights (-)  | N/A   |          |   |
| Hazards             | green/red                                       | -        | BCM, white 40 pin plug, pin 29  |
| Turn Signal (Left)  | green/black                                     | +        | BCM, black 15 pin plug, pin 5   |
| Turn Signal (Right) | green/yellow                                    | +        | BCM, black 15 pin plug, pin 6   |

### Wiring Information (Continued)

| Item                       | Wire Color                                 | Polarity | Wire Location  |
|----------------------------|--|----------|--|
| Headlight                  | blue (L), red/yellow (R)                   | +        | underhood fuse box, gray 16 pin plug, pins 14 and 4                  |
| AutoLights                 | green/yellow                               | -        | BCM, white 40 pin plug, pin 33                                       |
| Reverse Light              | green/white                                | +        | above driver kick, white 24 pin plug, pin 5                          |
| Left Front Door Trigger    | lt. blue                                   | -        | BCM, white 15 pin plug, pin 7  |
| Right Front Door Trigger   | red or red/green                           | -        | BCM, white 40 pin plug, pin 12                                       |
| Left Rear Door Trigger     | red/white                                  | -        | BCM, white 15 pin plug, pin 8  |
| Right Rear Door Trigger    | red/yellow or red/white                    | -        | BCM, white 40 pin plug, pin 13                                       |
| Dome Supervision           | red  | -        | BCM, black 15 pin plug, pin 8  |
| Trunk/Hatch Pin            | purple/white                               | -        | BCM, white 15 pin plug, pin 3  |
| Rear Glass Pin             | N/A  |          |  |
| Hood Pin                   | N/A  |          |  |
| Trunk Hatch/Release        | green/orange or green (rear handle switch) | -        | above dr kick, wht 24 pin plg, pin 12 or BCM, wht 40 pin plg, pin 30 |
| Trunk Release Motor        | green/red                                  | +        | hatch release relay in driver kick                                   |
| Fuel Door Release          | locks/unlocks along with driver door       |          |  |
| Power Sliding Door (Left)  | N/A  |          |  |
| Power Sliding Door (Right) | N/A  |          |  |
| Factory Alarm Arm          | blue (driver door key lock)                | -        | power window main switch, white 16 pin plug, pin 4                   |
| Factory Alarm Disarm       | red (driver door key unlock)               | double - | power window main switch, white 16 pin plug, pin 6                   |
| Disarm No Unlock           | see factory alarm disarm                   |          |  |
| Trunk Alarm Shunt          | N/A  |          |  |
| Tachometer                 | red/green (fuel injector 6)                | ac       | fuel injector 6 or ECM behind glove box, blk 81 pin plug, pin 40     |
| Wait to Start              | N/A  |          |  |
| Neutral Safety             | N/A  |          |  |
| Clutch Pedal               | N/A  |          |  |
| Fuel Pump                  | black/yellow                               | +        | above driver kick, white 4 pin plug, pin 1                           |
| Rear Defroster             | green/white                                | -        | BCM, white 40 pin plug, pin 9  |
| Mirror Defroster           | same as rear defroster                     |          |  |
| Left Front Heated Seat     | gray                                       | 5 wire   | driver heated seat switch, white 6 pin plug, pin 2                   |
| Right Front Heated Seat    | gray/blue                                  | 5 wire   | passenger heated seat switch, brown 6 pin plug, pin 2                |
|                            |  |          |  |

### Wiring Information (Continued)

| Item                            | Wire Color   | Pola<br>y | arit Wire Location  |
|---------------------------------|--|-----------|---|
| Speed Sense                     | purple/white                                       | 8-P       | Unified Meter and A/C Amp below radio, gray<br>uls 16 pin plug, pin 6 |
| Brake Wire                      | red/green  | +         | above driver kick, gray 16 pin plug, pin 6                            |
| Parking Brake                   | green  | -         | above driver kick, white 32 pin plug, pin 25                          |
| Horn Trigger                    | green/orange                                       | -         | above driver kick, white 32 pin plug, pin 6                           |
| Wipers                          | blue (L), blue/black (H)                           | +         | underhood fuse box, gray 16 pin plug, pins 5 and 15                   |
| Left Front Window (Up/Down)     | use factory alarm arm/disarm                       |           |   |
| Right Front Window (Up/Down)    | see left front window                              |           |   |
| Left Rear Window<br>(Up/Down)   | blue - red/yellow                                  | А         | driver kick, door harness, white 39 pin plug,<br>pins 37 and 33       |
| Right Rear Window<br>(Up/Down)  | yellow/black - red                                 | А         | driver kick, door harness, white 39 pin plug,<br>pins 38 and 34       |
| Sun Roof<br>(Open/Close)        | pur - org (tilt up/dn) (function with ign on only) | -         | sunroof switch, gray 6 pin plug, pins 5 and 4                         |
| Sun Roof<br>(Limit/Close)       | N/A  |           |   |
| Memory Seat 1                   | lt. green/black                                    | -         | memory module left of column, white 32 pin plug, pin 9                |
| Memory Seat 2                   | pink/blue  | -         | memory module left of column, white 32 pin plug, pin 25               |
| Memory Seat 3                   | N/A  |           |   |
| Radio 12V                       | yellow   | +         | radio harness   |
| Radio Ground                    | (chassis)  |           |   |
| Radio Ignition                  | pink/black   | +         | radio harness   |
| Radio Illumination              | red/blue   | +         | radio harness   |
| Factory Amp Turn-on             | green/white  | +         | radio harness   |
| Power Antenna                   | green  | +         | radio harness   |
| Left Front Speaker<br>(+/-)     | white - black                                      | +,-       | radio harness   |
| Right Front Speaker (+/-)       | yellow - brown                                     | +,-       | radio harness   |
| Left Rear Speaker<br>(+/-)      | orange - black/pink                                | +,-       | radio harness   |
| Right Rear Speaker (+/-)        | blue - black/white                                 | +,-       | radio harness   |
| Center Channel (+/-)            |  |           |   |
| Subwoofer (+/-)                 |  |           |   |
| Aux. Audio Input Left<br>(+/-)  |  |           |   |
| Aux. Audio Input<br>Right (+/-) |  |           |   |
| RSE Video (+/-)                 |  |           |   |
| RSE Audio Left (+/-)            |  |           |   |
| Conviniable @ 2011 F            | Directed Electronics All Pights Pasaryas           | 1 Dina    | atWine and its webists information and for                            |

| RisealWireighticle          | Information - 5/14/2013 5:12:14 AM |  |
|-----------------------------|------------------------------------|--|
| Satellite Radio 12<br>Volts |                                    |  |
| Satellite Radio<br>Ground   |                                    |  |
| Satellite Radio<br>Ignition |                                    |  |
| Satellite Radio<br>Antenna  |                                    |  |
| Satellite Audio Left (+/-)  |                                    |  |
| Satellite Audio Right (+/-) |                                    |  |

#### What Fits

| Item                  | Size      | Depth | Location         |
|-----------------------|-----------|-------|------------------|
| Headunit              | irregular |       | center of dash   |
| Left Front Speaker    | 6 x 9     | 3     | left front door  |
| Left Front Tweeter    |           |       |                  |
| Right Front Speaker   | 6 x 9     | 3     | right front door |
| Right Front Tweeter   |           |       |                  |
| Left Rear Speaker     | 6.5       | 3     | left rear door   |
| Left Rear Tweeter     |           |       |                  |
| Right Rear Speaker    | 6.5       | 3     | right rear door  |
| Right Rear Tweeter    |           |       |                  |
| Center Channel        |           |       |                  |
| Subwoofer             |           |       |                  |
| Left Front Headrest   |           |       |                  |
| Right Front Headrest  |           |       |                  |
| Left Right Headrest   |           |       |                  |
| Right Rear Headrest   |           |       |                  |
| Satellite Radio Tuner |           |       |                  |

### Additional Wiring Notes

| Item                     | Note   |
|--------------------------|--|
| Can Bus High             | The BCM (Body Control Module) is under the driver dash, above the accelerator pedal. The security light is green/orange (-) at the BCM, white 40 pin plug, pin 23.   |
| Can Bus Low              | The BCM (Body Control Module) is under the driver dash, above the accelerator pedal.   |
| Trunk Hatch/Release      | The BCM (Body Control Module) is under the driver dash, above the accelerator pedal.   |
| Driver Unlock Motor      | The BCM (Body Control Module) is under the driver dash, above the accelerator pedal.   |
| Passenger Unlock Motor   | The BCM (Body Control Module) is under the driver dash, above the accelerator pedal.   |
| Hazards                  | The BCM (Body Control Module) is under the driver dash, above the accelerator pedal.   |
| Turn Signal (Left)       | The BCM (Body Control Module) is under the driver dash, above the accelerator pedal.   |
| Turn Signal (Right)      | The BCM (Body Control Module) is under the driver dash, above the accelerator pedal.   |
| AutoLights               | The BCM (Body Control Module) is under the driver dash, above the accelerator pedal.   |
| Left Front Door Trigger  | The BCM (Body Control Module) is under the driver dash, above the accelerator pedal.   |
| Right Front Door Trigger | The BCM (Body Control Module) is under the driver dash, above the accelerator pedal.   |
| Left Rear Door Trigger   | The BCM (Body Control Module) is under the driver dash, above the accelerator pedal.   |
| Right Rear Door Trigger  | The BCM (Body Control Module) is under the driver dash, above the accelerator pedal.   |
| Dome Supervision         | The BCM (Body Control Module) is under the driver dash, above the accelerator pedal.   |
| Trunk/Hatch Pin          | The BCM (Body Control Module) is under the driver dash, above the accelerator pedal.   |
| Rear Defroster           | The BCM (Body Control Module) is under the driver dash, above the accelerator pedal.   |
| Key Sense                | The BCM (Body Control Module) is under the driver dash, above the accelerator pedal. On vehicles with Intelligent Key, the ignition knob switch is green/orange (+) at the ignition knob switch, gray 6 pin plug, pin 2. |
| Data Bus                 | The BCM (Body Control Module) is under the driver dash, above the accelerator pedal.   |
| Power Lock               | The BCM (Body Control Module) is under the driver dash, above the accelerator pedal.   |
| Power Unlock             | The BCM (Body Control Module) is under the driver dash, above the accelerator pedal.   |
| Lock Motor               | The BCM (Body Control Module) is under the driver dash, above the accelerator pedal.   |