

## 2006 Peugeot Boxer



### Wiring Information

Item	Wire Color	Polarity	Wire Location
12 Volts	red	+	front of fuse box, 2 way grey connector
Second 12 Volts			
Starter	brown	+	ignition key switch
Second Starter			
Ignition	blue	+	front of fuse box, brown 20 way conn., pos. 14
Second Ignition			
Third Ignition			
Accessory			
Second Accessory			
Third Accessory			
Key Sense			
Data Bus			
Can Bus High	pink/black	data	23 WAY AT FRONT OF FUSE BOX
Can Bus Low	pink/white	data	23 WAY AT FRONT OF FUSE BOX
Can Bus Sw			
Power Lock	brown/grey	-	back of fuse box, blue/red 36 way conn., pos. 11
Power Unlock	same as power lock wire		
Lock Motor			
Unlock Motor			
Disarm Defeat			
Parking Lights (+)			
Parking Lights (-)			
Hazards			
Turn Signal (Left)	pink/black (F), pink/black (R)		see notes
Turn Signal (Right)	pink (F), pink (R)		see notes

*Wiring Information (Continued)*

Item	Wire Color	Polarity	Wire Location
<b>Headlight</b>			
<b>AutoLights</b>			
<b>Reverse Light</b>			
<b>Left Front Door Trigger</b>	white/yellow		front of fuse box, black 52 way conn., pos. 30
<b>Right Front Door Trigger</b>	same as left front door trigger		
<b>Left Rear Door Trigger</b>			
<b>Right Rear Door Trigger</b>	violet/black		front of fuse box, black 52 way conn., pos. 35
<b>Dome Supervision</b>			
<b>Trunk/Hatch Pin</b>	lt. blue/white		front of fuse box, black 52 way conn., pos. 33
<b>Rear Glass Pin</b>			
<b>Hood Pin</b>			
<b>Trunk Hatch/Release</b>			
<b>Trunk Release Motor</b>			
<b>Fuel Door Release</b>			
<b>Power Sliding Door (Left)</b>			
<b>Power Sliding Door (Right)</b>			
<b>Factory Alarm Arm</b>			
<b>Factory Alarm Disarm</b>			
<b>Disarm No Unlock</b>			
<b>Trunk Alarm Shunt</b>			
<b>Tachometer</b>			
<b>Wait to Start</b>			
<b>Neutral Safety</b>			
<b>Clutch Pedal</b>			
<b>Fuel Pump</b>			
<b>Rear Defroster</b>			
<b>Mirror Defroster</b>			
<b>Left Front Heated Seat</b>			
<b>Right Front Heated Seat</b>			

Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
Speed Sense			
Brake Wire			
Parking Brake			
Horn Trigger			
Wipers			
Left Front Window (Up/Down)			
Right Front Window (Up/Down)			
Left Rear Window (Up/Down)			
Right Rear Window (Up/Down)			
Sun Roof (Open/Close)			
Sun Roof (Limit/Close)			
Memory Seat 1			
Memory Seat 2			
Memory Seat 3			
Radio 12V			
Radio Ground			
Radio Ignition			
Radio Illumination			
Factory Amp Turn-on			
Power Antenna			
Left Front Speaker (+/-)			
Right Front Speaker (+/-)			
Left Rear Speaker (+/-)			
Right Rear Speaker (+/-)			
Center Channel (+/-)			
Subwoofer (+/-)			
Aux. Audio Input Left (+/-)			
Aux. Audio Input Right (+/-)			
RSE Video (+/-)			
RSE Audio Left (+/-)			
RSE Audio Right (+/-)			
Satellite Radio 12 Volts			
Satellite Radio Ground			
Satellite Radio Ignition			
Satellite Radio Antenna			
Satellite Audio Left (+/-)			
Satellite Audio Right (+/-)			

*What Fits*


---

Item	Size	Depth	Location
<b>Headunit</b>			
<b>Left Front Speaker</b>			
<b>Left Front Tweeter</b>			
<b>Right Front Speaker</b>			
<b>Right Front Tweeter</b>			
<b>Left Rear Speaker</b>			
<b>Left Rear Tweeter</b>			
<b>Right Rear Speaker</b>			
<b>Right Rear Tweeter</b>			
<b>Center Channel</b>			
<b>Subwoofer</b>			
<b>Left Front Headrest</b>			
<b>Right Front Headrest</b>			
<b>Left Right Headrest</b>			
<b>Right Rear Headrest</b>			
<b>Satellite Radio Tuner</b>			

*Additional Wiring Notes*

---

Item	Note
<b>12 Volts</b>	The fuse box is under the driver side dash.
<b>Turn Signal (Left)</b>	The front turn signal wire is in the front of the fuse box, multiple blue 52 way connector, pos. 5. The rear turn signal wire is in the front of the fuse box, multiple black 52 way connector, pos. 16.
<b>Turn Signal (Right)</b>	The front turn signal wire is in the front of the fuse box, multiple blue 52 way connector, pos. 26. The rear turn signal wire is in the front of the fuse box, multiple black 52 way connector, pos. 6.