

## 2006 Toyota Aygo



### Wiring Information

Item	Wire Color	Polarity	Wire Location
<b>12 Volts</b>			
<b>Second 12 Volts</b>			
<b>Starter</b>	black	+	loom to column
<b>Second Starter</b>			
<b>Ignition</b>	black/white	+	loom to column
<b>Second Ignition</b>			
<b>Third Ignition</b>			
<b>Accessory</b>			
<b>Second Accessory</b>			
<b>Third Accessory</b>			
<b>Key Sense</b>			
<b>Data Bus</b>			
<b>Can Bus High</b>			
<b>Can Bus Low</b>			
<b>Can Bus Sw</b>			
<b>Power Lock</b>	orange	5wi	see note
<b>Power Unlock</b>	lt blue	5wi	see note
<b>Lock Motor</b>			
<b>Unlock Motor</b>			
<b>Disarm Defeat</b>			
<b>Parking Lights (+)</b>			
<b>Parking Lights (-)</b>			
<b>Hazards</b>			
<b>Turn Signal (Left)</b>	orange	+	see note
<b>Turn Signal (Right)</b>	white	+	see note

*Wiring Information (Continued)*

Item	Wire Color	Polarity	Wire Location
Headlight			
AutoLights			
Reverse Light			
Left Front Door Trigger	pink	-	drivers kick
Right Front Door Trigger			
Left Rear Door Trigger			
Right Rear Door Trigger			
Dome Supervision			
Trunk/Hatch Pin			
Rear Glass Pin			
Hood Pin			
Trunk Hatch/Release			
Trunk Release Motor			
Fuel Door Release			
Power Sliding Door (Left)			
Power Sliding Door (Right)			
Factory Alarm Arm			
Factory Alarm Disarm			
Disarm No Unlock			
Trunk Alarm Shunt			
Tachometer			
Wait to Start			
Neutral Safety			
Clutch Pedal			
Fuel Pump			
Rear Defroster			
Mirror Defroster			
Left Front Heated Seat			
Right Front Heated Seat			

*Wiring Information (Continued)*

Item	Wire Color	Polarity	Wire Location
Speed Sense			
Brake Wire			
Parking Brake			
Horn Trigger			
Wipers			
Left Front Window (Up/Down)	red		
Right Front Window (Up/Down)	red		
Left Rear Window (Up/Down)			
Right Rear Window (Up/Down)			
Sun Roof (Open/Close)			
Sun Roof (Limit/Close)			
Memory Seat 1			
Memory Seat 2			
Memory Seat 3			
Radio 12V			
Radio Ground			
Radio Ignition			
Radio Illumination			
Factory Amp Turn-on			
Power Antenna			
Left Front Speaker (+/-)			
Right Front Speaker (+/-)			
Left Rear Speaker (+/-)			
Right Rear Speaker (+/-)			
Center Channel (+/-)			
Subwoofer (+/-)			
Aux. Audio Input Left (+/-)			
Aux. Audio Input Right (+/-)			
RSE Video (+/-)			
RSE Audio Left (+/-)			
RSE Audio Right (+/-)			
Satellite Radio 12 Volts			
Satellite Radio Ground			
Satellite Radio Ignition			
Satellite Radio Antenna			
Satellite Audio Left (+/-)			
Satellite Audio Right (+/-)			

*What Fits*

Item	Size	Depth	Location
Headunit			
Left Front Speaker			
Left Front Tweeter			
Right Front Speaker			
Right Front Tweeter			
Left Rear Speaker			
Left Rear Tweeter			
Right Rear Speaker			
Right Rear Tweeter			
Center Channel			
Subwoofer			
Left Front Headrest			
Right Front Headrest			
Left Right Headrest			
Right Rear Headrest			
Satellite Radio Tuner			

*Smart Starter Kill Relay*



Relay Type:	n/a
Part #:	n/a
OE Relay Part #:	
Location:	n/a

<b>Notes:</b>
n/a

<b>Alternate Part Notes:</b>
n/a



*Additional Wiring Notes*

---

Item	Note
<b>Turn Signal (Right)</b>	BLUE 12WAY CONNECTOR BEHIND CLOCKS
<b>Ignition</b>	FUEL- BLACK/GREY REF DRIVERS KICK LOOM TO REAR
<b>Turn Signal (Left)</b>	BLUE 12WAY CONNECTOR BEHIND CLOCKS
<b>Power Lock</b>	WHITE 10WAY CONNECTOR FOUND IN DRIVERS KICK
<b>Power Unlock</b>	WHITE 10WAY CONNECTOR FOUND IN DRIVERS KICK