

1995 Toyota Supra



Wiring Information

Item	Wire Color	Polarity	Wire Location
12 Volts	white & wht/red	+	ignition harness
Second 12 Volts			
Starter	black/white	+	ignition harness
Second Starter			
Ignition	black/yellow	+	ignition harness
Second Ignition	black/orange	+	ignition harness
Third Ignition			
Accessory	pink/blue	+	ignition harness
Second Accessory			
Third Accessory			
Key Sense			
Data Bus			
Can Bus High			
Can Bus Low			
Can Bus Sw			
Power Lock	green/yellow	-	passenger kick panel
Power Unlock	white	-	passenger kick panel
Lock Motor			
Unlock Motor			
Disarm Defeat			
Parking Lights (+)	green		drivers kick panel
Parking Lights (-)	green		steering column
Hazards			
Turn Signal (Left)			
Turn Signal (Right)			

Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
Headlight	red	-	steering column
AutoLights			
Reverse Light			
Left Front Door Trigger	red/black	-	drivers kick panel
Right Front Door Trigger			
Left Rear Door Trigger			
Right Rear Door Trigger			
Dome Supervision			
Trunk/Hatch Pin	tied in with door		
Rear Glass Pin			
Hood Pin	purple/red	-	theft ECU
Trunk Hatch/Release			
Trunk Release Motor			
Fuel Door Release			
Power Sliding Door (Left)			
Power Sliding Door (Right)			
Factory Alarm Arm	arms with lock		
Factory Alarm Disarm	disarms with unlock		
Disarm No Unlock	white or green	-	drivers kick panel
Trunk Alarm Shunt			
Tachometer	black or blk/wht	AC	igniter
Wait to Start			
Neutral Safety			
Clutch Pedal			
Fuel Pump			
Rear Defroster			
Mirror Defroster			
Left Front Heated Seat			
Right Front Heated Seat			

Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
Speed Sense			
Brake Wire	green/white	+	plug in left kick
Parking Brake			
Horn Trigger	blue/red	-	steering column
Wipers	blue/red	+	steering column
Left Front Window (Up/Down)	red/wht - grn/yel	A	in drivers door
Right Front Window (Up/Down)	red/blu - grn/wht	A	in drivers door
Left Rear Window (Up/Down)			
Right Rear Window (Up/Down)			
Sun Roof (Open/Close)			
Sun Roof (Limit/Close)			
Memory Seat 1			
Memory Seat 2			
Memory Seat 3			
Radio 12V			
Radio Ground			
Radio Ignition			
Radio Illumination			
Factory Amp Turn-on			
Power Antenna			
Left Front Speaker (+/-)			
Right Front Speaker (+/-)			
Left Rear Speaker (+/-)			
Right Rear Speaker (+/-)			
Center Channel (+/-)			
Subwoofer (+/-)			
Aux. Audio Input Left (+/-)			
Aux. Audio Input Right (+/-)			
RSE Video (+/-)			
RSE Audio Left (+/-)			
RSE Audio Right (+/-)			
Satellite Radio 12 Volts			
Satellite Radio Ground			
Satellite Radio Ignition			
Satellite Radio Antenna			
Satellite Audio Left (+/-)			
Satellite Audio Right (+/-)			

What Fits

Item	Size	Depth	Location
Headunit			
Left Front Speaker			
Left Front Tweeter			
Right Front Speaker			
Right Front Tweeter			
Left Rear Speaker			
Left Rear Tweeter			
Right Rear Speaker			
Right Rear Tweeter			
Center Channel			
Subwoofer			
Left Front Headrest			
Right Front Headrest			
Left Right Headrest			
Right Rear Headrest			
Satellite Radio Tuner			

Additional Wiring Notes

Item	Note
Power Lock	Meter this wire while turning the key in the passenger door key cylinder.
Hood Pin	The theft ECU and door lock ECU are built together in one module. the module is located high in the passenger kick panel.
Parking Lights (+)	Bottom of fuse box in a white plug.
Tachometer	On the non turbo models the tach wire is black. On the turbo models the tach wire is black/white. Both are located at the igniter located on the drivers side strut tower.
Power Unlock	Meter this wire while turning the key in the passenger door key cylinder.