





Wiring Information

Itaus	Wine Onlar	Deleviter	Wine Long (inc.
Item	Wire Color	Polarity	Wire Location
12 Volts	red/gray (40A)	+	VESCM below glove box, black 52 pin plug, pin 1
Second 12 Volts	red/purple (40A)	+	VESCM below glove box, brown 52 pin plug, pin 42
Starter	black/gray	+	Steering Column Module, black 20 pin plug, pin 18
Second Starter	N/A		
Ignition	black/purple	+	Steering Column Module, black 20 pin plug, pin 17
Second Ignition	N/A		
Third Ignition	N/A		
Accessory	N/A		
Second Accessory	N/A		
Third Accessory	N/A		
Key Sense	N/A		
Data Bus	N/A		
Can Bus High	orange/green	data	VESCM below glove box, brown 52 pin plug, pin 15
Can Bus Low	orange/brown	data	VESCM below glove box, brown 52 pin plug, pin 16
Can Bus Sw	N/A		
Power Lock	white/purple	- resistor	Driver Door Module, gray 32 pin plug, pin 32
Power Unlock	same as power lock	- resistor	
Lock Motor	black/white	5 wire	Driver Door Module, black 20 pin plug, pin 13
Unlock Motor	brown	5 wire	Driver Door Module, black 20 pin plug, pin 12
Disarm Defeat	brown	5 wire	Passenger Door Module, black 20 pin plug, pin 12
Parking Lights (+)	gry/blk (LF), gry/red (RF), grn/wht (LR); wht (RR)	+	VESCM, black 52 pin plug, pins 7, 8, 27; brown 52 pin plug, pin 3
Parking Lights (-)	black/white	-	VESCM below glove box, black 52 pin plug, pin 19
Hazards	blue/red	-	VESCM below glove box, brown 52 pin plug, pin 7
Turn Signal (Left)	black/white (F); green/red (R)	+	VESCM, black 52 pin plug, pin 10; brown 52 pin plug, pin 4
Turn Signal (Right)	black/green (F); white/red (R)	+	VESCM, brown 52 pin plug, pin 50; black 52 pin plug, pin 26

Wiring Information (Continued)

ltem	Wire Color	Polarity	Wire Location
Headlight	white/black	-	VESCM below glove box, black 52 pin plug, pin 22
AutoLights	black/blue (interrupt to turn off autolights)	-	VESCM below glove box, black 52 pin plug, pin 22
Reverse Light	green	+	VESCM below glove box, black 52 pin plug, pin 28
Left Front Door Trigger	black/purple	-	Driver Door Module, black 20 pin plug, pin 7
Right Front Door Trigger	black/purple	-	Passenger Door Module, black 20 pin plug, pin 7
Left Rear Door Trigger	N/A		
Right Rear Door Trigger	N/A		
Dome Supervision	gray/blue	-	VESCM below glove box, brown 52 pin plug, pin 10
Trunk/Hatch Pin	gray/red (front trunk)	-	VESCM below glove box, black 52 pin plug, pin 29
Rear Glass Pin	N/A		
Hood Pin	green (rear hood)	-	VESCM below glove box, black 52 pin plug, pin 14
Trunk Hatch/Release	red/white (front trunk)	-	Driver Door Module, gray 32 pin plug, pin 30
Trunk Release Motor	gray (front trunk)	5 wire	VESCM below glove box, yellow 52 pin plug, pin 11
Fuel Door Release	yellow/gray	-	Driver Door Module, gray 32 pin plug, pin 13
Power Sliding Door (Left)	N/A		
Power Sliding Door (Right)	N/A		
Factory Alarm Arm	black/blue (driver door key cylinder)	-	Driver Door Module, black 20 pin plug, pin 16
Factory Alarm Disarm	same as factory alarm arm	- 250 ohms	
Disarm No Unlock	see factory alarm disarm		
Trunk Alarm Shunt	N/A		
Tachometer	brown/stripe	ac	any fuel injector
Wait to Start	N/A		
Neutral Safety	N/A		
Clutch Pedal	gray/blue and green/gray	-	ECM, dr side of engine, blk 94 pin plg, pins 39,41
Fuel Pump	black	+	relay/fuse panel behind passenger seat, fuse S81
Rear Defroster	yellow/gray	- latched	VESCM below glove box, yellow 52 pin plug, pin 22
Mirror Defroster	(CAN bus)		
Left Front Heated Seat	black/green	5 wire	Climatronic Control Module, black 3 pin plug, pin 1
Right Front Heated Seat	black/yellow	5 wire	Climatronic Control Module, black 3 pin plug, pin 3

Wiring Information (Continued)

Wire Color	Polarity	Wire Location
white	ac	passenger side of center console, black 17 pin plug, pin 1
red/black	+	VESCM below glove box, brown 52 pin plug, pin 17
black/yellow	-	VESCM below glove box, black 52 pin plug, pin 12
black/red	-	VESCM below glove box, yellow 52 pin plug, pin 41
(LIN bus)		
use factory alarm arm/disarm		
see left front window		
N/A		
white/red (rear window on conv) (with ign on only)	-resistors	rear window switch, 6 pin plug, pin 1
purple/blue - blue/green (conv) (with ign on only)	-	convertible top switch, 6 pin plug, pins 1 and 2
N/A		
red/white	+	radio, black 8 pin plug, pin 7, or 2 pin plug, pin 1
brown/red	-	radio, black 8 pin plug, pin 4, or 2 pin plug, pin 2
(CAN bus)		
(CAN bus)		
white	+	radio, black 8 pin plug, pin 5, or black 12 pin plug, pin 4
N/A		
green/yellow - brown, or grn/yel - wht/ye (preamp)	+,-	radio, black 12 pin plug, pins 11 and 8, or 2 and 3
green/blue - brown, or grn/blu - wht/blu (preamp)	+,-	radio, black 12 pin plug, pins 9 and 8, or 8 and 9
green/black - brown, or grn/blk - wht/blk (preamp)	+,-	radio, black 12 pin plug, pins 5 and 8, or 6 and 5
gray/red - brown, or gray/red - gray/wht (preamp)	+,-	radio, black 12 pin plug, pins 3 and 8, or 12 and 11
green - brown	+,-	amplifier behind driver seat, black 32 pin plug, pins 21 - 20, or 5 - 17
red/green - brown/green (Bang and Olufsen only)	+,-	amplifier behind driver seat, black 32 pin plug, pins 25 and 30
yellow - green	+,-	radio, gray 32 pin plug, pins 22 and 6
gray - green	+,-	radio, gray 32 pin plug, pins 21 and 6
	white red/black black/yellow black/red (LIN bus) (LIN bus) use factory alarm arm/disarm see left front window see left front window N/A white/red (rear window on conv) (with ign on only) purple/blue - blue/green (conv) (with ign on only) green/yellow - brown, or grn/yel - wht/ye (preamp) green/blue - brown, or grn/yel - wht/ye (preamp) green/blue - brown, or grn/blu - wht/blk (preamp) green/black - brown, or grn/blk - wht/blk (preamp) gray/red - brown, or gray/red - gray/wht (preamp) gray/red - brown, or gray/red - gray/wht (preamp) gray/red - brown, or gray/red - gray/wht	whiteacred/black+black/yellow-black/red-(LIN bus)-(LIN bus)-use factory alarm arm/disarm-see left front window-N/A-white/red (rear window on conv) (with ign on only)-purple/blue - blue/green (conv) (with ign on only)-N/A-N/A-N/A-N/A-N/A-N/A-N/A-N/A-N/A-N/A-N/A-N/A-N/A-Green/yellow - brown, or grn/yel - wht/ye (preamp)+,-green/blue - brown, or grn/blu - wht/blu (preamp)+,-green/blue - brown, or grn/blu - wht/blu (preamp)+,-green - brown, or gray/red - gray/wht (preamp)+,-green - brown-+,-red/green - brown+,-only)yellow - green+,-

Rise vide ire+Mehicle	Information - $4/1_{N/A}^{2014}$ 2:26:32 AM		
RSE Audio Left (+/-)	yellow - green (satellite/CD/iPod audio)		radio, black 12 pin plug, pins 8 and 2
RSE Audio Right (+/-)	gray - green (satellite/CD/iPod audio)		radio, black 12 pin plug, pins 9 and 2
Satellite Radio 12 Volts	red/purple	+	sat radio behind pass seat, blk 8 pin plug, pin 2
Satellite Radio Ground	brown/red	-	sat radio behind pass seat, blk 8 pin plug, pin 1
Satellite Radio Ignition	(CAN bus)		
Satellite Radio Antenna	(coaxial cable)		
Satellite Audio Left (+/-)	yellow - green	+,-	satellite radio, black 8 pin plug, pins 6 and 5
Satellite Audio Right (+/-)	gray - green	+,-	satellite radio, black 8 pin plug, pins 7 and 5

What Fits

Itaua	Cine	Danth	Location
ltem	Size	Depth	Location
Headunit	irregular		center of dash
Left Front Speaker	6.5 or 8	2.6	left front door
Left Front Tweeter	1 (tweeter); 3 (midrange)	0.8; 1.8	left front pillar; left front door
Right Front Speaker	6.5 or 8	2.6	right front door
Right Front Tweeter	1 (tweeter); 3 (midrange)	0.8; 1.8	right front pillar; right front door
Left Rear Speaker	6.5	2.5	left rear side panel
Left Rear Tweeter	1	1	left rear side panel
Right Rear Speaker	6.5	2.5	right rear side panel
Right Rear Tweeter	1	1	right rear side panel
Center Channel	3	2	top center of dash
Subwoofer	6.5	2	right front footwell
Left Front Headrest			
Right Front Headrest			
Left Right Headrest			
Right Rear Headrest			
Satellite Radio Tuner			behind passenger seat

Additional Wiring Notes

Item	Note
	On Bang and Olufsen systems, the speaker wires are brown/black - brown/red at the amplifier behind driver seat, black 32 pin plug, pins 3 and 15.
	On Bang and Olufsen systems, the speaker wires are brown/blue - brown/white at the amplifier behind driver seat, black 32 pin plug, pins 4 and 16.
	The speaker wires are blue/purple - white/purple (low); blue/purple - white/purple (mid/high) at the amplifier behind driver seat, black 32 pin plug, pins 4 and 3; 7 and 6. On Bang and Olufsen systems, the speaker wires are brown/black - brown/purple (low); brown - green (mid); brown - green (high) at the amplifier behind driver seat, black 32 pin plug, pins 23 and 28; 6 and 18; 8 and 20.
	The speaker wires are blue/purple - white/purple (low); blue/purple - white/purple (mid/high) at the amplifier behind driver seat, black 32 pin plug, pins 16 and 15; 19 and 18. On Bang and Olufsen systems, the speaker wires are brown/black - brown/purple (low); green - brown (mid); brown - blue (high) at the amplifier behind driver seat, black 32 pin plug, pins 10 and 22; 7 and 19; 9 and 21.