

## 1988 Chevrolet Suburban



### Wiring Information

Item	Wire Color	Polarity	Wire Location
12 Volts	red	+	ignition harness
Second 12 Volts			
Starter	yellow or purple	+	ignition harness
Second Starter			
Ignition	pink	+	ignition harness
Second Ignition			
Third Ignition			
Accessory	orange	+	ignition harness
Second Accessory			
Third Accessory			
Key Sense			
Data Bus			
Can Bus High			
Can Bus Low			
Can Bus Sw			
Power Lock	lt. blue	+	driver door harness
Power Unlock	black/white	+	driver door harness
Lock Motor			
Unlock Motor			
Disarm Defeat			
Parking Lights (+)	brown		switch or fuse panel
Parking Lights (-)			
Hazards			
Turn Signal (Left)			
Turn Signal (Right)			

*Wiring Information (Continued)*

Item	Wire Color	Polarity	Wire Location
Headlight	yellow	+	at switch
AutoLights			
Reverse Light			
Left Front Door Trigger	white	-	under dash area
Right Front Door Trigger			
Left Rear Door Trigger			
Right Rear Door Trigger			
Dome Supervision			
Trunk/Hatch Pin	tied in with doors		
Rear Glass Pin			
Hood Pin			
Trunk Hatch/Release			
Trunk Release Motor			
Fuel Door Release			
Power Sliding Door (Left)			
Power Sliding Door (Right)			
Factory Alarm Arm			
Factory Alarm Disarm			
Disarm No Unlock			
Trunk Alarm Shunt			
Tachometer	purple/white	AC	dist. or ECM
Wait to Start			
Neutral Safety			
Clutch Pedal			
Fuel Pump			
Rear Defroster			
Mirror Defroster			
Left Front Heated Seat			
Right Front Heated Seat			

*Wiring Information (Continued)*

Item	Wire Color	Polarity	Wire Location
Speed Sense			
Brake Wire	white	+	at brake pedal switch
Parking Brake			
Horn Trigger	black	-	at column
Wipers	purple		steering column
Left Front Window (Up/Down)	dk. blue - brown	A	at drivers door switch
Right Front Window (Up/Down)	blu/wht - tan	A	drivers door or boot
Left Rear Window (Up/Down)	green - purple	A	drivers door or boot
Right Rear Window (Up/Down)	lt. grn - pur/wht	A	drivers door or boot
Sun Roof (Open/Close)			
Sun Roof (Limit/Close)			
Memory Seat 1			
Memory Seat 2			
Memory Seat 3			
Radio 12V			
Radio Ground			
Radio Ignition			
Radio Illumination			
Factory Amp Turn-on			
Power Antenna			
Left Front Speaker (+/-)			
Right Front Speaker (+/-)			
Left Rear Speaker (+/-)			
Right Rear Speaker (+/-)			
Center Channel (+/-)			
Subwoofer (+/-)			
Aux. Audio Input Left (+/-)			
Aux. Audio Input Right (+/-)			
RSE Video (+/-)			
RSE Audio Left (+/-)			
RSE Audio Right (+/-)			
Satellite Radio 12 Volts			
Satellite Radio Ground			
Satellite Radio Ignition			
Satellite Radio Antenna			
Satellite Audio Left (+/-)			
Satellite Audio Right (+/-)			

*What Fits*


---

Item	Size	Depth	Location
<b>Headunit</b>			
<b>Left Front Speaker</b>			
<b>Left Front Tweeter</b>			
<b>Right Front Speaker</b>			
<b>Right Front Tweeter</b>			
<b>Left Rear Speaker</b>			
<b>Left Rear Tweeter</b>			
<b>Right Rear Speaker</b>			
<b>Right Rear Tweeter</b>			
<b>Center Channel</b>			
<b>Subwoofer</b>			
<b>Left Front Headrest</b>			
<b>Right Front Headrest</b>			
<b>Left Right Headrest</b>			
<b>Right Rear Headrest</b>			
<b>Satellite Radio Tuner</b>			