

## 1988 Chevrolet S-10 Blazer



### Wiring Information

| Item                | Wire Color       | Polarity | Wire Location          |
|---------------------|------------------|----------|------------------------|
| 12 Volts            | red              | +        | ignition harness       |
| Second 12 Volts     |                  |          |                        |
| Starter             | yellow or purple | +        | ignition harness       |
| Second Starter      |                  |          |                        |
| Ignition            | pink             | +        | ignition harness       |
| Second Ignition     |                  |          |                        |
| Third Ignition      |                  |          |                        |
| Accessory           | orange           | +        | ignition harness       |
| Second Accessory    |                  |          |                        |
| Third Accessory     |                  |          |                        |
| Key Sense           |                  |          |                        |
| Data Bus            |                  |          |                        |
| Can Bus High        |                  |          |                        |
| Can Bus Low         |                  |          |                        |
| Can Bus Sw          |                  |          |                        |
| Power Lock          | lt. blue         | 5wi      | drivers kick panel     |
| Power Unlock        | black/white      | 5wi      | drivers kick panel     |
| Lock Motor          |                  |          |                        |
| Unlock Motor        |                  |          |                        |
| Disarm Defeat       |                  |          |                        |
| Parking Lights (+)  | brown            |          | switch or rear harness |
| Parking Lights (-)  |                  |          |                        |
| Hazards             |                  |          |                        |
| Turn Signal (Left)  |                  |          |                        |
| Turn Signal (Right) |                  |          |                        |

*Wiring Information (Continued)*

| Item                       | Wire Color       | Polarity | Wire Location         |
|----------------------------|------------------|----------|-----------------------|
| Headlight                  | yellow           | +        | at switch             |
| AutoLights                 |                  |          |                       |
| Reverse Light              |                  |          |                       |
| Left Front Door Trigger    | white            | -        | pin or courtesy light |
| Right Front Door Trigger   |                  |          |                       |
| Left Rear Door Trigger     |                  |          |                       |
| Right Rear Door Trigger    |                  |          |                       |
| Dome Supervision           | use door trigger |          |                       |
| Trunk/Hatch Pin            |                  |          |                       |
| Rear Glass Pin             |                  |          |                       |
| Hood Pin                   |                  |          |                       |
| Trunk Hatch/Release        | black            | +        | relay under left dash |
| Trunk Release Motor        |                  |          |                       |
| Fuel Door Release          |                  |          |                       |
| Power Sliding Door (Left)  |                  |          |                       |
| Power Sliding Door (Right) |                  |          |                       |
| Factory Alarm Arm          |                  |          |                       |
| Factory Alarm Disarm       |                  |          |                       |
| Disarm No Unlock           |                  |          |                       |
| Trunk Alarm Shunt          |                  |          |                       |
| Tachometer                 | white            | AC       | coil on top of engine |
| Wait to Start              |                  |          |                       |
| Neutral Safety             |                  |          |                       |
| Clutch Pedal               |                  |          |                       |
| Fuel Pump                  |                  |          |                       |
| Rear Defroster             |                  |          |                       |
| Mirror Defroster           |                  |          |                       |
| Left Front Heated Seat     |                  |          |                       |
| Right Front Heated Seat    |                  |          |                       |

*Wiring Information (Continued)*

| Item                                | Wire Color          | Polarity | Wire Location           |
|-------------------------------------|---------------------|----------|-------------------------|
| <b>Speed Sense</b>                  |                     |          |                         |
| <b>Brake Wire</b>                   | white               | +        | at brake pedal switch   |
| <b>Parking Brake</b>                |                     |          |                         |
| <b>Horn Trigger</b>                 | black               | -        | steering column         |
| <b>Wipers</b>                       | purple              | +        | left of steering column |
| <b>Left Front Window (Up/Down)</b>  | dk. blue - brown    | A        | in drivers door         |
| <b>Right Front Window (Up/Down)</b> | blu/wht - tan       | A        | drivers door harness    |
| <b>Left Rear Window (Up/Down)</b>   | dk. green - purple  | A        | drivers door harness    |
| <b>Right Rear Window (Up/Down)</b>  | lt. green - pur/wht | A        | drivers door harness    |
| <b>Sun Roof (Open/Close)</b>        |                     |          |                         |
| <b>Sun Roof (Limit/Close)</b>       |                     |          |                         |
| <b>Memory Seat 1</b>                |                     |          |                         |
| <b>Memory Seat 2</b>                |                     |          |                         |
| <b>Memory Seat 3</b>                |                     |          |                         |
| <b>Radio 12V</b>                    |                     |          |                         |
| <b>Radio Ground</b>                 |                     |          |                         |
| <b>Radio Ignition</b>               |                     |          |                         |
| <b>Radio Illumination</b>           |                     |          |                         |
| <b>Factory Amp Turn-on</b>          |                     |          |                         |
| <b>Power Antenna</b>                |                     |          |                         |
| <b>Left Front Speaker (+/-)</b>     |                     |          |                         |
| <b>Right Front Speaker (+/-)</b>    |                     |          |                         |
| <b>Left Rear Speaker (+/-)</b>      |                     |          |                         |
| <b>Right Rear Speaker (+/-)</b>     |                     |          |                         |
| <b>Center Channel (+/-)</b>         |                     |          |                         |
| <b>Subwoofer (+/-)</b>              |                     |          |                         |
| <b>Aux. Audio Input Left (+/-)</b>  |                     |          |                         |
| <b>Aux. Audio Input Right (+/-)</b> |                     |          |                         |
| <b>RSE Video (+/-)</b>              |                     |          |                         |
| <b>RSE Audio Left (+/-)</b>         |                     |          |                         |
| <b>RSE Audio Right (+/-)</b>        |                     |          |                         |
| <b>Satellite Radio 12 Volts</b>     |                     |          |                         |
| <b>Satellite Radio Ground</b>       |                     |          |                         |
| <b>Satellite Radio Ignition</b>     |                     |          |                         |
| <b>Satellite Radio Antenna</b>      |                     |          |                         |
| <b>Satellite Audio Left (+/-)</b>   |                     |          |                         |
| <b>Satellite Audio Right (+/-)</b>  |                     |          |                         |

*What Fits*


---

| Item                         | Size | Depth | Location |
|------------------------------|------|-------|----------|
| <b>Headunit</b>              |      |       |          |
| <b>Left Front Speaker</b>    |      |       |          |
| <b>Left Front Tweeter</b>    |      |       |          |
| <b>Right Front Speaker</b>   |      |       |          |
| <b>Right Front Tweeter</b>   |      |       |          |
| <b>Left Rear Speaker</b>     |      |       |          |
| <b>Left Rear Tweeter</b>     |      |       |          |
| <b>Right Rear Speaker</b>    |      |       |          |
| <b>Right Rear Tweeter</b>    |      |       |          |
| <b>Center Channel</b>        |      |       |          |
| <b>Subwoofer</b>             |      |       |          |
| <b>Left Front Headrest</b>   |      |       |          |
| <b>Right Front Headrest</b>  |      |       |          |
| <b>Left Right Headrest</b>   |      |       |          |
| <b>Right Rear Headrest</b>   |      |       |          |
| <b>Satellite Radio Tuner</b> |      |       |          |