

## 1998 Mercedes Benz CLK Class



### Wiring Information

Item	Wire Color	Polarity	Wire Location
12 Volts	red	+	ignition harness
Second 12 Volts			
Starter	purple	+	ignition harness
Second Starter			
Ignition	pink/red	+	ignition harness
Second Ignition	pink/yellow	+	ignition harness
Third Ignition	black/green	+	ignition harness
Accessory			
Second Accessory			
Third Accessory			
Key Sense			
Data Bus			
Can Bus High			
Can Bus Low			
Can Bus Sw			
Power Lock	black	-	driver door module
Power Unlock	blue	-	driver door module
Lock Motor			
Unlock Motor			
Disarm Defeat			
Parking Lights (+)	gry/red & gry/blk	+	illumin. control module
Parking Lights (-)			
Hazards			
Turn Signal (Left)			
Turn Signal (Right)			

*Wiring Information (Continued)*

Item	Wire Color	Polarity	Wire Location
<b>Headlight</b>	yellow & yel/blk	5wi	illumin. control module
<b>AutoLights</b>			
<b>Reverse Light</b>			
<b>Left Front Door Trigger</b>	brown/gray	-	pin switch
<b>Right Front Door Trigger</b>	brown/blue	-	pin switch
<b>Left Rear Door Trigger</b>			
<b>Right Rear Door Trigger</b>			
<b>Dome Supervision</b>	comes on with unlock		
<b>Trunk/Hatch Pin</b>	brown/yellow	-	trunk light
<b>Rear Glass Pin</b>			
<b>Hood Pin</b>	brown/red	-	hood switch
<b>Trunk Hatch/Release</b>	yellow	-	release switch
<b>Trunk Release Motor</b>			
<b>Fuel Door Release</b>			
<b>Power Sliding Door (Left)</b>			
<b>Power Sliding Door (Right)</b>			
<b>Factory Alarm Arm</b>	arms with lock		
<b>Factory Alarm Disarm</b>	disarms with unlock		
<b>Disarm No Unlock</b>			
<b>Trunk Alarm Shunt</b>			
<b>Tachometer</b>	NOT black/yellow or black/green	ac	any ignition coil
<b>Wait to Start</b>			
<b>Neutral Safety</b>			
<b>Clutch Pedal</b>			
<b>Fuel Pump</b>			
<b>Rear Defroster</b>			
<b>Mirror Defroster</b>			
<b>Left Front Heated Seat</b>			
<b>Right Front Heated Seat</b>			

*Wiring Information (Continued)*

Item	Wire Color	Polarity	Wire Location
Speed Sense	green/purple	ac	radio harness
Brake Wire	black or blk/wht	+	brake pedal switch
Parking Brake			
Horn Trigger			
Wipers	yel/wht & yel/gry	+	wiper motor
Left Front Window (Up/Down)	see notes		
Right Front Window (Up/Down)			
Left Rear Window (Up/Down)			
Right Rear Window (Up/Down)			
Sun Roof (Open/Close)	see notes		
Sun Roof (Limit/Close)			
Memory Seat 1			
Memory Seat 2			
Memory Seat 3			
Radio 12V	red/blue or red/white	+	radio harness
Radio Ground	brown	-	radio harness
Radio Ignition	pink/green	+	radio harness
Radio Illumination	gray/blue (dimmer)	+	radio harness
Factory Amp Turn-on	same as power antenna wire		
Power Antenna	blue/white	+	radio harness
Left Front Speaker (+/-)	green - brown/green	+,-	radio harness or amp in driver side of trunk
Right Front Speaker (+/-)	orange - brown/orange	+,-	radio harness or amp in driver side of trunk
Left Rear Speaker (+/-)	pink - brown/pink	+,-	radio harness
Right Rear Speaker (+/-)	white - brown/white	+,-	radio harness
Center Channel (+/-)			
Subwoofer (+/-)			
Aux. Audio Input Left (+/-)			
Aux. Audio Input Right (+/-)			
RSE Video (+/-)			
RSE Audio Left (+/-)			
RSE Audio Right (+/-)			
Satellite Radio 12 Volts			
Satellite Radio Ground			
Satellite Radio Ignition			
Satellite Radio Antenna			
Satellite Audio Left (+/-)			
Satellite Audio Right (+/-)			

*What Fits*


---

Item	Size	Depth	Location
<b>Headunit</b>			
<b>Left Front Speaker</b>			
<b>Left Front Tweeter</b>			
<b>Right Front Speaker</b>			
<b>Right Front Tweeter</b>			
<b>Left Rear Speaker</b>			
<b>Left Rear Tweeter</b>			
<b>Right Rear Speaker</b>			
<b>Right Rear Tweeter</b>			
<b>Center Channel</b>			
<b>Subwoofer</b>			
<b>Left Front Headrest</b>			
<b>Right Front Headrest</b>			
<b>Left Right Headrest</b>			
<b>Right Rear Headrest</b>			
<b>Satellite Radio Tuner</b>			

*Additional Wiring Notes*

Item	Note
<b>Left Rear Speaker (+/-)</b>	On models with the amplifier, the wires are gray - brown/gray at the amplifier.
<b>Right Rear Speaker (+/-)</b>	On models with the amplifier, the wires are purple - brown/purple at the amplifier.
<b>Left Front Speaker (+/-)</b>	On models with the amplifier, the woofer and tweeter are separate. The other speaker wires at the amplifier are pink - brown/pink.
<b>Right Front Speaker (+/-)</b>	On models with the amplifier, the woofer and tweeter are separate. The other speaker wires at the amplifier are white - brown/white.
<b>Left Front Door Trigger</b>	Also found at the alarm module. The alarm is integrated in the Pneumatic System Equipment (PSE) control module in the passenger side of the trunk.
<b>Headlight</b>	The illumination control module is attached to the back of the headlight switch. The parking lights and headlights must be relay isolated from the control module.
<b>Hood Pin</b>	Also found at the alarm module. The alarm is integrated in the Pneumatic System Equipment (PSE) control module in the passenger side of the trunk.
<b>Left Front Window (Up/Down)</b>	Extended triggers on the door lock wires will roll the windows up/down and open/close the sunroof. Use validity channels to control.
<b>Parking Lights (+)</b>	The illumination control module is attached to the back of the headlight switch. The parking lights and headlights must be relay isolated from the control module.
<b>Power Lock</b>	Also found at the alarm module. The alarm is integrated in the Pneumatic System Equipment (PSE) control module in the passenger side of the trunk.
<b>Power Unlock</b>	Also found at the alarm module. The alarm is integrated in the Pneumatic System Equipment (PSE) control module in the passenger side of the trunk.
<b>Sun Roof (Open/Close)</b>	Extended triggers on the door lock wires will roll the windows up/down and open/close the sunroof. Use validity channels to control.
<b>Trunk/Hatch Pin</b>	Also found at the alarm module. The alarm is integrated in the Pneumatic System Equipment (PSE) control module in the passenger side of the trunk.
<b>Trunk Hatch/Release</b>	Also found at the alarm module. The alarm is integrated in the Pneumatic System Equipment (PSE) control module in the passenger side of the trunk.
<b>Left Front Window (Up/Down)</b>	Extended triggers on the door lock wires will roll the windows up/down and open/close the sunroof. Use validity channels to control.
<b>Right Front Door Trigger</b>	Also found at the alarm module. The alarm is integrated in the Pneumatic System Equipment (PSE) control module in the passenger side of the trunk.