

2000 Mercedes Benz CLK Class



Wiring Information

| Item | Wire Color | Polarity | Wire Location |
|---------------------|-------------------|----------|-------------------------|
| 12 Volts | red | + | ignition harness |
| Second 12 Volts | | | |
| Starter | purple | + | ignition harness |
| Second Starter | | | |
| Ignition | pink/red | + | ignition harness |
| Second Ignition | pink/yellow | + | ignition harness |
| Third Ignition | black/green | + | ignition harness |
| Accessory | | | |
| Second Accessory | | | |
| Third Accessory | | | |
| Key Sense | | | |
| Data Bus | | | |
| Can Bus High | | | |
| Can Bus Low | | | |
| Can Bus Sw | | | |
| Power Lock | black | - | driver door module or |
| Power Unlock | blue | - | driver door module or |
| Lock Motor | | | |
| Unlock Motor | | | |
| Disarm Defeat | | | |
| Parking Lights (+) | gry/red & gry/blk | | illumin. control module |
| Parking Lights (-) | | | |
| Hazards | | | |
| Turn Signal (Left) | | | |
| Turn Signal (Right) | | | |

Wiring Information (Continued)

| Item | Wire Color | Polarity | Wire Location |
|-----------------------------------|----------------------|----------|-------------------------|
| Headlight | yellow & yel/blk | 5wi | illumin. control module |
| AutoLights | | | |
| Reverse Light | | | |
| Left Front Door Trigger | | - | pin switches or |
| Right Front Door Trigger | | | |
| Left Rear Door Trigger | | | |
| Right Rear Door Trigger | | | |
| Dome Supervision | comes on with unlock | | |
| Trunk/Hatch Pin | brown/yellow | - | trunk light or |
| Rear Glass Pin | | | |
| Hood Pin | brown/red | - | hood switch or |
| Trunk Hatch/Release | yellow | - | release switch or |
| Trunk Release Motor | | | |
| Fuel Door Release | | | |
| Power Sliding Door (Left) | | | |
| Power Sliding Door (Right) | | | |
| Factory Alarm Arm | arms with lock | | |
| Factory Alarm Disarm | disarms with unlock | | |
| Disarm No Unlock | | | |
| Trunk Alarm Shunt | | | |
| Tachometer | | | ignition coils |
| Wait to Start | | | |
| Neutral Safety | | | |
| Clutch Pedal | | | |
| Fuel Pump | | | |
| Rear Defroster | | | |
| Mirror Defroster | | | |
| Left Front Heated Seat | | | |
| Right Front Heated Seat | | | |

Wiring Information (Continued)

| Item | Wire Color | Polarity | Wire Location |
|------------------------------|-------------------|----------|--------------------|
| Speed Sense | green/purple | | radio harness |
| Brake Wire | black or blk/wht | + | brake pedal switch |
| Parking Brake | | | |
| Horn Trigger | | | |
| Wipers | yel/wht & yel/gry | + | wiper motor |
| Left Front Window (Up/Down) | | | |
| Right Front Window (Up/Down) | | | |
| Left Rear Window (Up/Down) | | | |
| Right Rear Window (Up/Down) | | | |
| Sun Roof (Open/Close) | | | |
| Sun Roof (Limit/Close) | | | |
| Memory Seat 1 | | | |
| Memory Seat 2 | | | |
| Memory Seat 3 | | | |
| Radio 12V | | | |
| Radio Ground | | | |
| Radio Ignition | | | |
| Radio Illumination | | | |
| Factory Amp Turn-on | | | |
| Power Antenna | | | |
| Left Front Speaker (+/-) | | | |
| Right Front Speaker (+/-) | | | |
| Left Rear Speaker (+/-) | | | |
| Right Rear Speaker (+/-) | | | |
| Center Channel (+/-) | | | |
| Subwoofer (+/-) | | | |
| Aux. Audio Input Left (+/-) | | | |
| Aux. Audio Input Right (+/-) | | | |
| RSE Video (+/-) | | | |
| RSE Audio Left (+/-) | | | |
| RSE Audio Right (+/-) | | | |
| Satellite Radio 12 Volts | | | |
| Satellite Radio Ground | | | |
| Satellite Radio Ignition | | | |
| Satellite Radio Antenna | | | |
| Satellite Audio Left (+/-) | | | |
| Satellite Audio Right (+/-) | | | |

What Fits

| Item | Size | Depth | Location |
|------------------------------|------|-------|----------|
| Headunit | | | |
| Left Front Speaker | | | |
| Left Front Tweeter | | | |
| Right Front Speaker | | | |
| Right Front Tweeter | | | |
| Left Rear Speaker | | | |
| Left Rear Tweeter | | | |
| Right Rear Speaker | | | |
| Right Rear Tweeter | | | |
| Center Channel | | | |
| Subwoofer | | | |
| Left Front Headrest | | | |
| Right Front Headrest | | | |
| Left Right Headrest | | | |
| Right Rear Headrest | | | |
| Satellite Radio Tuner | | | |

Additional Wiring Notes

| Item | Note |
|------------------------------------|---|
| Left Front Door Trigger | The driver door trigger is brown/gray, and the passenger door trigger is brown/blue. Also found at the alarm module. The alarm is integrated in the Pneumatic System Equipment (PSE) control module in the passenger side of the trunk. |
| Headlight | The illumination control module is attached to the back of the headlight switch. The parking lights and headlights must be relay isolated from the control module. |
| Hood Pin | Also found at the alarm module. The alarm is integrated in the Pneumatic System Equipment (PSE) control module in the passenger side of the trunk. |
| Left Front Window (Up/Down) | Extended triggers on the door lock wires will roll the windows up/down and open/close the sunroof. Use validity channels to control. |
| Parking Lights (+) | The illumination control module is attached to the back of the headlight switch. The parking lights and headlights must be relay isolated from the control module. |
| Power Lock | Also found at the alarm module. The alarm is integrated in the Pneumatic System Equipment (PSE) control module in the passenger side of the trunk. |
| Power Unlock | Also found at the alarm module. The alarm is integrated in the Pneumatic System Equipment (PSE) control module in the passenger side of the trunk. |
| Sun Roof (Open/Close) | Extended triggers on the door lock wires will roll the windows up/down and open/close the sunroof. Use validity channels to control. |
| Tachometer | There are individual coils for each cylinder. Go to any one and use the wire that is NOT black/yellow or black/green. |
| Trunk/Hatch Pin | Also found at the alarm module. The alarm is integrated in the Pneumatic System Equipment (PSE) control module in the passenger side of the trunk. |
| Trunk Hatch/Release | Also found at the alarm module. The alarm is integrated in the Pneumatic System Equipment (PSE) control module in the passenger side of the trunk. |
| Left Front Window (Up/Down) | Extended triggers on the door lock wires will roll the windows up/down and open/close the sunroof. Use validity channels to control. |