

## 2001 Cadillac Seville STS



## Wiring Information

Item	Wire Color	Polarity	Wire Location
12 Volts	orange (15A)	+	ignition harness
Second 12 Volts	N/A		
Starter	yellow	+	ignition harness
Second Starter	N/A		
Ignition	pink	+	ignition harness
Second Ignition	white	+	ignition harness
Third Ignition	N/A		
Accessory	orange	+	ignition harness
Second Accessory	brown	+	ignition harness
Third Accessory	N/A		
Key Sense	lt. green	-	ignition harness
Data Bus	purple (Class 2 Serial Data)	data	PASS-Key III Module above the brake pedal
Can Bus High	N/A		
Can Bus Low	N/A		
Can Bus Sw	purple (Class 2 Serial Data)	data	data link connector, black 16 pin plug, pin 2
Power Lock	red/black	-	driver window switch
Power Unlock	orange/black	-	driver window switch
Lock Motor	gray	5 wire	Driver Door Module
Unlock Motor	tan	5 wire	Driver Door Module
Disarm Defeat	tan	5 wire	Passenger Door Module
Parking Lights (+)	purple (L), brown/white (R)	+	fuse block under driver rear seat
Parking Lights (-)	brown/white	-	headlight switch
Hazards			
Turn Signal (Left)			
Turn Signal (Right)			

## Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
Headlight	white	-	headlight switch
AutoLights			
Reverse Light	lt. green	+	fuse block under driver rear seat
Left Front Door Trigger	tan	-	Driver Door Module
Right Front Door Trigger	dk. blue	-	Passenger Door Module
Left Rear Door Trigger	dk. blue	-	Left Rear Door Module
Right Rear Door Trigger	dk. blue	-	Right Rear Door Module
Dome Supervision	gray	-	underdash light
Trunk/Hatch Pin	red/black	-	RIM module
Rear Glass Pin			
Hood Pin			
Trunk Hatch/Release	black	-	trunk release switch
Trunk Release Motor			
Fuel Door Release	pink/white	-	fuel door release switch
Power Sliding Door (Left)			
Power Sliding Door (Right)			
Factory Alarm Arm	arms on lock with door open		
Factory Alarm Disarm	lt. green	-	Driver Door Module
Disarm No Unlock	see factory alarm disarm		
Trunk Alarm Shunt			
Tachometer	purple/white	ac	ignition coil on top of motor
Wait to Start			
Neutral Safety			
Clutch Pedal			
Fuel Pump			
Rear Defroster			
Mirror Defroster			
Left Front Heated Seat			
Right Front Heated Seat			

## Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
Speed Sense	dk. green/white	ac	cruise control module
Brake Wire	white	+	low in drivers kick
Parking Brake	black to lt. blue	-	parking brake switch
Horn Trigger	black	-	horn switch
Wipers	white	+	wiper switch
Left Front Window (Up/Down)	dk. blue - brown	A	Driver Door Module
Right Front Window (Up/Down)	dk. blue - brown	A	Passenger Door Module
Left Rear Window (Up/Down)	dk. blue - brown	A	Left Rear Door Module
Right Rear Window (Up/Down)	dk. blue - brown	A	Right Rear Door Module
Sun Roof (Open/Close)	dk. green - lt. green	A	sunroof motor rear of roof
Sun Roof (Limit/Close)	red	-	sunroof motor rear of roof
Memory Seat 1	white	-	driver window switch
Memory Seat 2	purple	-	driver window switch
Memory Seat 3	N/A		
Radio 12V	orange	+	radio
Radio Ground	black	-	radio
Radio Ignition			
Radio Illumination	yellow/black (dimmer)	+	radio
Factory Amp Turn-on			
Power Antenna			
Left Front Speaker (+/-)			
Right Front Speaker (+/-)			
Left Rear Speaker (+/-)			
Right Rear Speaker (+/-)			
Center Channel (+/-)			
Subwoofer (+/-)			
Aux. Audio Input Left (+/-)			
Aux. Audio Input Right (+/-)			
RSE Video (+/-)			
RSE Audio Left (+/-)			
RSE Audio Right (+/-)			
Satellite Radio 12 Volts			
Satellite Radio Ground			
Satellite Radio Ignition			
Satellite Radio Antenna			
Satellite Audio Left (+/-)			
Satellite Audio Right (+/-)			

What Fits

Item	Size	Depth	Location
Headunit			
Left Front Speaker			
Left Front Tweeter			
Right Front Speaker			
Right Front Tweeter			
Left Rear Speaker			
Left Rear Tweeter			
Right Rear Speaker			
Right Rear Tweeter			
Center Channel			
Subwoofer			
Left Front Headrest			
Right Front Headrest			
Left Right Headrest			
Right Rear Headrest			
Satellite Radio Tuner			

Additional Wiring Notes

Item	Note
<b>Key Sense</b>	The ignition harness is accessed by removing, but not unplugging the radio.
<b>12 Volts</b>	The ignition harness is accessed by removing, but not unplugging the radio.
<b>Accessory</b>	The ignition harness is accessed by removing, but not unplugging the radio.
<b>Second Accessory</b>	The ignition harness is accessed by removing, but not unplugging the radio.
<b>Trunk/Hatch Pin</b>	The RIM module is located behind the rear seat in the lower corner on the passenger side.
<b>Speed Sense</b>	The cruise control module is located under the hood at the top center of the firewall.
<b>Starter</b>	The ignition harness is accessed by removing, but not unplugging the radio.
<b>Ignition</b>	The ignition harness is accessed by removing, but not unplugging the radio.
<b>Second Ignition</b>	The ignition harness is accessed by removing, but not unplugging the radio.