

1995 Dodge RAM



Wiring Information

Item	Wire Color	Polarity	Wire Location
12 Volts	red or pink/black	+	ignition harness
Second 12 Volts			
Starter	yellow or blu/yel	+	ignition harness
Second Starter			
Ignition	dk. blue	+	ignition harness
Second Ignition			
Third Ignition			
Accessory	black/orange	+	ignition harness
Second Accessory			
Third Accessory			
Key Sense			
Data Bus			
Can Bus High			
Can Bus Low			
Can Bus Sw			
Power Lock	orange/purple	5wi	lt blue plug in driver kick
Power Unlock	pink/purple	5wi	lt blue plug in driver kick
Lock Motor			
Unlock Motor			
Disarm Defeat			
Parking Lights (+)	black/yellow		yellow plug in driver kick
Parking Lights (-)			
Hazards			
Turn Signal (Left)			
Turn Signal (Right)			

Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
Headlight	lt. green	+	steering column
AutoLights			
Reverse Light			
Left Front Door Trigger	yellow	-	yellow plug in driver kick
Right Front Door Trigger			
Left Rear Door Trigger			
Right Rear Door Trigger			
Dome Supervision	use door trigger		
Trunk/Hatch Pin			
Rear Glass Pin			
Hood Pin			
Trunk Hatch/Release			
Trunk Release Motor			
Fuel Door Release			
Power Sliding Door (Left)			
Power Sliding Door (Right)			
Factory Alarm Arm			
Factory Alarm Disarm			
Disarm No Unlock			
Trunk Alarm Shunt			
Tachometer	gry/blk, blk/gry	AC	ignition coil
Wait to Start	orange/black	-	PCM
Neutral Safety			
Clutch Pedal			
Fuel Pump			
Rear Defroster			
Mirror Defroster			
Left Front Heated Seat			
Right Front Heated Seat			

Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
Speed Sense			
Brake Wire	white/brown	+	brake pedal switch
Parking Brake			
Horn Trigger	dk. green/red	+	relay at fuse box
Wipers	red/yellow	+	wiper switch
Left Front Window (Up/Down)	lt. blue - white	A	drivers door switch
Right Front Window (Up/Down)	brn/wht - pur/wht	A	drivers door switch
Left Rear Window (Up/Down)			
Right Rear Window (Up/Down)			
Sun Roof (Open/Close)			
Sun Roof (Limit/Close)			
Memory Seat 1			
Memory Seat 2			
Memory Seat 3			
Radio 12V	pink	+	radio harness
Radio Ground	black/lt. green	-	radio harness
Radio Ignition	red/white	+	radio harness
Radio Illumination	black/yellow	+	radio harness
Factory Amp Turn-on	dk. green/red	+	radio harness
Power Antenna	N/A		
Left Front Speaker (+/-)	dk. green - brown/red	+,-	radio harness
Right Front Speaker (+/-)	purple - dk. blue/red	+,-	radio harness
Left Rear Speaker (+/-)	brown/yellow - brown/lt. blue	+,-	radio harness
Right Rear Speaker (+/-)	dk. blue/wht - dk. blue/org	+,-	radio harness
Center Channel (+/-)			
Subwoofer (+/-)			
Aux. Audio Input Left (+/-)			
Aux. Audio Input Right (+/-)			
RSE Video (+/-)			
RSE Audio Left (+/-)			
RSE Audio Right (+/-)			
Satellite Radio 12 Volts			
Satellite Radio Ground			
Satellite Radio Ignition			
Satellite Radio Antenna			
Satellite Audio Left (+/-)			
Satellite Audio Right (+/-)			

What Fits

Item	Size	Depth	Location
Headunit			
Left Front Speaker			
Left Front Tweeter			
Right Front Speaker			
Right Front Tweeter			
Left Rear Speaker			
Left Rear Tweeter			
Right Rear Speaker			
Right Rear Tweeter			
Center Channel			
Subwoofer			
Left Front Headrest			
Right Front Headrest			
Left Right Headrest			
Right Rear Headrest			
Satellite Radio Tuner			

Additional Wiring Notes

Item	Note
Wait to Start	The PCM (Powertrain Control Module) is on the passenger side firewall under the hood.
Wait to Start	The PCM (Powertrain Control Module) is on the passenger side firewall under the hood.
Horn Trigger	Also black/red (-) at column or relay.
Tachometer	Also located as gray/blue at large plug through firewall on drivers side at highest point of firewall, also gray/blue at cluster.