

1997 Toyota Previa



Wiring Information

Item	Wire Color	Polarity	Wire Location
12 Volts	white, white/red	+	ignition harness
Second 12 Volts			
Starter	black/white	+	ignition harness
Second Starter			
Ignition	black/red	+	ignition harness
Second Ignition	black/yellow	+	ignition harness
Third Ignition			
Accessory	blue/red	+	ignition harness
Second Accessory			
Third Accessory			
Key Sense			
Data Bus			
Can Bus High			
Can Bus Low			
Can Bus Sw			
Power Lock	blue/white	-	door lock/anti-theft mod
Power Unlock	blue	-	door lock/anti-theft mod
Lock Motor			
Unlock Motor			
Disarm Defeat			
Parking Lights (+)	green		dr. kick or fusebox
Parking Lights (-)	green/orange		at switch
Hazards			
Turn Signal (Left)			
Turn Signal (Right)			

Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
Headlight	red/white	-	at switch
AutoLights			
Reverse Light			
Left Front Door Trigger	red/black	-	under left dash
Right Front Door Trigger			
Left Rear Door Trigger			
Right Rear Door Trigger			
Dome Supervision			
Trunk/Hatch Pin	tied in with door		
Rear Glass Pin			
Hood Pin	black/yellow	-	anti-theft module
Trunk Hatch/Release			
Trunk Release Motor			
Fuel Door Release			
Power Sliding Door (Left)			
Power Sliding Door (Right)			
Factory Alarm Arm	arms with lock		
Factory Alarm Disarm	disarms with unlock		
Disarm No Unlock	red/white	-	anti-theft module
Trunk Alarm Shunt			
Tachometer	black	AC	diagnostic plug
Wait to Start			
Neutral Safety			
Clutch Pedal			
Fuel Pump			
Rear Defroster			
Mirror Defroster			
Left Front Heated Seat			
Right Front Heated Seat			

Wiring Information (Continued)

Item	Wire Color	Polarity	Wire Location
Speed Sense			
Brake Wire	green/white	+	brake pedal switch
Parking Brake			
Horn Trigger	green/red	-	steering column
Wipers			
Left Front Window (Up/Down)	grn/wht - red/wht	A	in drivers door
Right Front Window (Up/Down)	green - red/blu	A	in drivers door or dkp
Left Rear Window (Up/Down)			
Right Rear Window (Up/Down)			
Sun Roof (Open/Close)			
Sun Roof (Limit/Close)			
Memory Seat 1			
Memory Seat 2			
Memory Seat 3			
Radio 12V			
Radio Ground			
Radio Ignition			
Radio Illumination			
Factory Amp Turn-on			
Power Antenna			
Left Front Speaker (+/-)			
Right Front Speaker (+/-)			
Left Rear Speaker (+/-)			
Right Rear Speaker (+/-)			
Center Channel (+/-)			
Subwoofer (+/-)			
Aux. Audio Input Left (+/-)			
Aux. Audio Input Right (+/-)			
RSE Video (+/-)			
RSE Audio Left (+/-)			
RSE Audio Right (+/-)			
Satellite Radio 12 Volts			
Satellite Radio Ground			
Satellite Radio Ignition			
Satellite Radio Antenna			
Satellite Audio Left (+/-)			
Satellite Audio Right (+/-)			

What Fits

Item	Size	Depth	Location
Headunit			
Left Front Speaker			
Left Front Tweeter			
Right Front Speaker			
Right Front Tweeter			
Left Rear Speaker			
Left Rear Tweeter			
Right Rear Speaker			
Right Rear Tweeter			
Center Channel			
Subwoofer			
Left Front Headrest			
Right Front Headrest			
Left Right Headrest			
Right Rear Headrest			
Satellite Radio Tuner			

Additional Wiring Notes

Item	Note
Disarm No Unlock	The door lock/anti-theft module is left of steering column.
Left Front Door Trigger	Locate at white diode pack taped to a harness at the back of the instrument cluster basket. Go straight up from the base of the steering column to find the harness at the back of the cluster. Also found black/yellow at the anti-theft module if equipped.
Hood Pin	The door lock/anti-theft module is left of steering column.
Power Lock	The door lock/anti-theft module is left of steering column.
Power Unlock	The door lock/anti-theft module is left of steering column.
Tachometer	Diagnosis plug located under front of driver seat.