

## 1993 Porsche 911 Carrera 2/4



## Wiring Information

| Item                | Wire Color          | Polarity | Wire Location          |
|---------------------|---------------------|----------|------------------------|
| 12 Volts            | red                 | +        | ignition harness       |
| Second 12 Volts     |                     |          |                        |
| Starter             | yellow              | +        | ignition harness       |
| Second Starter      |                     |          |                        |
| Ignition            | red/black           | +        | ignition harness       |
| Second Ignition     |                     |          |                        |
| Third Ignition      |                     |          |                        |
| Accessory           | red/yellow          | +        | ignition harness       |
| Second Accessory    |                     |          |                        |
| Third Accessory     |                     |          |                        |
| Key Sense           |                     |          |                        |
| Data Bus            |                     |          |                        |
| Can Bus High        |                     |          |                        |
| Can Bus Low         |                     |          |                        |
| Can Bus Sw          |                     |          |                        |
| Power Lock          | brown/blue          | -        | alarm/door lock module |
| Power Unlock        | brown/green         | -        | alarm/door lock module |
| Lock Motor          |                     |          |                        |
| Unlock Motor        |                     |          |                        |
| Disarm Defeat       |                     |          |                        |
| Parking Lights (+)  | gry/red R gry/blk L |          | light switch or f-box  |
| Parking Lights (-)  |                     |          |                        |
| Hazards             |                     |          |                        |
| Turn Signal (Left)  |                     |          |                        |
| Turn Signal (Right) |                     |          |                        |

## Wiring Information (Continued)

| Item                       | Wire Color         | Polarity | Wire Location          |
|----------------------------|--------------------|----------|------------------------|
| Headlight                  | yellow (low beams) | +        | light switch or f-box  |
| AutoLights                 |                    |          |                        |
| Reverse Light              |                    |          |                        |
| Left Front Door Trigger    | brown/white        | -        | alarm/door lock module |
| Right Front Door Trigger   |                    |          |                        |
| Left Rear Door Trigger     |                    |          |                        |
| Right Rear Door Trigger    |                    |          |                        |
| Dome Supervision           |                    |          |                        |
| Trunk/Hatch Pin            | brown/red          | -        | alarm/door lock module |
| Rear Glass Pin             |                    |          |                        |
| Hood Pin                   | brown/yellow       | -        | alarm/door lock module |
| Trunk Hatch/Release        |                    |          |                        |
| Trunk Release Motor        |                    |          |                        |
| Fuel Door Release          |                    |          |                        |
| Power Sliding Door (Left)  |                    |          |                        |
| Power Sliding Door (Right) |                    |          |                        |
| Factory Alarm Arm          | arms on lock       |          |                        |
| Factory Alarm Disarm       | disarms on unlock  |          |                        |
| Disarm No Unlock           |                    |          |                        |
| Trunk Alarm Shunt          |                    |          |                        |
| Tachometer                 | black/purple       | AC       | instrument cluster     |
| Wait to Start              |                    |          |                        |
| Neutral Safety             |                    |          |                        |
| Clutch Pedal               |                    |          |                        |
| Fuel Pump                  |                    |          |                        |
| Rear Defroster             |                    |          |                        |
| Mirror Defroster           |                    |          |                        |
| Left Front Heated Seat     |                    |          |                        |
| Right Front Heated Seat    |                    |          |                        |

Wiring Information (Continued)

| Item                         | Wire Color        | Polarity | Wire Location         |
|------------------------------|-------------------|----------|-----------------------|
| Speed Sense                  |                   |          |                       |
| Brake Wire                   | black/red         | +        | brake switch          |
| Parking Brake                |                   |          |                       |
| Horn Trigger                 | brown/white       | -        | steering column       |
| Wipers                       |                   |          |                       |
| Left Front Window (Up/Down)  | blue - blue/black | B        | at window lift switch |
| Right Front Window (Up/Down) | red/wht - red/blk | B        | at window lift switch |
| Left Rear Window (Up/Down)   |                   |          |                       |
| Right Rear Window (Up/Down)  |                   |          |                       |
| Sun Roof (Open/Close)        |                   |          |                       |
| Sun Roof (Limit/Close)       |                   |          |                       |
| Memory Seat 1                |                   |          |                       |
| Memory Seat 2                |                   |          |                       |
| Memory Seat 3                |                   |          |                       |
| Radio 12V                    |                   |          |                       |
| Radio Ground                 |                   |          |                       |
| Radio Ignition               |                   |          |                       |
| Radio Illumination           |                   |          |                       |
| Factory Amp Turn-on          |                   |          |                       |
| Power Antenna                |                   |          |                       |
| Left Front Speaker (+/-)     |                   |          |                       |
| Right Front Speaker (+/-)    |                   |          |                       |
| Left Rear Speaker (+/-)      |                   |          |                       |
| Right Rear Speaker (+/-)     |                   |          |                       |
| Center Channel (+/-)         |                   |          |                       |
| Subwoofer (+/-)              |                   |          |                       |
| Aux. Audio Input Left (+/-)  |                   |          |                       |
| Aux. Audio Input Right (+/-) |                   |          |                       |
| RSE Video (+/-)              |                   |          |                       |
| RSE Audio Left (+/-)         |                   |          |                       |
| RSE Audio Right (+/-)        |                   |          |                       |
| Satellite Radio 12 Volts     |                   |          |                       |
| Satellite Radio Ground       |                   |          |                       |
| Satellite Radio Ignition     |                   |          |                       |
| Satellite Radio Antenna      |                   |          |                       |
| Satellite Audio Left (+/-)   |                   |          |                       |
| Satellite Audio Right (+/-)  |                   |          |                       |

What Fits

| Item                  | Size | Depth | Location |
|-----------------------|------|-------|----------|
| Headunit              |      |       |          |
| Left Front Speaker    |      |       |          |
| Left Front Tweeter    |      |       |          |
| Right Front Speaker   |      |       |          |
| Right Front Tweeter   |      |       |          |
| Left Rear Speaker     |      |       |          |
| Left Rear Tweeter     |      |       |          |
| Right Rear Speaker    |      |       |          |
| Right Rear Tweeter    |      |       |          |
| Center Channel        |      |       |          |
| Subwoofer             |      |       |          |
| Left Front Headrest   |      |       |          |
| Right Front Headrest  |      |       |          |
| Left Right Headrest   |      |       |          |
| Right Rear Headrest   |      |       |          |
| Satellite Radio Tuner |      |       |          |

## Additional Wiring Notes

| Item                           | Note  |
|--------------------------------|---|
| <b>Left Front Door Trigger</b> | Located under passenger front seat. Also find +12V, ignition, left and right turn signals, door trigger, hood and engine compartment triggers, and door LED wires. Some of these are also accessible behind defroster ducts in either kick panel at plug/harness from doors. Wires from door lock motor internal switches are green/wht for lock and lt. blue/wht for unlock. Found in same areas as above. Pulse (-) to operate.   |
| <b>Hood Pin</b>                | Located under passenger front seat. Also find +12V, ignition, left and right turn signals, door trigger, hood and engine compartment triggers, and door LED wires. Some of these are also accessible behind defroster ducts in either kick panel at plug/harness from doors. Wires from door lock motor internal switches are green/wht for lock and lt. blue/wht for unlock. Found in same areas as above. Pulse (-) to operate.   |
| <b>Power Lock</b>              | Located under passenger front seat. Also find +12V, ignition, left and right turn signals, door trigger, hood and engine compartment triggers, and door LED wires. Some of these are also accessible behind defroster ducts in either kick panel at plug/harness from doors. Wires from door lock motor internal switches are green/wht for lock and lt. blue/wht for unlock. Found in same areas as above. Pulse (-) to operate. Located under passenger front seat. Also find +12V, ignition, left and right turn signals, door trigger, hood and engine compartment triggers, and door LED wires. Some of these are also accessible behind defroster ducts in either kick panel at plug/harness from doors. Wires from door lock motor internal switches are green/wht for lock and lt. blue/wht for unlock. Found in same areas as above. Pulse (-) to operate. |
| <b>Tachometer</b>              | Can also be found at the coil, brown for turbo models, green for non-turbo models.  |
| <b>Trunk/Hatch Pin</b>         | Located under passenger front seat. Also find +12V, ignition, left and right turn signals, door trigger, hood and engine compartment triggers, and door LED wires. Some of these are also accessible behind defroster ducts in either kick panel at plug/harness from doors. Wires from door lock motor internal switches are green/wht for lock and lt. blue/wht for unlock. Found in same areas as above. Pulse (-) to operate.   |
| <b>Trunk/Hatch Pin</b>         | Located under passenger front seat. Also find +12V, ignition, left and right turn signals, door trigger, hood and engine compartment triggers, and door LED wires. Some of these are also accessible behind defroster ducts in either kick panel at plug/harness from doors. Wires from door lock motor internal switches are green/wht for lock and lt. blue/wht for unlock. Found in same areas as above. Pulse (-) to operate.   |
| <b>Power Lock</b>              | Located under passenger front seat. Also find +12V, ignition, left and right turn signals, door trigger, hood and engine compartment triggers, and door LED wires. Some of these are also accessible behind defroster ducts in either kick panel at plug/harness from doors. Wires from door lock motor internal switches are green/wht for lock and lt. blue/wht for unlock. Found in same areas as above. Pulse (-) to operate.   |
| <b>Power Unlock</b>            | Located under passenger front seat. Also find +12V, ignition, left and right turn signals, door trigger, hood and engine compartment triggers, and door LED wires. Some of these are also accessible behind defroster ducts in either kick panel at plug/harness from doors. Wires from door lock motor internal switches are green/wht for lock and lt. blue/wht for unlock. Found in same areas as above. Pulse (-) to operate.   |
| <b>Left Front Door Trigger</b> | Located under passenger front seat. Also find +12V, ignition, left and right turn signals, door trigger, hood and engine compartment triggers, and door LED wires. Some of these are also accessible behind defroster ducts in either kick panel at plug/harness from doors. Wires from door lock motor internal switches are green/wht for lock and lt. blue/wht for unlock. Found in same areas as above. Pulse (-) to operate.   |