2014 Land Rover Range Rover Evoque



Wiring Information

| Item | Wire Color | Polarity | Wire Location |
|------------------------|--|---------------|--|
| 12 Volts | red (60A) | + | passenger dash fuse box, green 41 pin plug, pin 22 |
| Second 12 Volts | yellow (60A) | + | passenger dash fuse box, green 41 pin plug, pin 21 |
| Starter | brown/purple (SS1), yellow/orange (SS2) | - 250 ohms | start/stop sw or pass dash fuse box, bottom, gry 28 pin plg, pins 18, 17 |
| Second Starter | blue/white | + | passenger dash fuse box, rear, green 32 pin plug, pin 18 |
| Ignition | yellow (for ignition sense only) | + | passenger dash fuse box, green 41 pin plug, pin 10 |
| Second Ignition | N/A | | |
| Third Ignition | N/A | | |
| Accessory | green/white (for accessory sense only) | + | front cigar lighter or pass dash fuse box, blue 46 pin plug, pin 30 |
| Second Accessory | N/A | | |
| Third Accessory | N/A | | |
| Key Sense | N/A | | |
| Data Bus | purple/white (LIN bus) | data | Immobilizer Antenna Mod in strng column, green 3 pin plug, pin 2 |
| Can Bus High | yellow/orange (MS CAN); green/orange (HS CAN) | data | data link connector, black 16 pin plug, pins 3, 6 |
| Can Bus Low | yellow/purple (MS CAN); gray/blue (HS CAN) | data | data link connector, black 16 pin plug, pins 11, 14 |
| Can Bus Sw | N/A | | |
| Power Lock | gray/brown | - | passenger dash fuse box, bottom, gray 28 pin plug, pin 9 |
| Power Unlock | brown/green | - | passenger dash fuse box, bottom, gray 28 pin plug, pin 8 |
| Lock Motor | black | 5 wire | Driver Door Module, black 22 pin plug, pin 10 |
| Unlock Motor | black | 5 wire | Driver Door Module, black 22 pin plug, pin 7 |
| Disarm Defeat | black | 5 wire | Passenger Door Module, gray 22 pin plug, pin 7 |
| Parking Lights (+) | grn/og (LF), brn/ye (RF); grn/og (LR), brn/ye (RR) | + | pass dash fuse box, grn 41 pin plg, pins35,33; bn 46 pin plg, pins2,38 |
| Parking Lights (-) | (LIN bus) | | |
| Hazards | yellow/green | - | hazard sw or passenger dash fuse box, bottom, gry 28 pin plg, pin 19 |
| Turn Signal (Left) | blue/green (F); gray/orange (R) | + | pass dash fuse box, grn 41 pin plg, pin 32; brown 46 pin plug, pin 9 |
| Turn Signal (Right) | yellow/purple (F); green/orange (R) | + | pass dash fuse box, grn 41 pin plg, pin 37; brown 46 pin plug, pin 10 |
| | | | |

Wiring Information (Continued)

| Trining innormation (GG: | | | | |
|----------------------------|--|-----------|---|--|
| Item | Wire Color | Polarity | Wire Location | |
| Headlight | brown/blue (L); blue/gray (R) | + | passenger dash fuse box, green 41 pin plug, pins 38, 29 | |
| AutoLights | (LIN bus) | | | |
| Reverse Light | green/white | + | passenger dash fuse box, brown 46 pin plug, pin 40 | |
| Left Front Door Trigger | green/purple | - | passenger dash fuse box, rear, brown 32 pin plug, pin 11 | |
| Right Front Door Trigger | white | - | pass dash fuse box, rear, brown 32 pin plg, pin 12 | |
| Left Rear Door Trigger | green | - | pass dash fuse box, rear, brown 32 pin plg, pin 25 | |
| Right Rear Door Trigger | yellow | - | pass dash fuse box, rear, brown 32 pin plg, pin 26 | |
| Dome Supervision | gray/purple | + | footwell lamp or passenger dash fuse box, blue 46 pin plug, pin 2 | |
| Trunk/Hatch Pin | purple/orange | - | passenger dash fuse box, rear, brown 32 pin plug, pin 23 | |
| Rear Glass Pin | N/A | | | |
| Hood Pin | black | - | passenger dash fuse box, rear, green 32 pin plug, pin 5 | |
| Trunk Hatch/Release | brown (rear handle switch) | - | passenger dash fuse box, bottom, gray 32 pin plug, pin 15 | |
| Trunk Release Motor | white/orange | 5 wire | passenger dash fuse box, brown 46 pin plug, pin 6 | |
| Fuel Door Release | black (unlock only) | 5 wire | passenger dash fuse box, brown 46 pin plug, pin 32 | |
| Power Sliding Door (Left) | N/A | | | |
| Power Sliding Door (Right) | N/A | | | |
| Factory Alarm Arm | black (driver door key lock) | - | Driver Door Module, black 22 pin plug, pin 21 | |
| Factory Alarm Disarm | black (driver door key unlock) | double - | Driver Door Module, black 24 pin plug, pin 22 | |
| Disarm No Unlock | Smart Key and push-button start | | | |
| Trunk Alarm Shunt | N/A | | | |
| Tachometer | yellow/blue, blue/orange, green/purple, or blue | ac | rear driver side of engine, black 16 pin plug, pin 9, 12, 13, or 14 | |
| Wait to Start | N/A | | | |
| Neutral Safety | N/A | | | |
| Clutch Pedal | N/A | | | |
| Fuel Pump | purple/green | - | pass dash fuse box, rear, green 32 pin plg, pin 13 | |
| Rear Defroster | brown/blue | + latched | passenger dash fuse box, brown 46 pin plug, pin 23 | |
| Mirror Defroster | (MS CAN) | | | |
| Left Front Heated Seat | (LIN bus) | | | |
| Right Front Heated Seat | (LIN bus) | | | |
| | | | | |

Wiring Information (Continued)

| Item | Wire Color | Polarity | Wire Location |
|---------------------------------|--|------------|--|
| Speed Sense | (wheel speed sensor) | | |
| Brake Wire | green/blue | + | brake sw or passenger dash fuse box, rear, brown 32 pin plug, pin 6 |
| Parking Brake | (electric parking brake) | | |
| Horn Trigger | blue/white or black | - | horn switch or passenger dash fuse box, rear, grn 32 pin plug, pin 28 |
| Wipers | white | - | passenger dash fuse box, rear, green 32 pin plug, pin 25 |
| Left Front Window (Up/Down) | (not recommended because of factory auto up/down) | | |
| Right Front Window (Up/Down) | (not recommended because of factory auto up/down) | | |
| Left Rear Window (Up/Down) | (not recommended because of factory auto up/down) | | |
| Right Rear Window (Up/Down) | (not recommended because of factory auto up/down) | | |
| Sun Roof (Open/Close) | gray/brown - green/white (funct with ign on only) | - | overhead console, gray 20 pin plug, pins 16 - 17 |
| Sun Roof (Limit/Close) | N/A | | |
| Memory Seat 1 | gray/purple | - resistor | driver kick, harness to rear |
| Memory Seat 2 | same as memory seat 1 | - resistor | |
| Memory Seat 3 | same as memory seat 1 | - resistor | |
| Radio 12V | yellow | + | radio, gray 24 pin plug, pin 1, or gray 14 pin plug, pin 1 |
| Radio Ground | black/yellow | - | radio, gray 24 pin plug, pin 13, or gray 14 pin plug, pin 8 |
| Radio Ignition | (MS CAN) | | |
| Radio Illumination | N/A | | |
| Factory Amp Turn-on | (MOST bus) | | |
| Power Antenna | yellow/orange | + | radio, gray 24 pin plug, pin 2, or gray 14 pin plug, pin 2 |
| Left Front Speaker (+/-) | green/orange - gray/orange | +,- | radio, gray 24 pin plug, pins 22 - 10 |
| Right Front Speaker (+/-) | purple/orange - yellow/orange | +,- | radio, gray 24 pin plug, pins 23 - 11 |
| Left Rear Speaker (+/-) | white/green - brown/yellow | +,- | radio, gray 24 pin plug, pins 21 - 9 |
| Right Rear Speaker (+/-) | brown/white - brown/blue | +,- | radio, gray 24 pin plug, pins 24 - 12 |
| Center Channel (+/-) | green - gray/purple | +,- | amplifier under driver seat, blue 16 pin plug, pins 7 - 15 |
| Subwoofer (+/-) | green/purple - gray (1); purple - yellow (2) | +,- | amplifier under driver seat, blue 16 pin plug, pins 3 - 11; 4 - 12 |
| Aux. Audio Input Left (+/-) | blue - white/green or green - black | +,- | radio, gry 24P plg, pins 17-6 or 14P plg, pins 5-7 |
| Aux. Audio Input Right (+/-) | blue/green - white/green or blue - black | +,- | radio, gry 24P plg, pins 18-6 or 14P plg, pins 6-7 |
| RSE Video (+/-) | (coaxial cable) | | |
| RSE Audio Left (+/-) | (MOST bus) | | |
| RSE Audio Right (+/-) | (MOST bus) | | |
| Satellite Radio 12 Volts | purple | + | SDARS Mod in RR qrtr panel, black 4 pin plg, pin 1 |
| Satellite Radio Ground | black/yellow | - | SDARS Mod in RR qrtr panel, black 4 pin plg, pin 4 |
| Satellite Radio Ignition | (MOST bus) | | |
| Satellite Radio Antenna | (coaxial cable) | | |
| Satellite Audio Left (+/-) | (MOST bus) | | |
| Satellite Audio Right (+/-) | (MOST bus) | | |

What Fits

| Item | Size | Depth | Location |
|-----------------------|-----------|-------|--|
| Headunit | irregular | | center of dash |
| Left Front Speaker | | | left front door |
| Left Front Tweeter | | | left front door |
| Right Front Speaker | | | right front door |
| Right Front Tweeter | | | right front door |
| Left Rear Speaker | | | left rear door or side panel |
| Left Rear Tweeter | | | LR door or side panel (twt); quarter panel (srrnd) |
| Right Rear Speaker | | | right rear door or side panel |
| Right Rear Tweeter | | | RR door or side panel (twt); quarter panel (srrnd) |
| Center Channel | | | top center of dash |
| Subwoofer | | | under passenger seat |
| Left Front Headrest | | | |
| Right Front Headrest | | | |
| Left Right Headrest | | | |
| Right Rear Headrest | | | |
| Satellite Radio Tuner | | | right rear quarter panel |

Additional Wiring Notes

| Item | Note |
|---------------------------|---|
| Left Front Speaker (+/-) | On models with amplifier, the low range speaker wires are white - white/brown at the amplifier under driver seat, gray 16 pin plug, pins 2 - 10. The mid range speaker wires are green/blue - gray/blue at the amplifier, blue 16 pin plug, pins 1 - 9. The high range speaker wires are green/orange - gray/orange at the amplifier, gray 16 pin plug, pins 1 - 9. |
| Right Front Speaker (+/-) | On models with amplifier, the low range speaker wires are white/purple - white/orange at the amplifier under driver seat, gray 16 pin plug, pins 4 - 12. The mid range speaker wires are purple/gray - yellow/gray at the amplifier, blue 16 pin plug, pins 2 - 10. The high range speaker wires are purple/orange - yellow/orange at the amplifier, gray 16 pin plug, pins 3 - 11. |
| Left Rear Speaker (+/-) | On models with amplifier, the low range speaker wires are white/green - brown/yellow at the amplifier under driver seat, gray 16 pin plug, pins 6 - 14. The high range speaker wires are green/brown - gray/brown at the amplifier, gray 16 pin plug, pins 5 - 13. The surround speaker wires are white/green - brown/yellow at the amplifier, blue 16 pin plug, pins 5 - 13. |
| Right Rear Speaker (+/-) | On models with amplifier, the low range speaker wires are brown/white - brown/blue at the amplifier under driver seat, gray 16 pin plug, pins 8 - 16. The high range speaker wires are blue/white - purple/white at the amplifier, gray 16 pin plug, pins 7 - 15. The surround speaker wires are brown/white - brown/blue at the amplifier, blue 16 pin plug, pins 6 - 14. |