Wiring Information

| Item | Wire Color | Polarity | Wire Location | |
|--------------------------------|--|-----------|--|--|
| 12 Volts | black/white to white (50A) | + | ignition switch, blue 4 pin plug, pin 1 | |
| Ground | (chassis ground) | | | |
| Starter | black/yellow to white/blue | + | ignition switch, blue 4 pin plug, pin 3 | |
| Ignition | black to green | + | ignition switch, blue 4 pin plug, pin 4 | |
| Accessory | black/blue to yellow | + | ignition switch, blue 4 pin plug, pin 2 | |
| Keysense | black/white to white/red | + | key switch, white 6 pin plug, pin 2 | |
| IMMO Data | yellow/blue (1); red/white (2) | data | Immobilizer Control Module under driver dash, white 26 pin plug, pins 10, 23 | |
| Security Light | white/green | - | Immobilizer Control Module under driver dash, white 26 pin plug, pin 5 | |
| Power Lock | red/white | - | BIU left of steering column, gray 20 pin plug, pin 12 | |
| Power Unlock | yellow/red (all doors); orange/black (driver door) | - | BIU left of steering column, gray 20 pin plug, pins 11 and 14 | |
| Lock Motor | It. green/black | 5 wire | BIU left of steering column, blue 16 pin plug, pin 6 | |
| Driver Unlock Motor | red | 5 wire | BIU left of steering column, blue 16 pin plug, pin 8 | |
| Passenger Unlock Motor | red/green | 5 wire | BIU left of steering column, blue 16 pin plug, pin 7 | |
| Factory Alarm Arm | factory remote only | | | |
| Factory Alarm Disarm | factory remote only | | | |
| Disarm No Unlock | green/black (factory alarm ignition sense) | interrupt | Security Control Unit behind glove box, white 18 pin plug, pin 2 | |
| Parking Lights | orange | + | parking light switch, white 4 pin plug, pin 4 | |
| Parking Lights - | black/pink (functions with ignition on only) | - | lighting switch, white 17 pin plug, pin 14 | |
| Hazards | same as turn signals | | | |
| Turn Signal (Left) | black/green | + | turn signal switch, white 17 pin plug, pin 1 | |
| Turn Signal (Right) | It. green/black | + | turn signal switch, white 17 pin plug, pin 3 | |
| Headlight | green/red (functions with ignition on only) | - | lighting switch, white 17 pin plug, pin 13 | |
| Reverse Light | brown/yellow | + | passenger kick, harness to rear | |
| Left Front Door Trigger | blue/orange | - | BIU left of steering column, gray 20 pin plug, pin 8 | |
| Right Front Door Trigger | yellow | - | BIU left of steering column, gray 20 pin plug, pin 7 | |
| Left Rear Door Trigger | same as right front door trigger | | | |
| Right Rear Door Trigger | same as right front door trigger | | | |
| Dome Light | blue | - | BIU left of steering column, blue 16 pin plug, pin 5 | |
| Trunk/Hatch Pin | same as right front door trigger | | | |
| Trunk/Hatch Release | locks/unlocks along with doors | | | |
| Tachometer | green | ac | above fuse box, white 24 pin plug, pin 17 | |
| Neutral Safety | green/black (M/T) | - | Engine Control Module below glove box, white 31 pin plg, pin 9 | |
| Clutch Pedal | green/blue or green/yellow | - | clutch switch, white 2 pin plug, pin 2 | |
| Fuel Pump | black/yellow | + | passenger kick, harness to rear | |
| Rear Defroster | blue | - latched | BIU left of steering column, blue 16 pin plug, pin 10 | |
| Mirror Defroster | yellow/green | - latched | wiper deicer switch, black 8 pin plug, pin 6 | |
| Left Front Heated Seat | It. green | 5 wire | left seat heater switch, blue 4 pin plug, pin 4 | |
| Right Front Heated Seat | black/white | 5 wire | right seat heater switch, white 4 pin plug, pin 4 | |
| Speed Sense | green/yellow | ac | above fuse box, white 24 pin plug, pin 18 | |
| Brake Wire | white/black | + | brake switch or BIU left of steering column, gray 20 pin plug, pin 9 | |
| Parking Brake | It. green | - | above fuse box, white 32 pin plug, pin 31 | |
| Horn Trigger | red to red/green | - | horn switch, white 8 pin plug, pin 3 | |
| Wipers | black/blue (L), red/blue (H), yellow/black (ignit) | + | wiper switch, white 18 pin plug, pins 7, 8, and 17 | |
| Left Front Window (Up/Down) | blue/red - blue | А | power window main switch, white 16 pin plug, pins 2 and 1 | |
| Right Front Window | black/blue - blue/yellow | А | driver kick, white 25 pin plug, pins 23 and 8 | |

DirectWire 2005 Subaru Forester - North America

| Item | Wire Color | Polarity | Wire Location | |
|-----------------------------|--|--|--|--|
| (Up/Down) | | | | |
| Left Rear Window (Up/Down) | orange to green/red - green/yellow | А | driver kick, white 25 pin plug, pins 13 and 12 | |
| Right Rear Window (Up/Down) | green/white - blue/white | А | driver kick, white 25 pin plug, pins 11 and 10 | |
| Sun Roof (Open/Close) | black/yel - white (function with ignition on only) | - | sunroof switch, black 5 pin plug, pins 4 and 1 | |
| Radio 12V | blue/red | + | radio, white 14 pin plug, pin 6 | |
| Radio Ground | black/red | - | radio, white 14 pin plug, pin 11 | |
| Radio Ignition | yellow/green | + | radio, white 14 pin plug, pin 10 | |
| Radio Illumination | violet (parking lights), orange/white (dimmer) | radio, white 14 pin plug, pins 1 and 7 | | |
| Power Antenna | blue/white | + | radio, white 14 pin plug, pin 14 | |
| Left Front Speaker (+/-) | brown/white - green | +,- | radio, white 14 pin plug, pins 3 and 9 | |
| Right Front Speaker (+/-) | red/yellow - white/black | +,- | radio, white 14 pin plug, pins 2 and 8 | |
| Left Rear Speaker (+/-) | white/red - red/black | +,- | radio, white 14 pin plug, pins 5 and 13 | |
| Right Rear Speaker (+/-) | blue/yellow - red/white | +,- | radio, white 14 pin plug, pins 4 and 12 | |
| Subwoofer (+/-) | black/yellow - white/blue | +,- | radio, black 8 pin plug, pins 4 and 8 | |

DirectWire 2005 Subaru Forester - North America

What Fits

| Item | Size | Depth | Location |
|---------------------|------------|-------|-------------------------|
| Headunit | double DIN | | center of dash |
| Left Front Speaker | 6.5 | 2.6 | left front door |
| Left Front Tweeter | | | left front door |
| Right Front Speaker | 6.5 | 2.6 | right front door |
| Right Front Tweeter | | | right front door |
| Left Rear Speaker | 4 | 4 | left rear door |
| Right Rear Speaker | 4 | 4 | right rear door |
| Subwoofer | 8 | 4 | left rear quarter panel |

DirectWire 2005 Subaru Forester - North America

Additional Wiring Notes

| Item | Note | |
|---------------------|--|--|
| Disarm No Unlock | Interrupt the factory alarm ignition sense wire to keep the factory alarm from triggering during remote start. The factory starter interrupt is red/black (-) at the Security Control Unit, white 18 pin plug, pin 15. | |