

The guide instructions to setup the remote control before programming the system (on page 34 in the 5702 are incorrect.

Follow the instructions below to pair either the Responder LC3 LCD remote or the 1-way remote to the vehicle system.

Make sure the keypad is unlocked before you start!

Be in the car with the ignition keys ready.




1. **Press and hold the *f* button for 8 seconds.** AT THREE SECONDS, you will see the Car 1/Car 2 signal - do not let go of the function button. At eight seconds:

- The LC3 remote sounds 1 long tone, and the display reads MAIN MENU.
- The 1-way remote emits 1 long tone, and the orange-colored transmit LED located at the top center of the remote, turns on.

2. **Release the *f* button**

- The LC3 display reads SETUP REMOTE.
- The 1 way remote transmit LED stays on.

3. **Enter Pair mode**


- For LC3 remote:
 - Press and release the  or  button until the display reads PAIR REMOTE.
 - Press the *f* button, the remote sounds 3 tones and the display reads PAIR.
 - Release the *f* button, the remote is now in Pair mode.
- For 1-way remote:
 - Press the  button. The remote sounds 3 tones and the transmit LED blinks 3 times, and then turns on solid.
 - Release the *f* button, the remote is now in Pair mode.


4. **Prepare vehicle system for Pairing**

Before the remote exits PAIR mode (30 seconds), place the vehicle system into Remote Control "Auto Learn" mode.

- a. Open a door (Not necessary for Remote Start LC3 systems).
- b. Turn the key to the ON position.
- c. Within 5 seconds press and RELEASE the Valet/program button on the systems Control Center, one time.
- d. Within 5 seconds, press and HOLD the Valet/program button. The LED on the Control Center flashes one time and the siren/horn (if connected) chirps to confirm the vehicle is ready for pairing.
- e. Release the Valet/Program button and proceed below.


5. **Pairing the remote**

For both Responder LC3 and 1-way remotes: Press the  button.

- If Pairing is successful:
 - The LC3 remote sounds several tones and the display reads PASSED. The remote returns to the main menu and displays PAIR REMOTE.
 - For 1-way remote the vehicle siren/horn (if connected) chirp is the only indication.
- If Pairing failed:
 - The LC3 remote sounds an error tone, and the display reads FAILED. The remote stays in Pair mode and displays PAIR. Press the  button to Pair the remote.
 - For 1-way remote the vehicle siren/horn (if connected) does not chirp.

6. **Exit programming:**

After the remote is successfully learned, to exit immediately do the following:

- For LC3 remote, press the  button.
- For 1-way remote press the *f* button.

If you wait 30 seconds, close the door, or turn the key to the OFF position, the remote and vehicle system automatically exits programming.

The correction made in this addendum affects the following installation guides: N5702 2008-08 for models Viper, Python, and Clifford. The 5702 system may come with remotes that have not been programmed to the unit.