

**1988 BMW 6Series(E24)**

<http://www.directechs.com>

***Wiring Information***

Item	Wire Color	Polarity	Wire Location
12 Volts	red	+	ignition harness
Ground	(chassis ground)		
Starter	black	+	ignition harness
Ignition	green	+	ignition harness
Accessory	violet	+	ignition harness
Power Lock	yellow/blue	-	driver kick panel
Power Unlock	green/blue	-	driver kick panel
Parking Lights	gry/wht and gry/yel		at light switch
Headlight	yellow	-	at light switch
Left Front Door Trigger	brown/violet	-	either pin or module
Trunk/Hatch Pin	brown/black	-	at trunk light
Tachometer	black	AC	at coil or diagn. plug
Brake Wire	green/red	+	at switch-hot in acc.
Horn Trigger	black/yellow	-	at steering column
Wipers	blk/pur, blk/red	-	at switch
Left Front Window (Up/Down)	blue - black	A	center console switch
Right Front Window (Up/Down)	blue - black	A	center console switch
Left Rear Window (Up/Down)	blue - black	A	center console switch
Right Rear Window (Up/Down)	blue - black	A	center console switch

**1988 BMW 6Series(E24)**



<http://www.directechs.com>

***What Fits***

Item	Size	Depth	Location
------	------	-------	----------

**1988 BMW 6Series(E24)**



<http://www.directechs.com>

***Additional Wiring Notes***

Item	Note
Power Lock	Also found at the door lock module located to left of glove box under plastic cover on right side of upper console. Do not operate locks by remote with doors open or deadbolted to prevent possible damage to servos.
Power Unlock	Also found at the door lock module located to left of glove box under plastic cover on right side of upper console. Do not operate locks by remote with doors open or deadbolted to prevent possible damage to servos.