

## 2007 Jeep Commander




### Wiring Information

Item	Wire Color	Polarity	Wire Location
<b>12 Volts</b>	lt. blue/red (20A)	+	ignition harness
<b>Second 12 Volts</b>			
<b>Starter</b>	pink/orange	+	ignition harness
<b>Second Starter</b>	purple/brown	-	ignition harness
<b>Ignition</b>	pink/lt. green	+	ignition harness
<b>Second Ignition</b>	N/A		
<b>Third Ignition</b>	N/A		
<b>Accessory</b>	same as second starter wire		
<b>Second Accessory</b>	N/A		
<b>Third Accessory</b>			
<b>Key Sense</b>	same as second starter wire		
<b>Data Bus</b>			
<b>Can Bus High</b>	white/orange (CAN B bus)	data	Sentry Key Remote Entry Module, 8 pin plug, pin 6
<b>Can Bus Low</b>	white (CAN B bus)	data	Sentry Key Remote Entry Module, 8 pin plug, pin 7
<b>Can Bus Sw</b>			
<b>Power Lock</b>	purple/dk. green	-	driver door module in door
<b>Power Unlock</b>	same as power lock wire		
<b>Lock Motor</b>	lt. green/lt. blue	5wi	plug above fuses, pin 36
<b>Unlock Motor</b>	lt. green/dk. green	5wi	plug above fuses, pin 35
<b>Disarm Defeat</b>	lt. green/tan	5wi	plug above fuses, pin 34
<b>Parking Lights (+)</b>	do not use, relay rests at gnd		
<b>Parking Lights (-)</b>	(CAN data bus) (use hazards)		
<b>Hazards</b>	white/dk. blue	-	SCM, 16 pin plug, pin 16
<b>Turn Signal (Left)</b>	use hazards wire		
<b>Turn Signal (Right)</b>	use hazards wire		

*Wiring Information (Continued)*

Item	Wire Color	Polarity	Wire Location
<b>Headlight</b>	(CAN data bus)		
<b>AutoLights</b>			
<b>Reverse Light</b>	white/lt. green	+	driver kick, harness to rear or IPM , conn. 2, pin 2
<b>Left Front Door Trigger</b>	purple	-	driver door module in door
<b>Right Front Door Trigger</b>	purple/white	-	passenger door module in door
<b>Left Rear Door Trigger</b>	purple/gray	-	driver kick or cluster, conn. 3, pin 4
<b>Right Rear Door Trigger</b>	purple/yellow	-	driver kick or cluster, conn. 3, pin 5
<b>Dome Supervision</b>	yellow/orange	-	any light or cluster, conn 2, pin 12
<b>Trunk/Hatch Pin</b>	pur/org and pur/brn (glass)	-	DKP or cluster, conn. 3, pins 3, 2
<b>Rear Glass Pin</b>			
<b>Hood Pin</b>	purple/lt. blue	-	pin switch or IPM, conn. 2, pin 5
<b>Trunk Hatch/Release</b>	orange/purple	-	DKP or cluster, conn. 3, pin 8
<b>Trunk Release Motor</b>			
<b>Fuel Door Release</b>			
<b>Power Sliding Door (Left)</b>	N/A		
<b>Power Sliding Door (Right)</b>			
<b>Factory Alarm Arm</b>	arms on lock with door open		
<b>Factory Alarm Disarm</b>	factory remote only		
<b>Disarm No Unlock</b>	with ign, keysense, Sentry Key		
<b>Trunk Alarm Shunt</b>			
<b>Tachometer</b>	NOT red/tan or dk. grn/lt. grn	ac	any ignition coil or fuel injector
<b>Wait to Start</b>	N/A		
<b>Neutral Safety</b>			
<b>Clutch Pedal</b>			
<b>Fuel Pump</b>			
<b>Rear Defroster</b>			
<b>Mirror Defroster</b>			
<b>Left Front Heated Seat</b>			
<b>Right Front Heated Seat</b>			

*Wiring Information (Continued)*

Item	Wire Color	Polarity	Wire Location
<b>Speed Sense</b>	dk. green/brown	ac	PCM, black/green plug, pin 32
<b>Brake Wire</b>	white/tan	+	brake pedal switch
<b>Parking Brake</b>	dk. green/white	-	switch or cluster, conn. 1, pin 16
<b>Horn Trigger</b>	dk. green/orange	+	horn or IPM, conn. 2, pin 35
<b>Wipers</b>	brown/wht (L), brown/org (H)	+	windshield wiper motor
<b>Left Front Window (Up/Down)</b>	orange/lt blue - orange/dk blu	A	LF window motor in door
<b>Right Front Window (Up/Down)</b>	dk. blue/org - lt. green/org	A	RF window motor in door
<b>Left Rear Window (Up/Down)</b>	orange/white - orange/gray	A	driver kick, door harness
<b>Right Rear Window (Up/Down)</b>	orange/lt blue - orange/dk blu	A	driver kick, door harness
<b>Sun Roof (Open/Close)</b>	motor part of module		
<b>Sun Roof (Limit/Close)</b>	N/A		
<b>Memory Seat 1</b>	lt. green/orange	-	driver door module in door
<b>Memory Seat 2</b>	same as memory seat 1 wire		
<b>Memory Seat 3</b>	N/A		
<b>Radio 12V</b>	red/orange	+	radio harness
<b>Radio Ground</b>	black	-	radio harness
<b>Radio Ignition</b>	(CAN data bus)		
<b>Radio Illumination</b>	N/A		
<b>Factory Amp Turn-on</b>	N/A		
<b>Power Antenna</b>	N/A		
<b>Left Front Speaker (+/-)</b>	dk. green - dk. green/brown	+,-	radio harness
<b>Right Front Speaker (+/-)</b>	gray - gray/brown	+,-	radio harness
<b>Left Rear Speaker (+/-)</b>	dk green/dk blu - dk green/pur	+,-	radio harness
<b>Right Rear Speaker (+/-)</b>	gray/dk. blue - gray/tan	+,-	radio harness
<b>Center Channel (+/-)</b>			
<b>Subwoofer (+/-)</b>			
<b>Aux. Audio Input Left (+/-)</b>			
<b>Aux. Audio Input Right (+/-)</b>			
<b>RSE Video (+/-)</b>			
<b>RSE Audio Left (+/-)</b>			
<b>RSE Audio Right (+/-)</b>			
<b>Satellite Radio 12 Volts</b>			
<b>Satellite Radio Ground</b>			
<b>Satellite Radio Ignition</b>			
<b>Satellite Radio Antenna</b>			
<b>Satellite Audio Left (+/-)</b>			
<b>Satellite Audio Right (+/-)</b>			

*What Fits*

---

Item	Size	Depth	Location
<b>Headunit</b>			
<b>Left Front Speaker</b>			
<b>Left Front Tweeter</b>			
<b>Right Front Speaker</b>			
<b>Right Front Tweeter</b>			
<b>Left Rear Speaker</b>			
<b>Left Rear Tweeter</b>			
<b>Right Rear Speaker</b>			
<b>Right Rear Tweeter</b>			
<b>Center Channel</b>			
<b>Subwoofer</b>			
<b>Left Front Headrest</b>			
<b>Right Front Headrest</b>			
<b>Left Right Headrest</b>			
<b>Right Rear Headrest</b>			
<b>Satellite Radio Tuner</b>			

*Additional Wiring Notes*

Item	Note
<b>Hazards</b>	The SCM (Steering Column Module) is in the steering column.
<b>Reverse Light</b>	The IPM (Integrated Power Module) is on the driver fender, behind the battery.
<b>Trunk Hatch/Release</b>	Meter this wire while opening the rear glass from the switch on the rear hatch. The hatch release motor wire is orange/gray (5wi) at the plug above the fuses, pin 25. On vehicles with the power liftgate, the liftgate open/close wire is purple/tan (-) at the switch or the PLM, 22 pin plug, pin 14. The PLM (Power Liftgate Module) is in the driver side rear quarter panel.
<b>Speed Sense</b>	The PCM (Powertrain Control Module) is under the hood on the passenger side fender.
<b>Horn Trigger</b>	The IPM (Integrated Power Module) is on the driver fender, behind the battery.
<b>Left Front Speaker (+/-)</b>	If equipped, the amplifier is in the driver side rear quarter panel.
<b>Hood Pin</b>	The IPM (Integrated Power Module) is on the driver fender, behind the battery.
<b>Memory Seat 1</b>	The memory seats are negative trigger thru resistors. The resistor values are not known at this time. Cut the wire and meter it while pressing the memory seat buttons.
<b>Accessory</b>	The accessory wire is negative trigger thru a 560 ohm resistor. MUST use a relay. Refer to DirectFax document 1084 for wiring information.
<b>Power Lock</b>	Lock is negative trigger thru a 330 ohm resistor. Unlock is negative trigger thru a 100 ohm resistor. MUST use relays. Can also use the trigger wires for the door lock relays found at the instrument cluster, conn. 2. Lock is lt. green/dk. green in pin 5. Driver door unlock is tan/lt. green in pin 6. Passenger door unlock is purple/lt. green in pin 7.
<b>Key Sense</b>	The key sense wire is negative trigger thru an 8500 ohm resistor. MUST use a relay.
<b>Second Starter</b>	The second starter wire is negative trigger thru a 150 ohm resistor. MUST use a relay. Refer to DirectFax document 1084 for wiring information.
<b>Left Front Door Trigger</b>	Use all four wires and diode isolate each wire from each other and the control module. Refer to Tech Doc 1076 for wiring information.