



## Wiring Information

| Item                       | Wire Color           | Polarity | Wire Location  |
|----------------------------|----------------------|----------|--|
| 12 Volts                   | red/blue             | +        | ignition harness   |
| Second 12 Volts            | red/green            | +        | ignition harness   |
| Ground                     | (chassis ground)     |          |  |
| Starter                    | black/blue           | +        | ignition harness   |
| Ignition                   | green                | +        | ignition harness   |
| Second Ignition            | violet               | +        | ignition harness   |
| Power Lock                 | blue/red             | -        | General Module behind<br>glove box, middle 54 pin<br>plug, pin 22  |
| Power Unlock               | white/black          | double - | General Module behind<br>glove box, middle 54 pin<br>plug, pin 20  |
| Lock Motor                 | white (any one of 5) | 5 wire   | General Module behind<br>glove box, middle 54 pin<br>plug  |
| Driver Unlock Motor        | blue                 | 5 wire   | General Module behind<br>glove box, middle 54 pin<br>plug, pin 35  |
| Passenger Unlock<br>Motor  | (chassis ground)     |          |  |
| Factory Alarm Arm          | arms with lock       |          |  |
| Factory Alarm Disarm       | disarms with unlock  |          |  |
| Parking Lights -           | see Tech Doc 1055    |          |  |
| Hazards                    | brown/blue           | -        | hazard switch or Light<br>Switch Module, 54 pin<br>plug, pin 24  |
| Left Front Door<br>Trigger | red/blue             | +        | General Module behind<br>glove box, middle 54 pin<br>plug, pin 18  |
| Dome Light                 | comes on with unlock |          |  |
| Trunk/Hatch Pin            | white/brown          | -        | driver kick panel  |
| Hood Pin                   | violet/green         | -        | General Module behind<br>glove box, left 26 pin plug,<br>pin 7   |
| Trunk/Hatch Release        | gray/green           | +        | General Module behind<br>glove box, middle 54 pin<br>plug, pin 17  |
| Tachometer                 | black                | ac       | diagnostic plug in<br>passenger rear of engine<br>compartment or data link<br>connector under driver<br>dash |
| Speed Sense                | yellow/green         | ac       | instrument cluster, black plug   |





| Item                        | Wire Color  | Polarity | Wire Location   |
|-----------------------------|---|----------|---|
| Brake Wire                  | brown/gray or brown/white (functions with ignition on only) | +        | brake pedal switch  |
| Horn Trigger                | violet/blue   | +        | horn relay above General<br>Module, green relay to<br>right of orange relay |
| Left Front Window (Up/Down) | use power lock/unlock                                       |          |   |
| Sun Roof<br>(Open/Close)    | use power lock/unlock                                       |          |   |
| Radio 12V                   | red/green   | +        | radio   |
| Radio Ground                | brown   | -        | radio   |
| Radio Ignition              | violet/white  | +        | radio   |
| Radio Illumination          | gray/red (dimmer)   | +        | radio   |
| Factory Amp Turn-on         | same as power antenna                                       |          |   |
| Power Antenna               | white   | +        | radio   |
| Left Front Speaker (+/-)    | blue/white - blue/brown                                     | +,-      | radio or amplifier in passenger side of trunk                               |
| Right Front Speaker (+/-)   | blue/red - blue/brown                                       | +,-      | radio or amplifier in passenger side of trunk                               |
| Left Rear Speaker (+/-)     | yellow - brown  | +,-      | radio or amplifier in passenger side of trunk                               |
| Right Rear Speaker (+/-)    | blue - brown  | +,-      | radio or amplifier in passenger side of trunk                               |





## What Fits

| Item Size Depth Location |
|--------------------------|
|--------------------------|





## Additional Wiring Notes

| Item                         | Note  |
|------------------------------|---|
| Left Front<br>Speaker (+/-)  | On models with amplifier, the tweeter wires are yellow/red - yellow/brown and the mid-range wires are white - blue/white.   |
| Left Rear<br>Speaker (+/-)   | On models with amplifier, the tweeter wires are yellow/black - yellow/brown.  |
| Parking Lights -             | Need to remove the light switch module from the dash and pop off the front cover. A ribbon cable which connects the switch to the module will be exposed. With the switch facing towards you, you need to interrupt the fourth wire from the left with a relay. When interrupted the parking lights will come on. |
| Right Front<br>Speaker (+/-) | On models with amplifier, the tweeter wires are blue/black - blue/brown and the mid-range wires are green - blue/green.   |
| Right Rear<br>Speaker (+/-)  | On models with amplifier, the tweeter wires are yellow - blue/yellow.   |