



### Wiring Information

Item	Wire Color	Polarity	Wire Location
12 Volts	red	+	ignition harness
Ground	(chassis ground)		
Starter	violet	+	ignition harness
Ignition	pink/blue	+	ignition harness
Second Ignition	pink/green/black	+	ignition harness
Third Ignition	pink/yellow	+	ignition harness
Accessory	pink/green	+	ignition harness
Power Lock	blue/gray	-	anti-theft control module
Power Unlock	blue	-	anti-theft control module
Factory Alarm Arm	arms with lock		
Factory Alarm Disarm	disarms with unlock		
Disarm No Unlock	see notes		
Parking Lights	gray and gray/white	+	headlight switch
Headlight	yellow	+	headlight switch
Left Front Door Trigger	white/pink (front), brown/pink (rear)	-	anti-theft control module
Dome Light	comes on with unlock		
Trunk/Hatch Pin	brown/green	-	anti-theft control module
Hood Pin	brown/red	-	anti-theft control module
Trunk/Hatch Release	green	-	release switch or PSE module
Tachometer	black/striped	ac	any one of ignition coils
Speed Sense	black/yellow/red to green/black	ac	radio harness
Brake Wire	black/red/white	+	brake pedal switch
Horn Trigger	black/yellow/pink	+	horn
Wipers	brown/yellow and black/yellow	+	wiper motor
Left Front Window (Up/Down)	use power lock/unlock		
Sun Roof (Open/Close)	use power lock/unlock		

1998 MercedesBenz SClass - Requested by: amfire.de



<http://www.directechs.com>

***What Fits***

Item	Size	Depth	Location
------	------	-------	----------



<http://www.directechs.com>

### ***Additional Wiring Notes***

<b>Item</b>	<b>Note</b>
Disarm No Unlock	To disarm the factory alarm without unlocking the doors, cut the blue unlock wire at the anti-theft control module and diode isolate, then connect the disarm output from the remote start on the control module side of the diode.
Left Front Door Trigger	Can also use brown/gray (front) and brown/red (rear) at the PSE (pneumatic system equipment) control module under the rear seat on the passenger side. The anti-theft control module is located above battery and behind liner on right side of trunk.
Hood Pin	The anti-theft control module is located above battery and behind liner on right side of trunk.
Power Lock	The anti-theft control module is located above battery and behind liner on right side of trunk. Can also use blue/yellow for lock and blue/black for unlock in the driver kick panel.
Power Unlock	Can also use blue/yellow for lock and blue/black for unlock in the driver kick panel. The anti-theft control module is located above battery and behind liner on right side of trunk.
Trunk/Hatch Pin	Can also use brown/yellow at the PSE control module. The anti-theft control module is located above battery and behind liner on right side of trunk.